




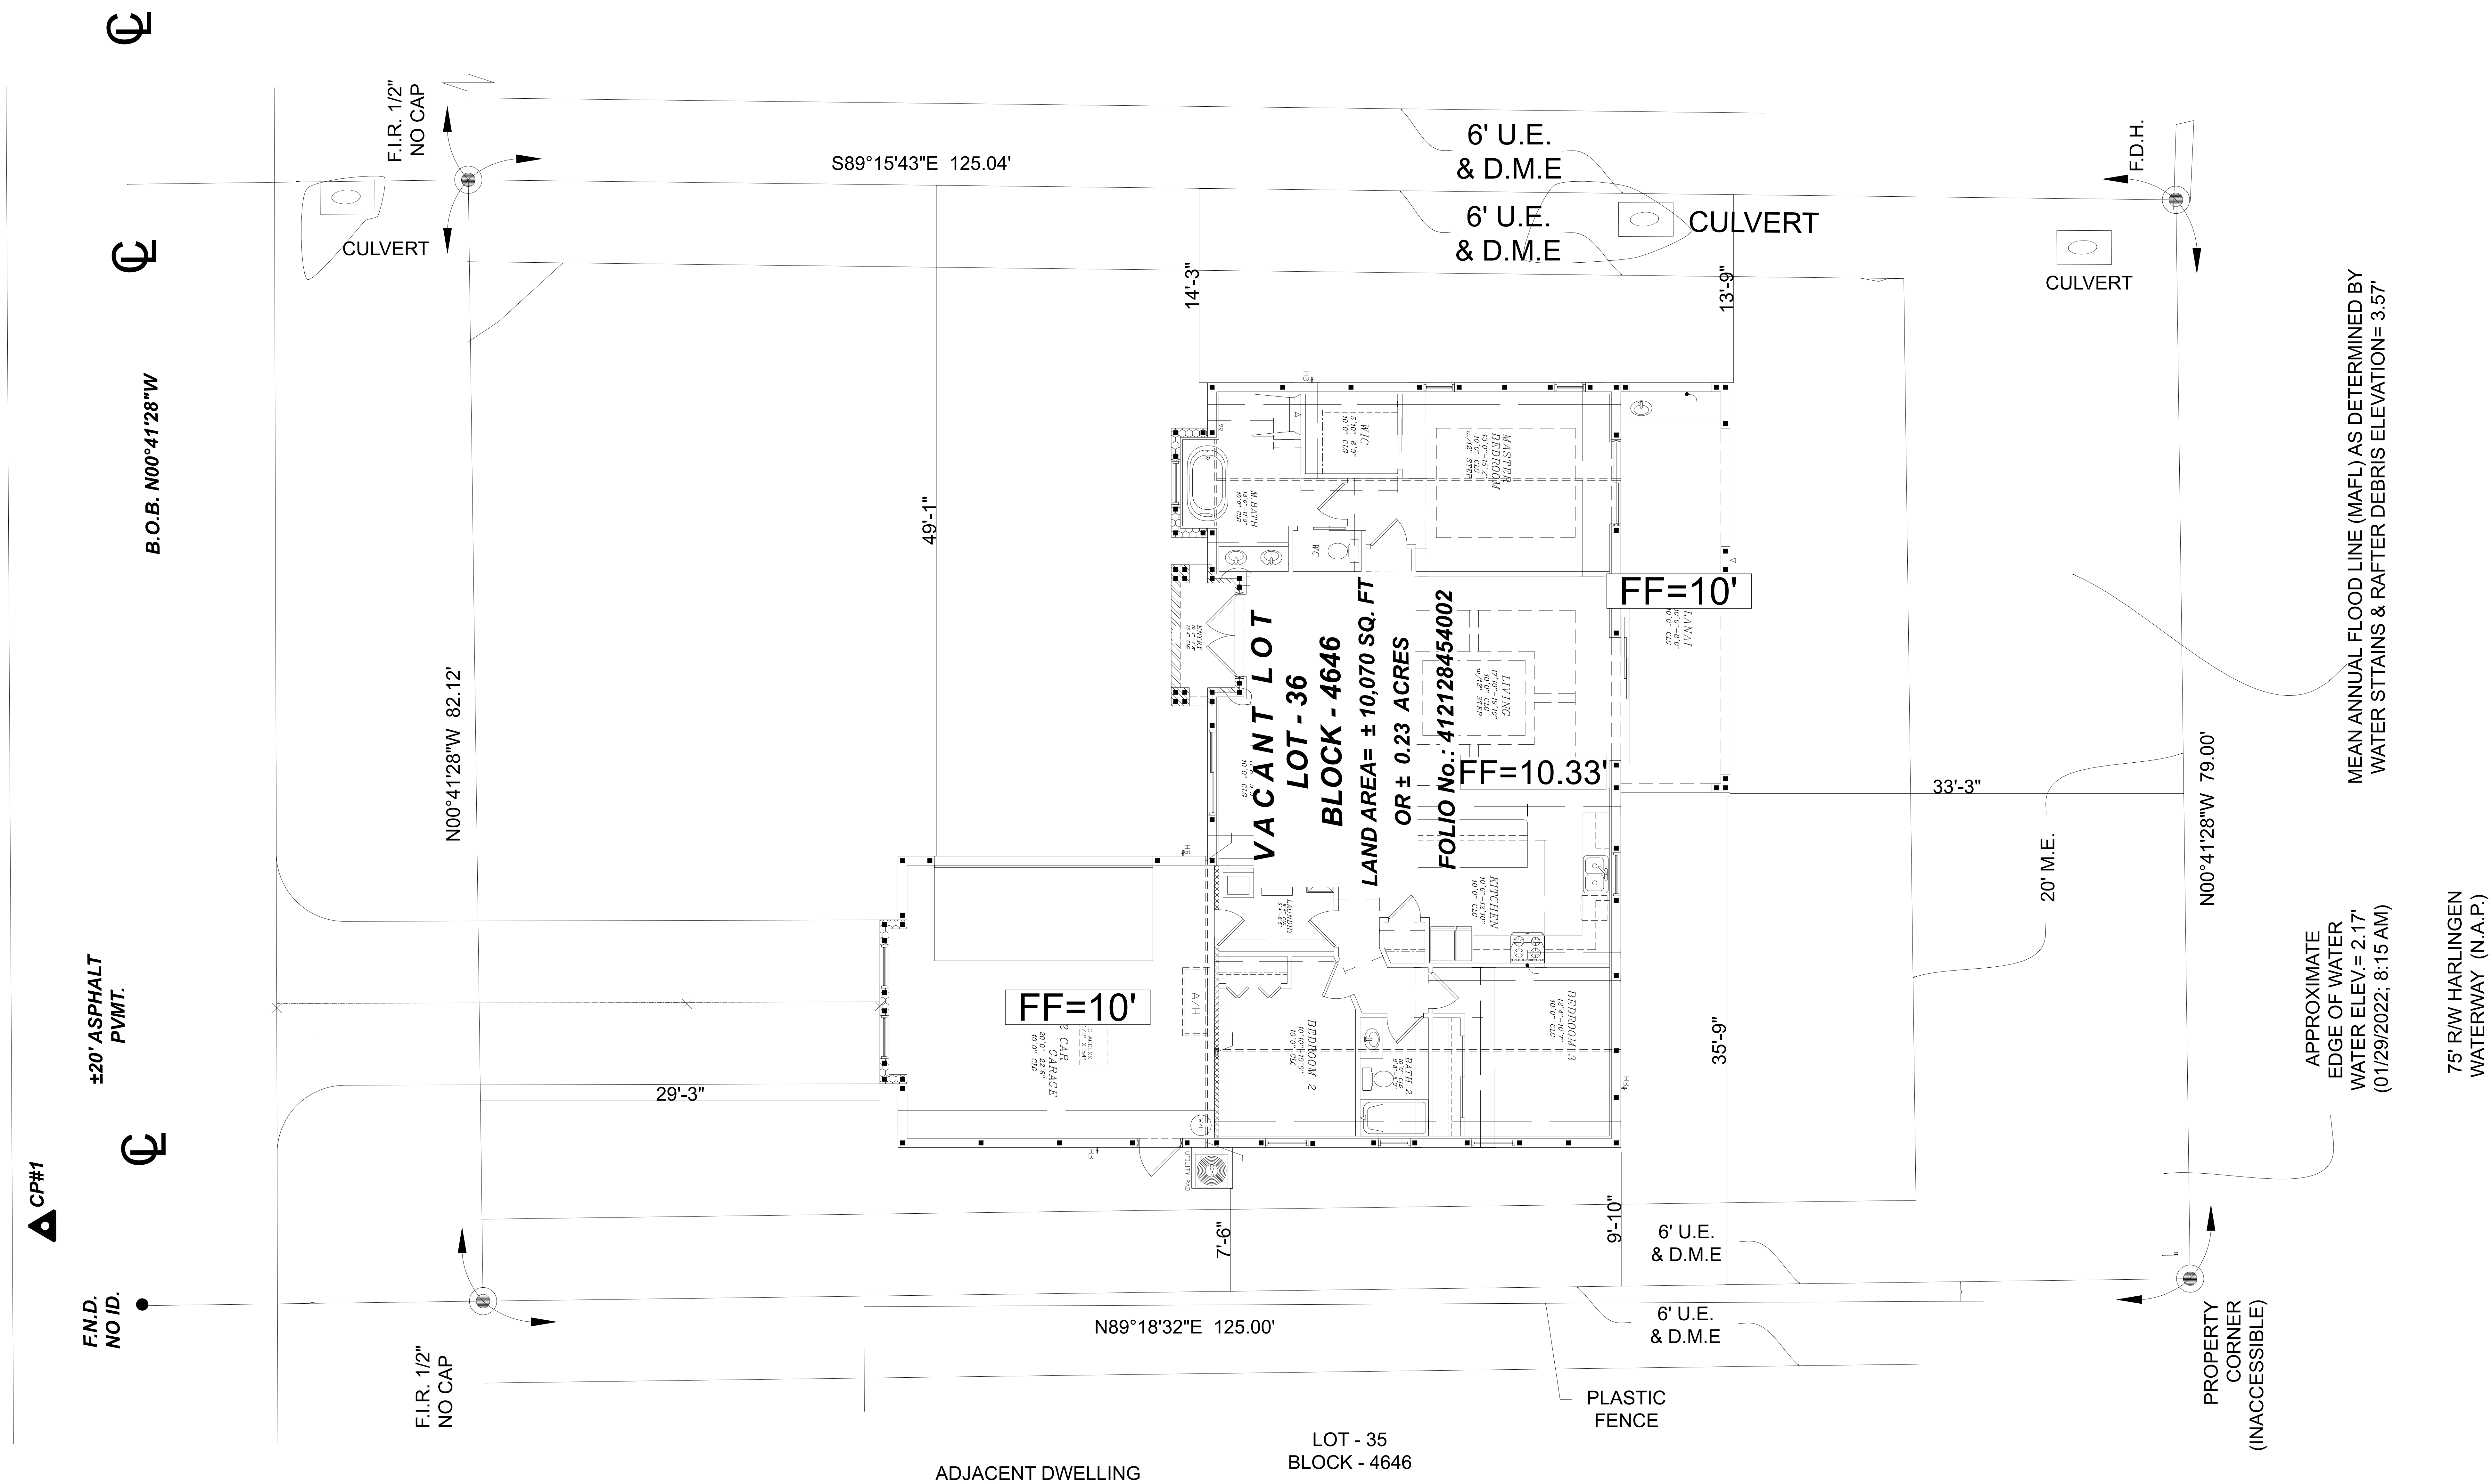


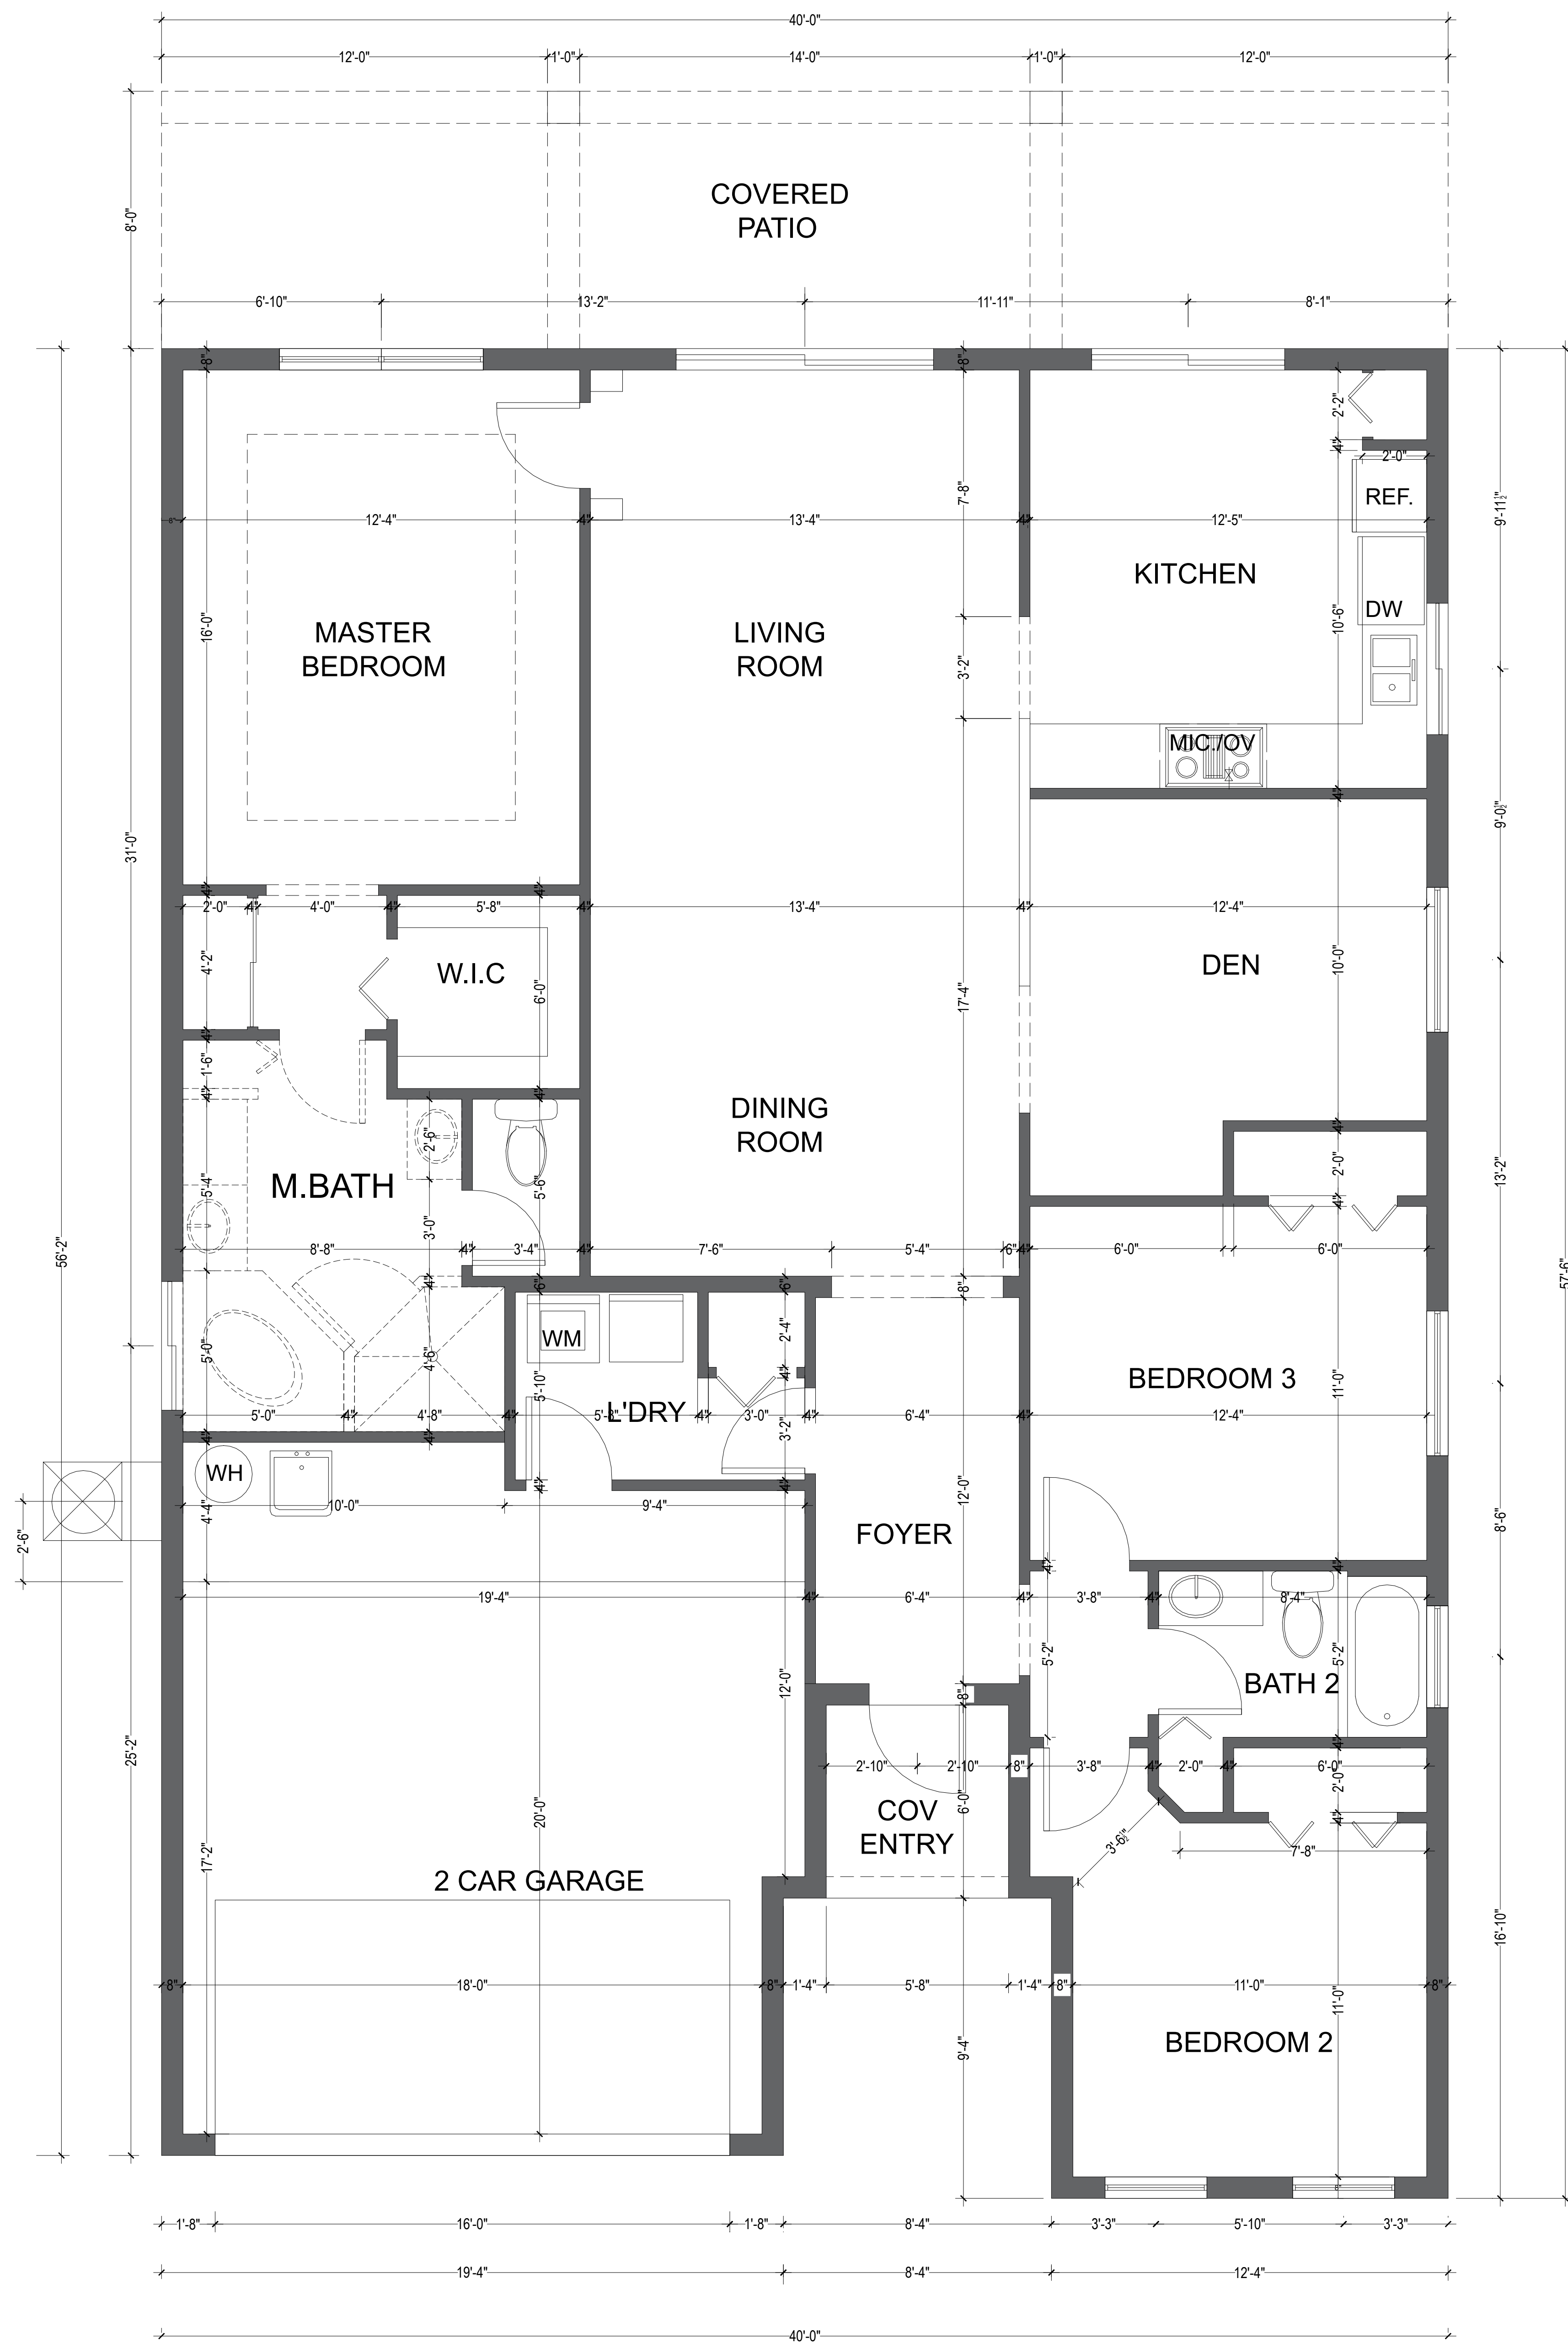


1 0.0 - DEMOLITION PLAN
3/16" = 1'-0"

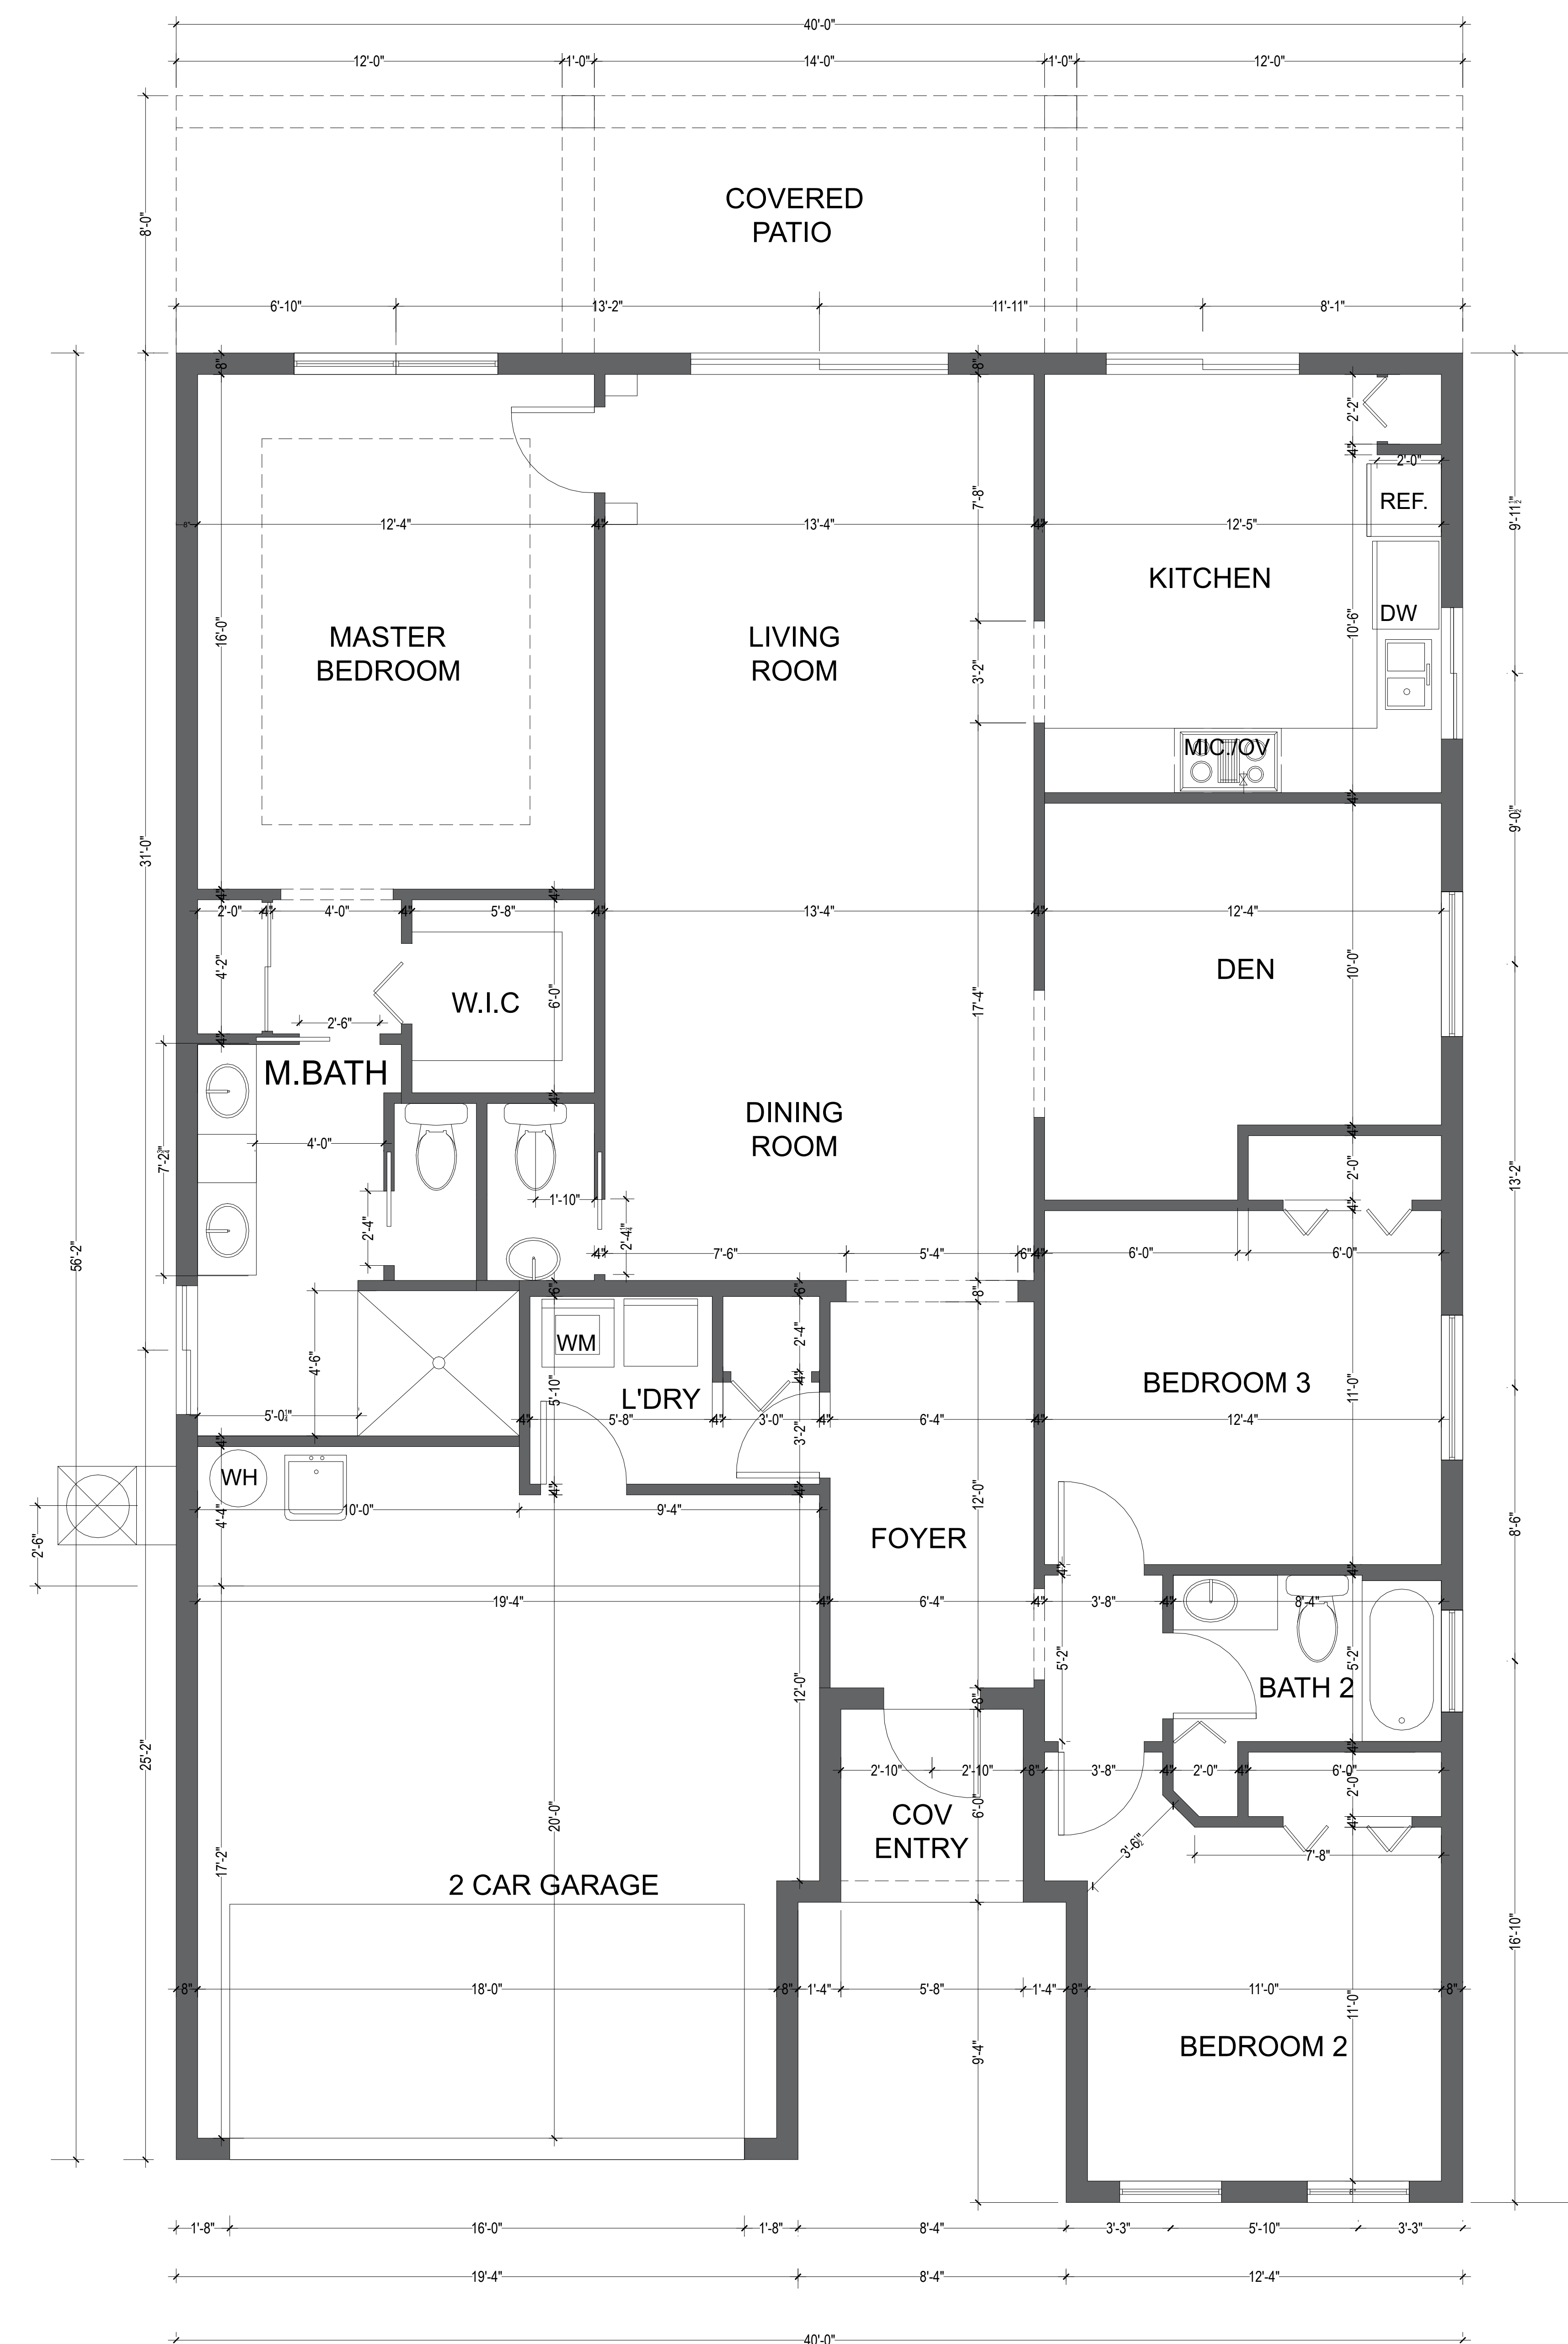


1 0.0 - PROPOSED FLOOR PLAN
3/16" = 1'-0"

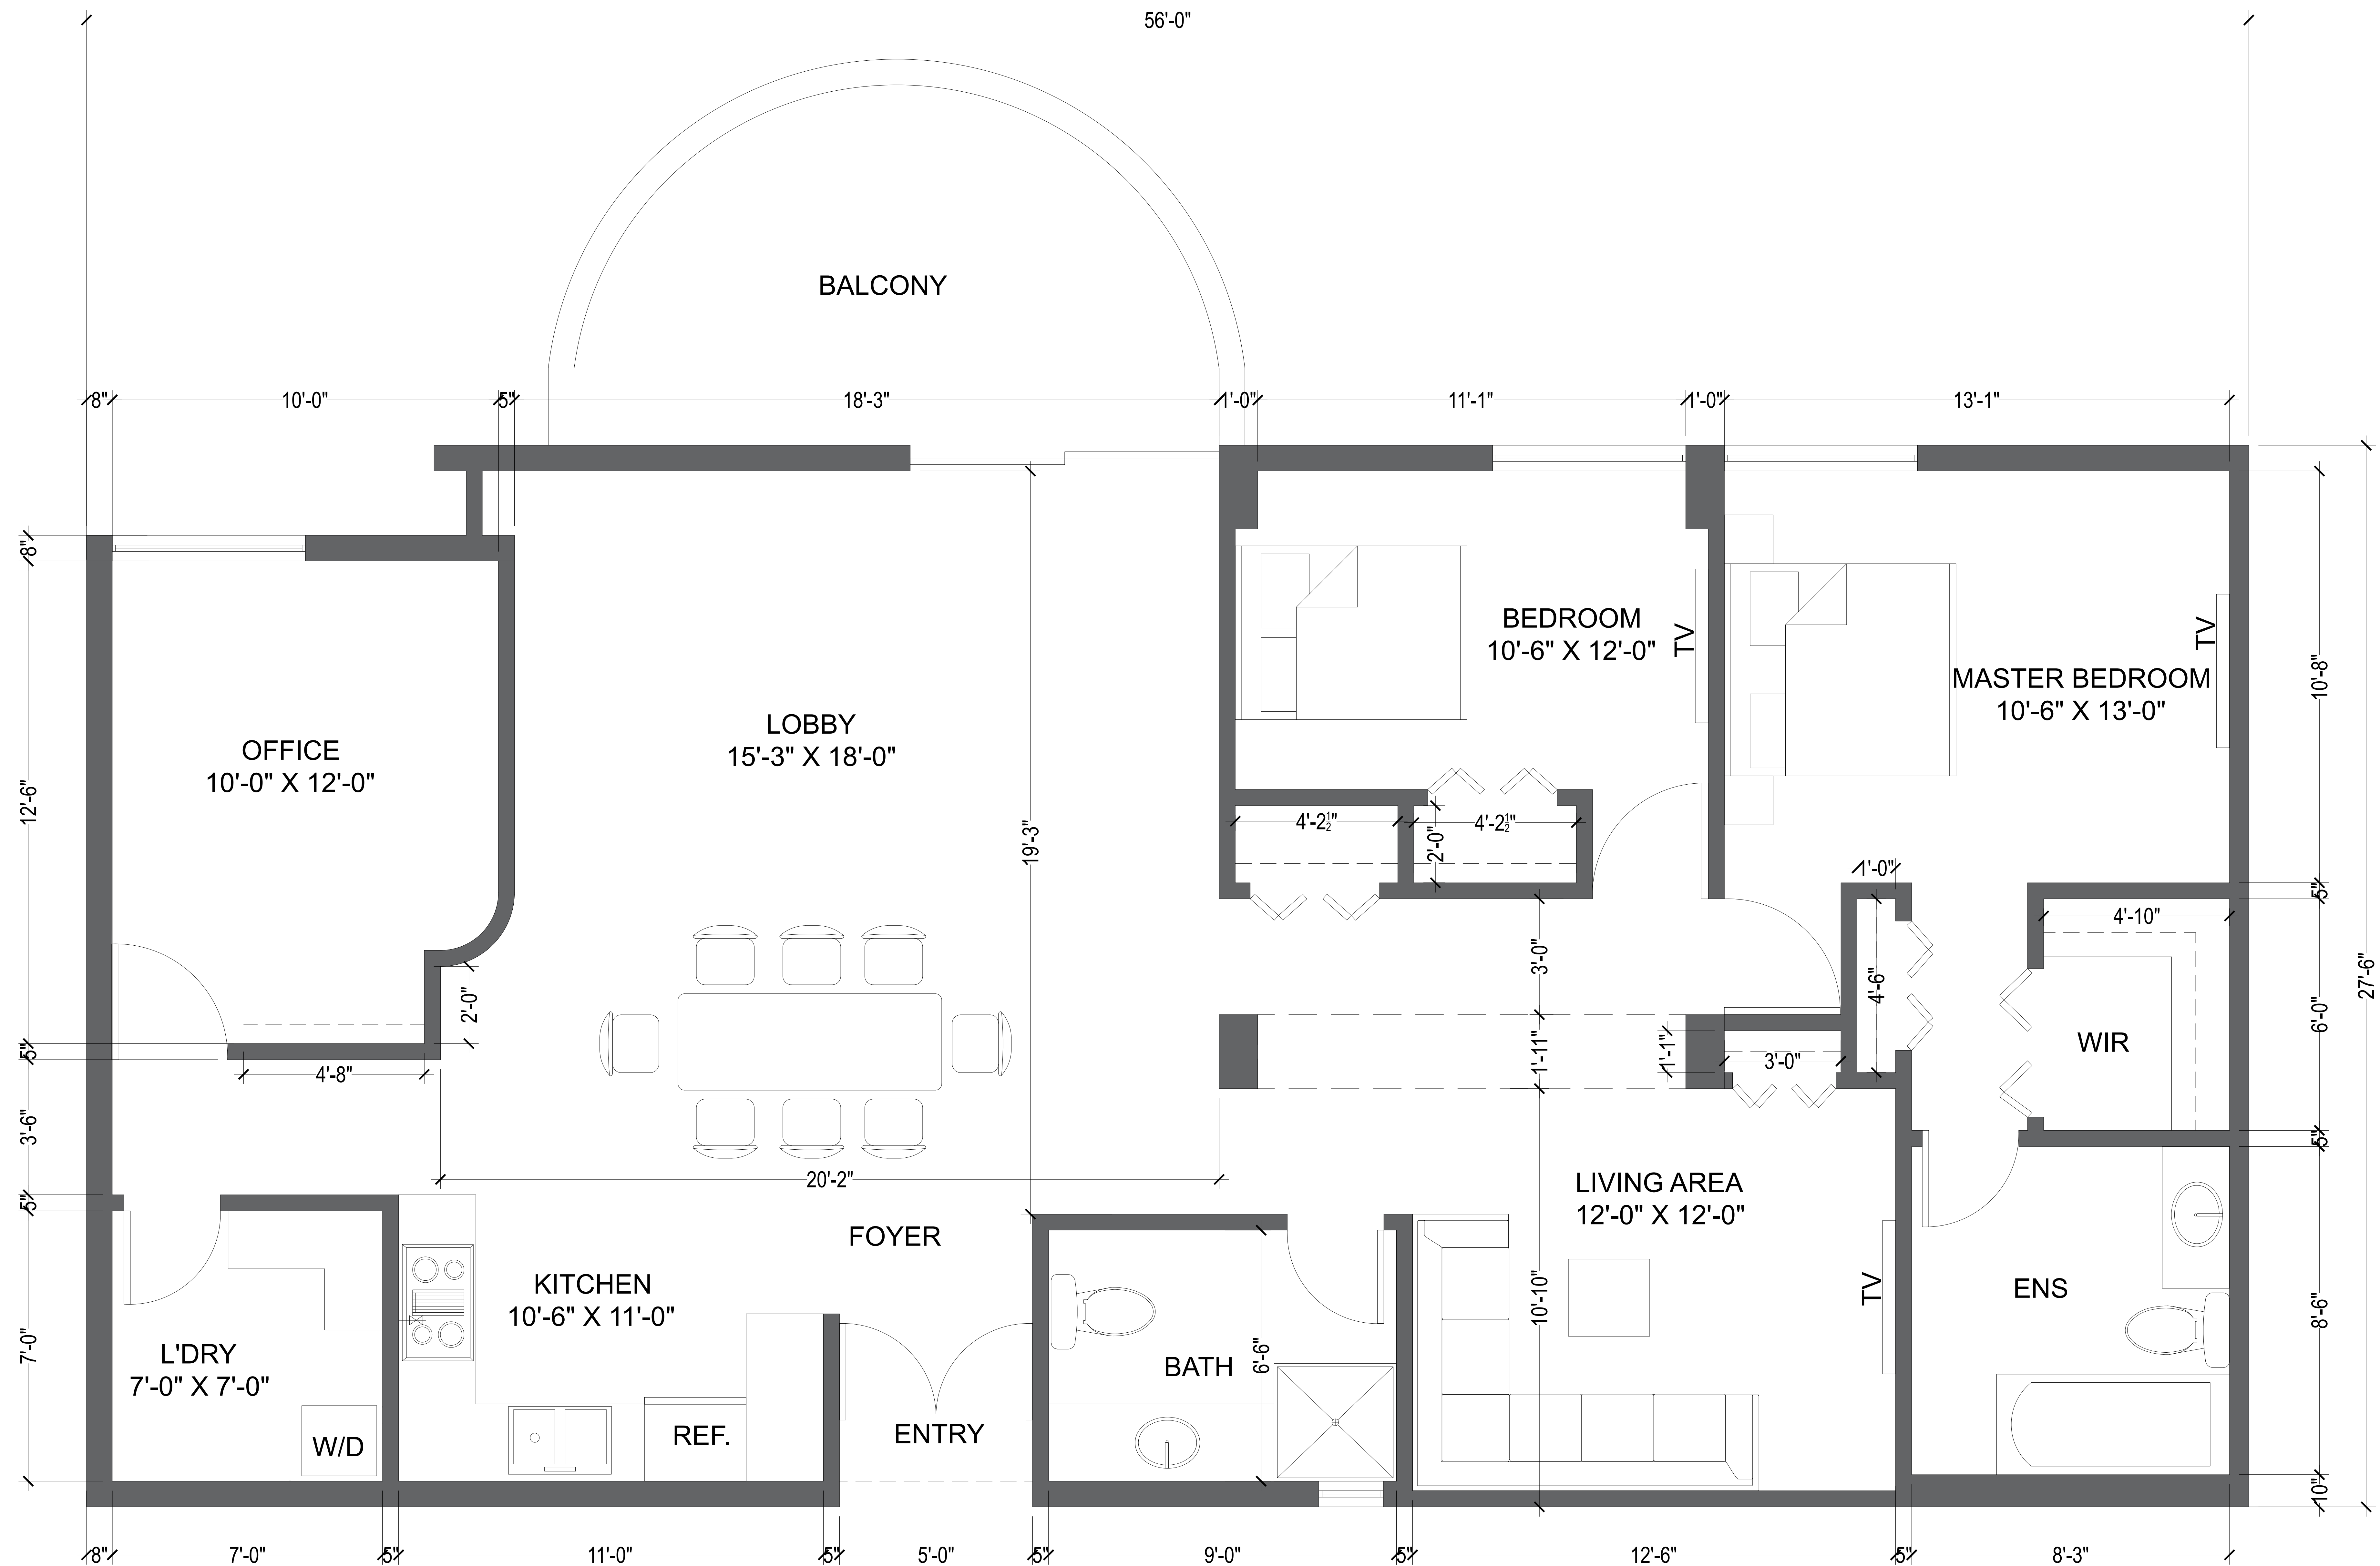


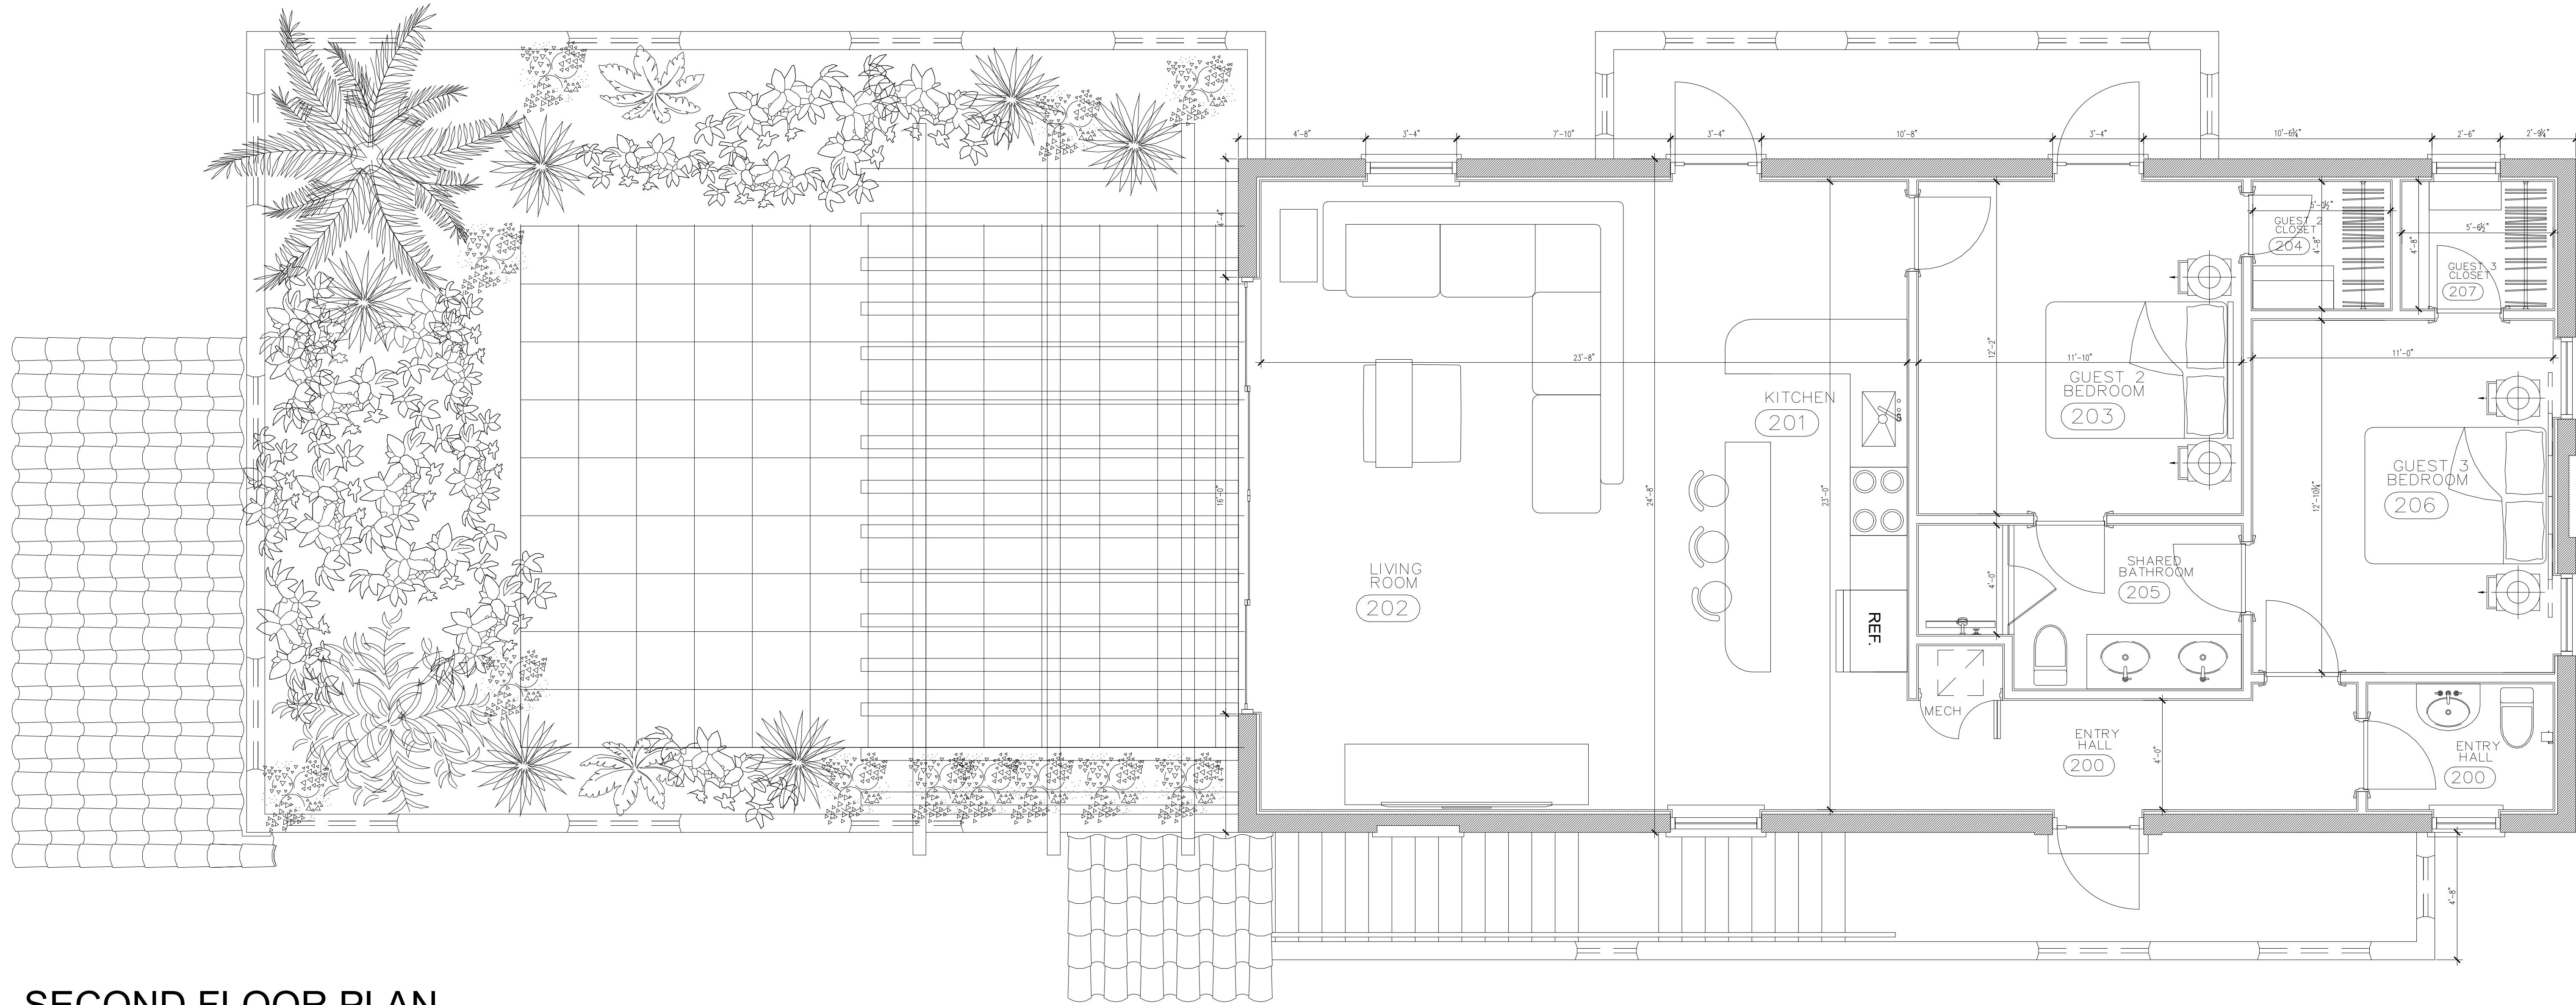


2 SECOND FLOOR PLAN
1/4" = 1'-0"

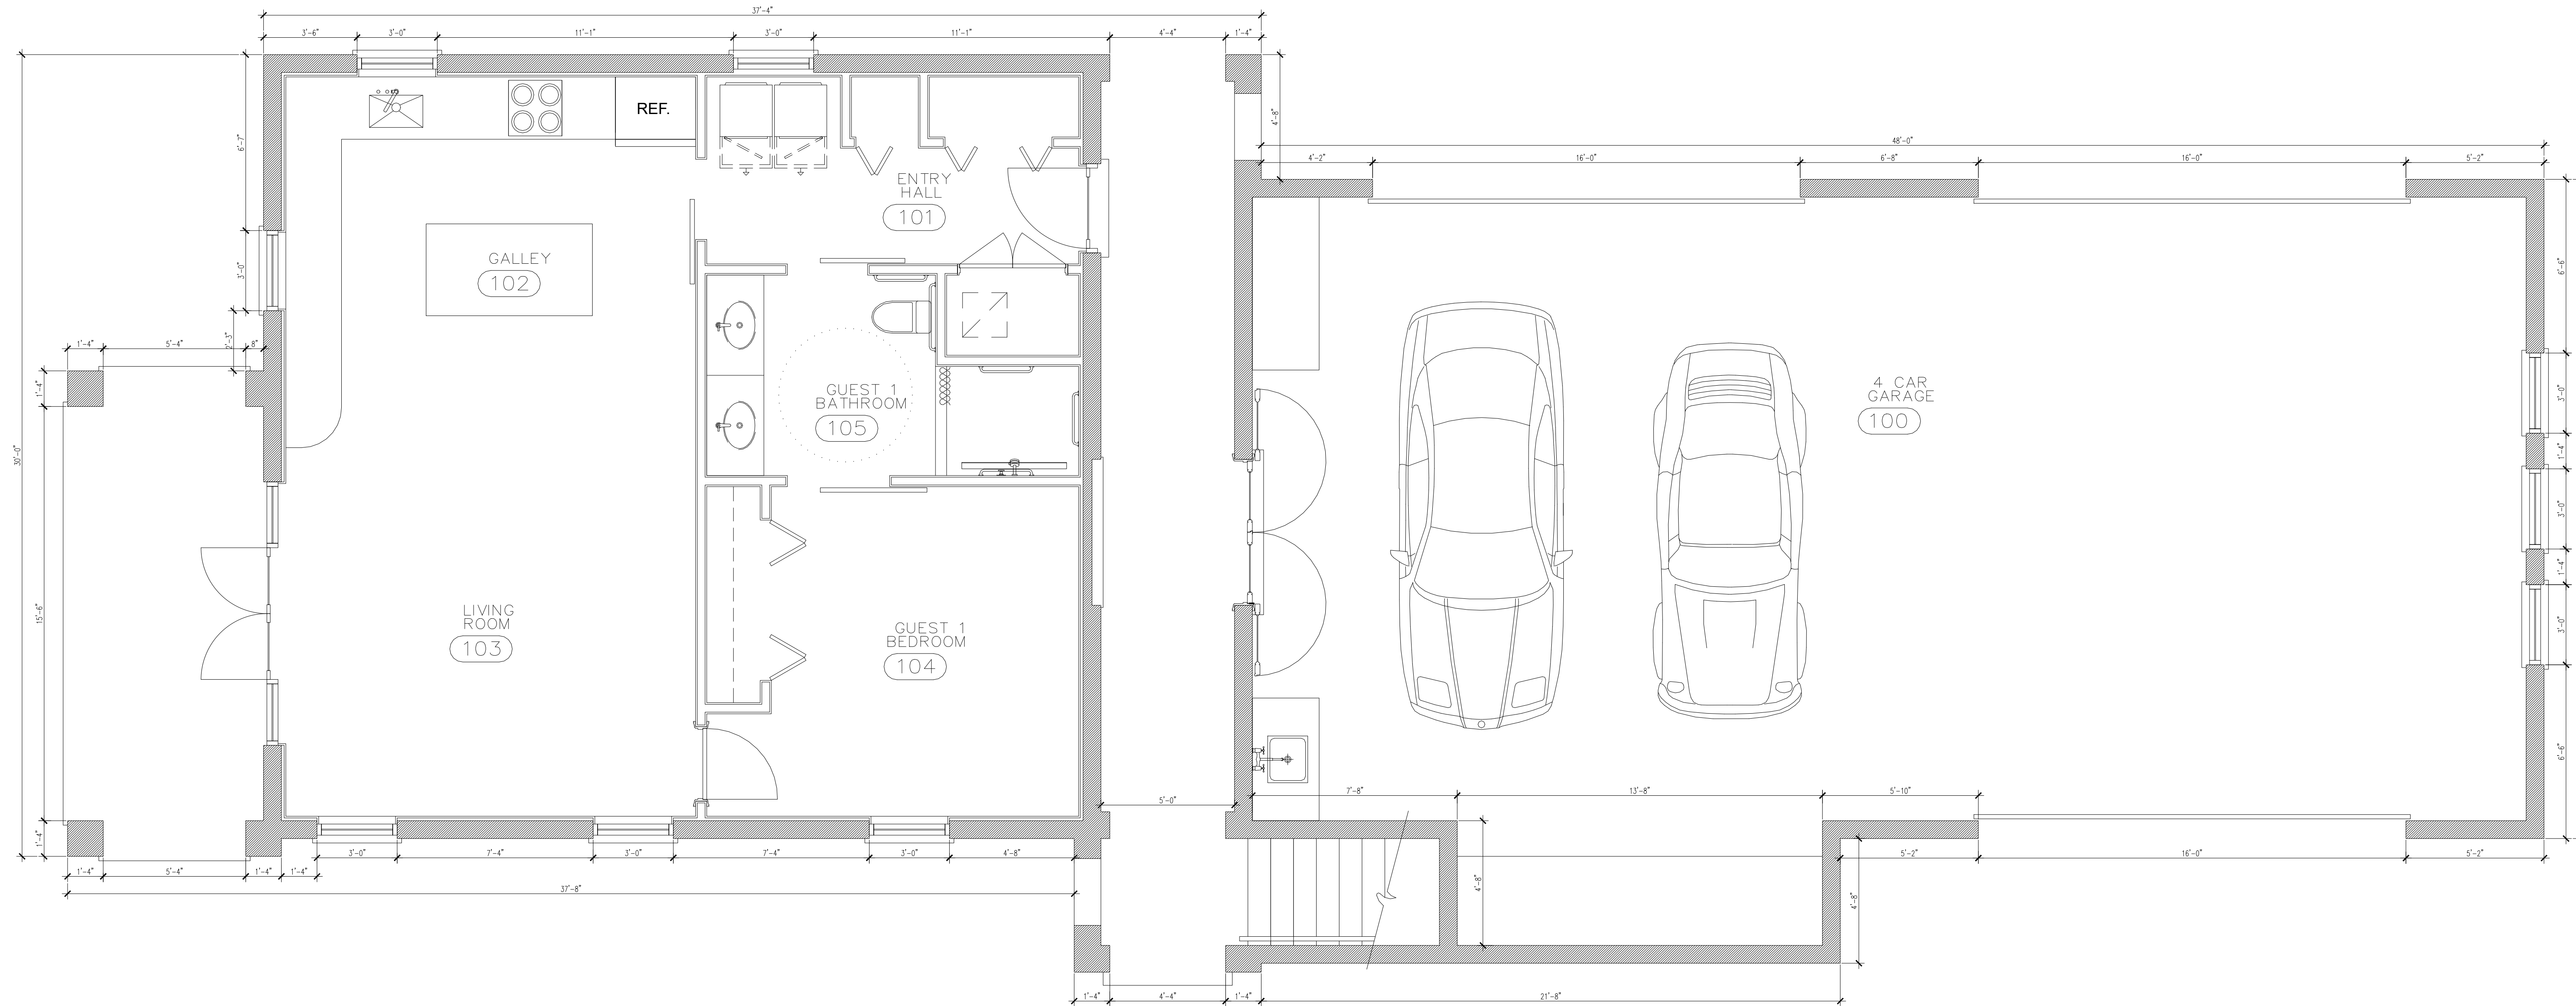


1 FIRST FLOOR PLAN
1/4" = 1'-0"

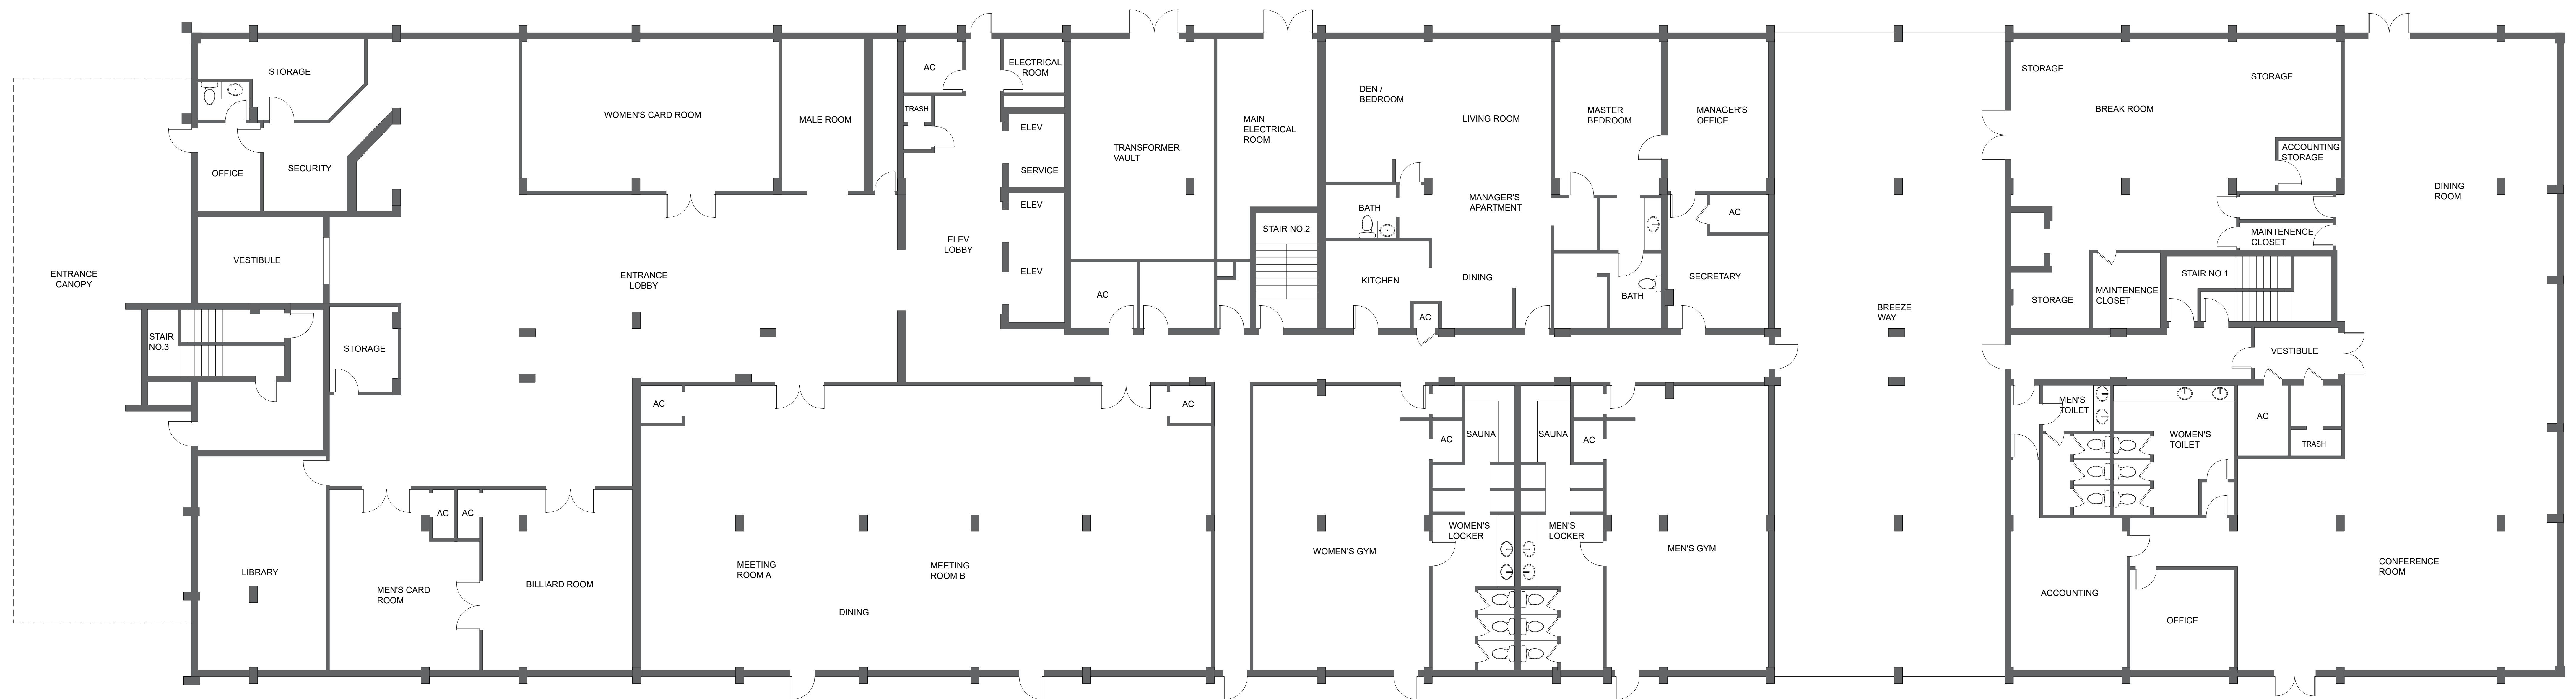


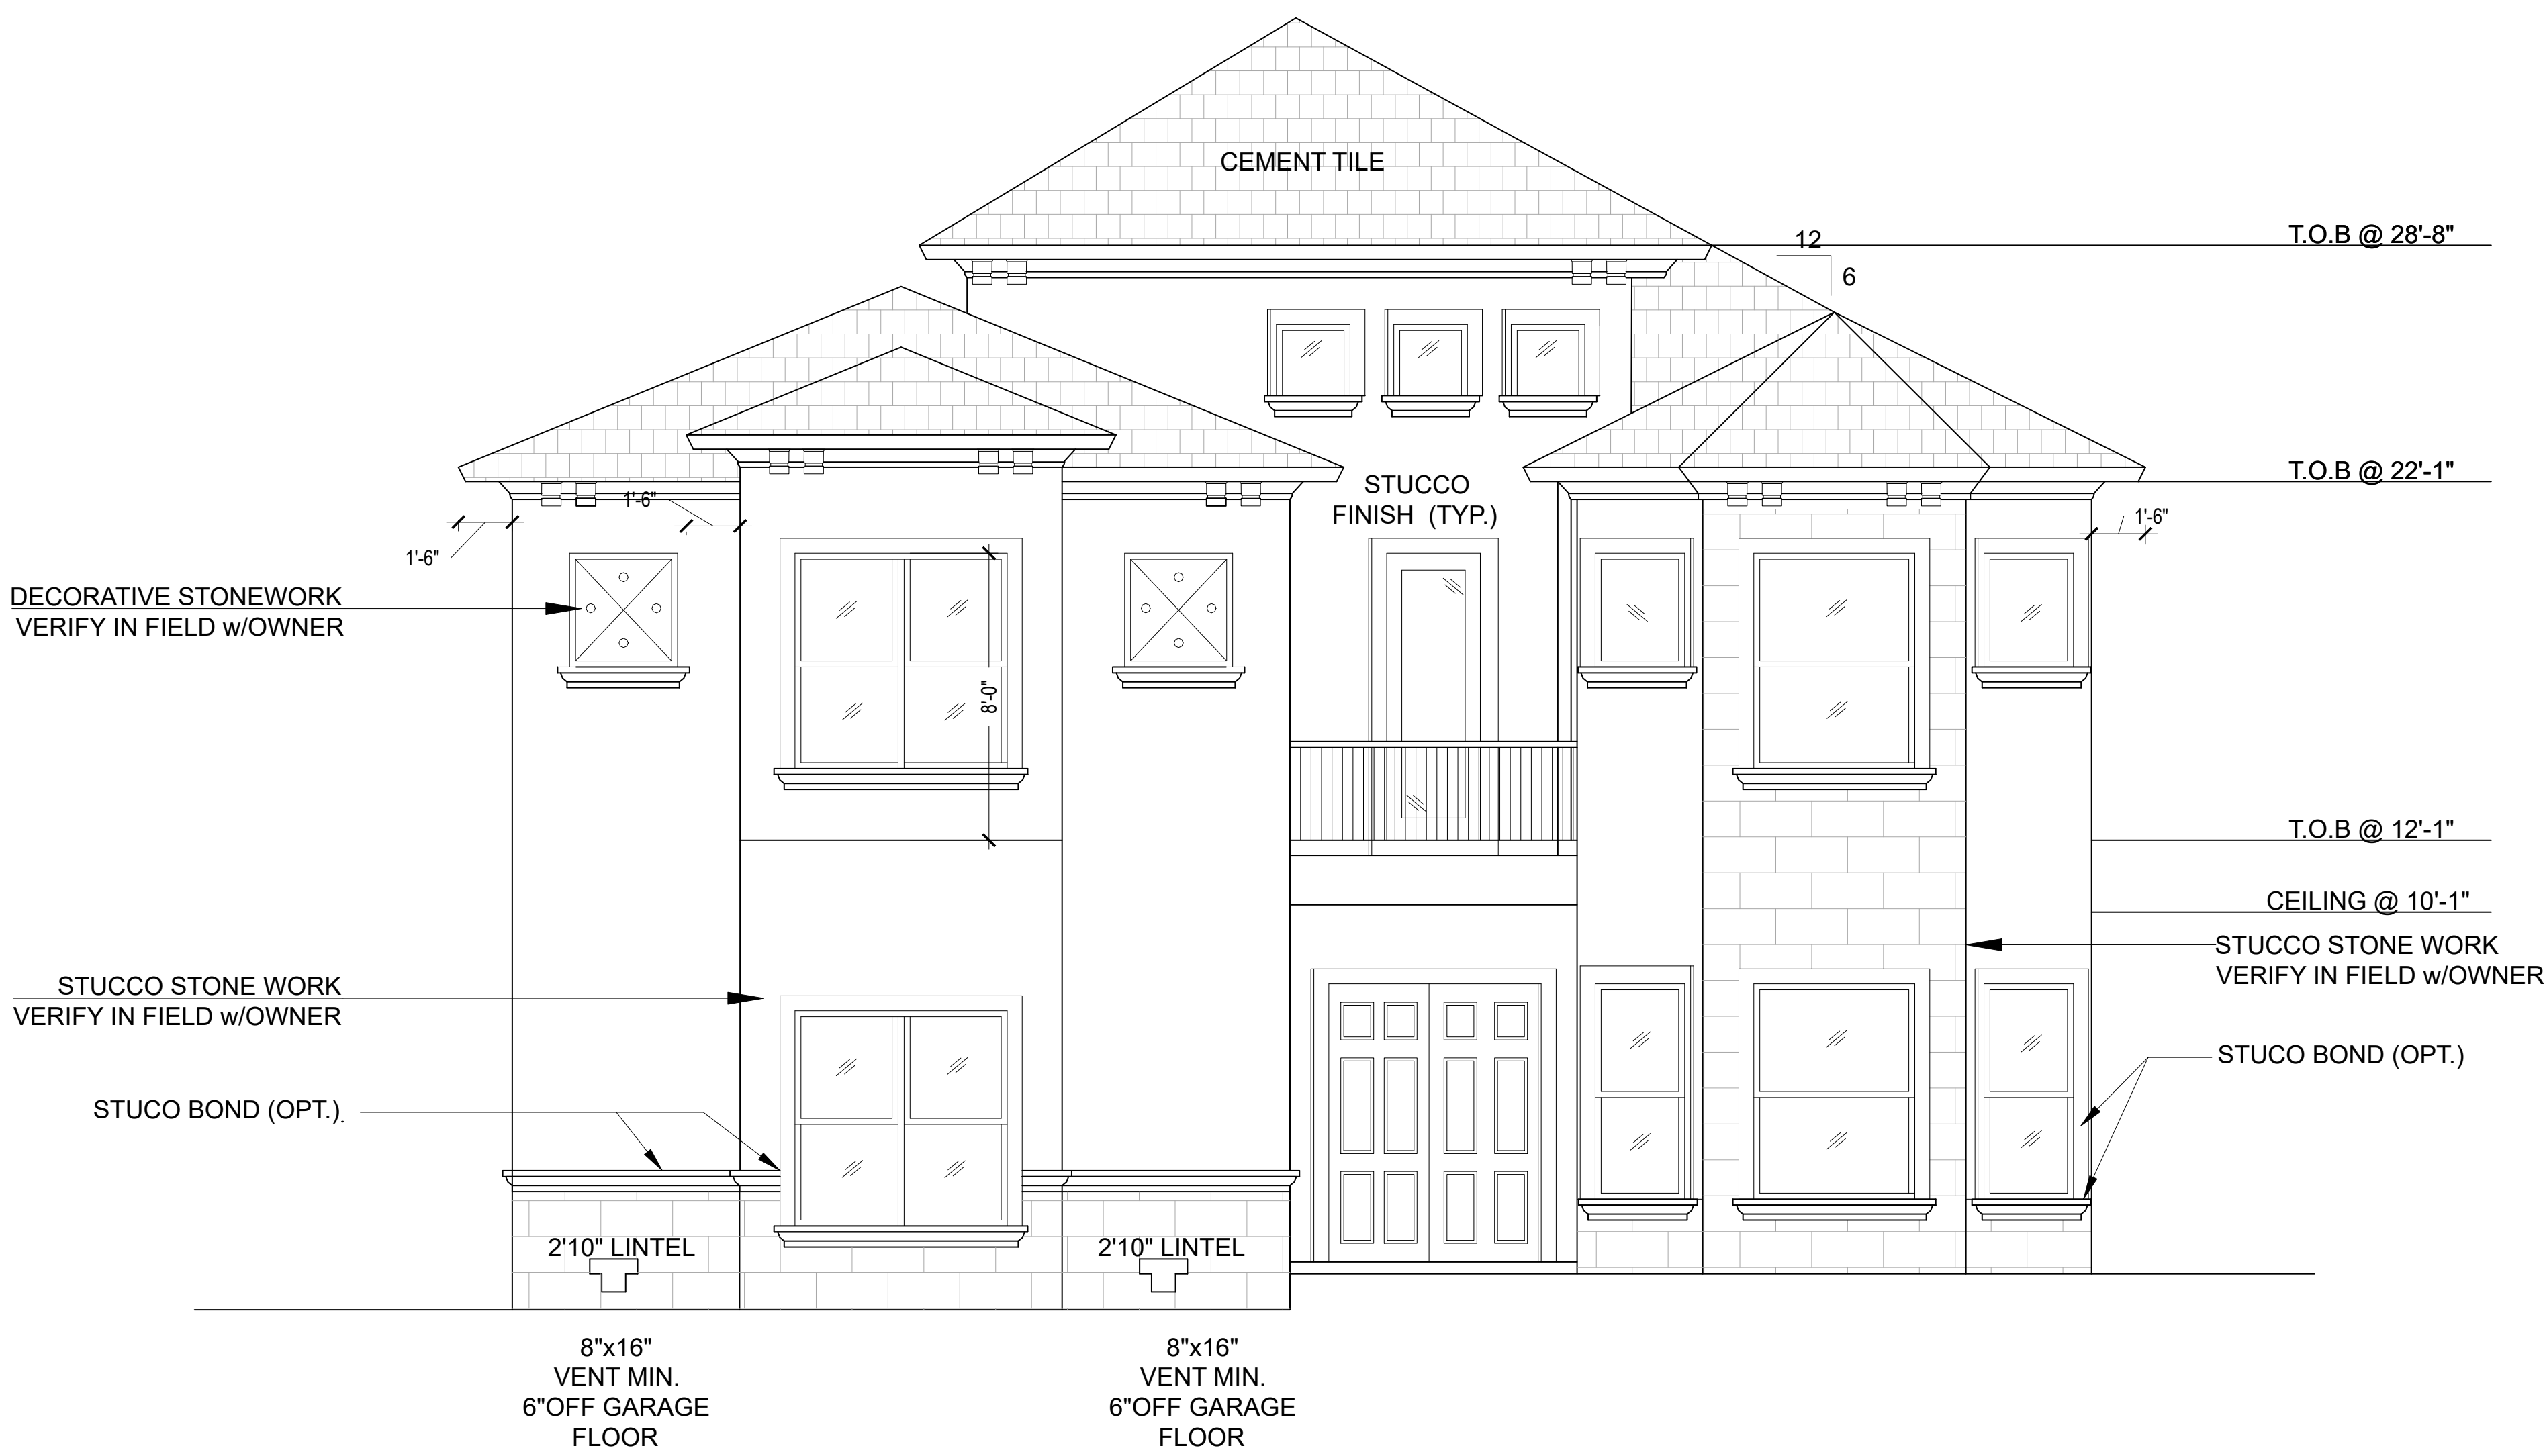


① FRONT ELEVATION
1/4" = 1'-0"

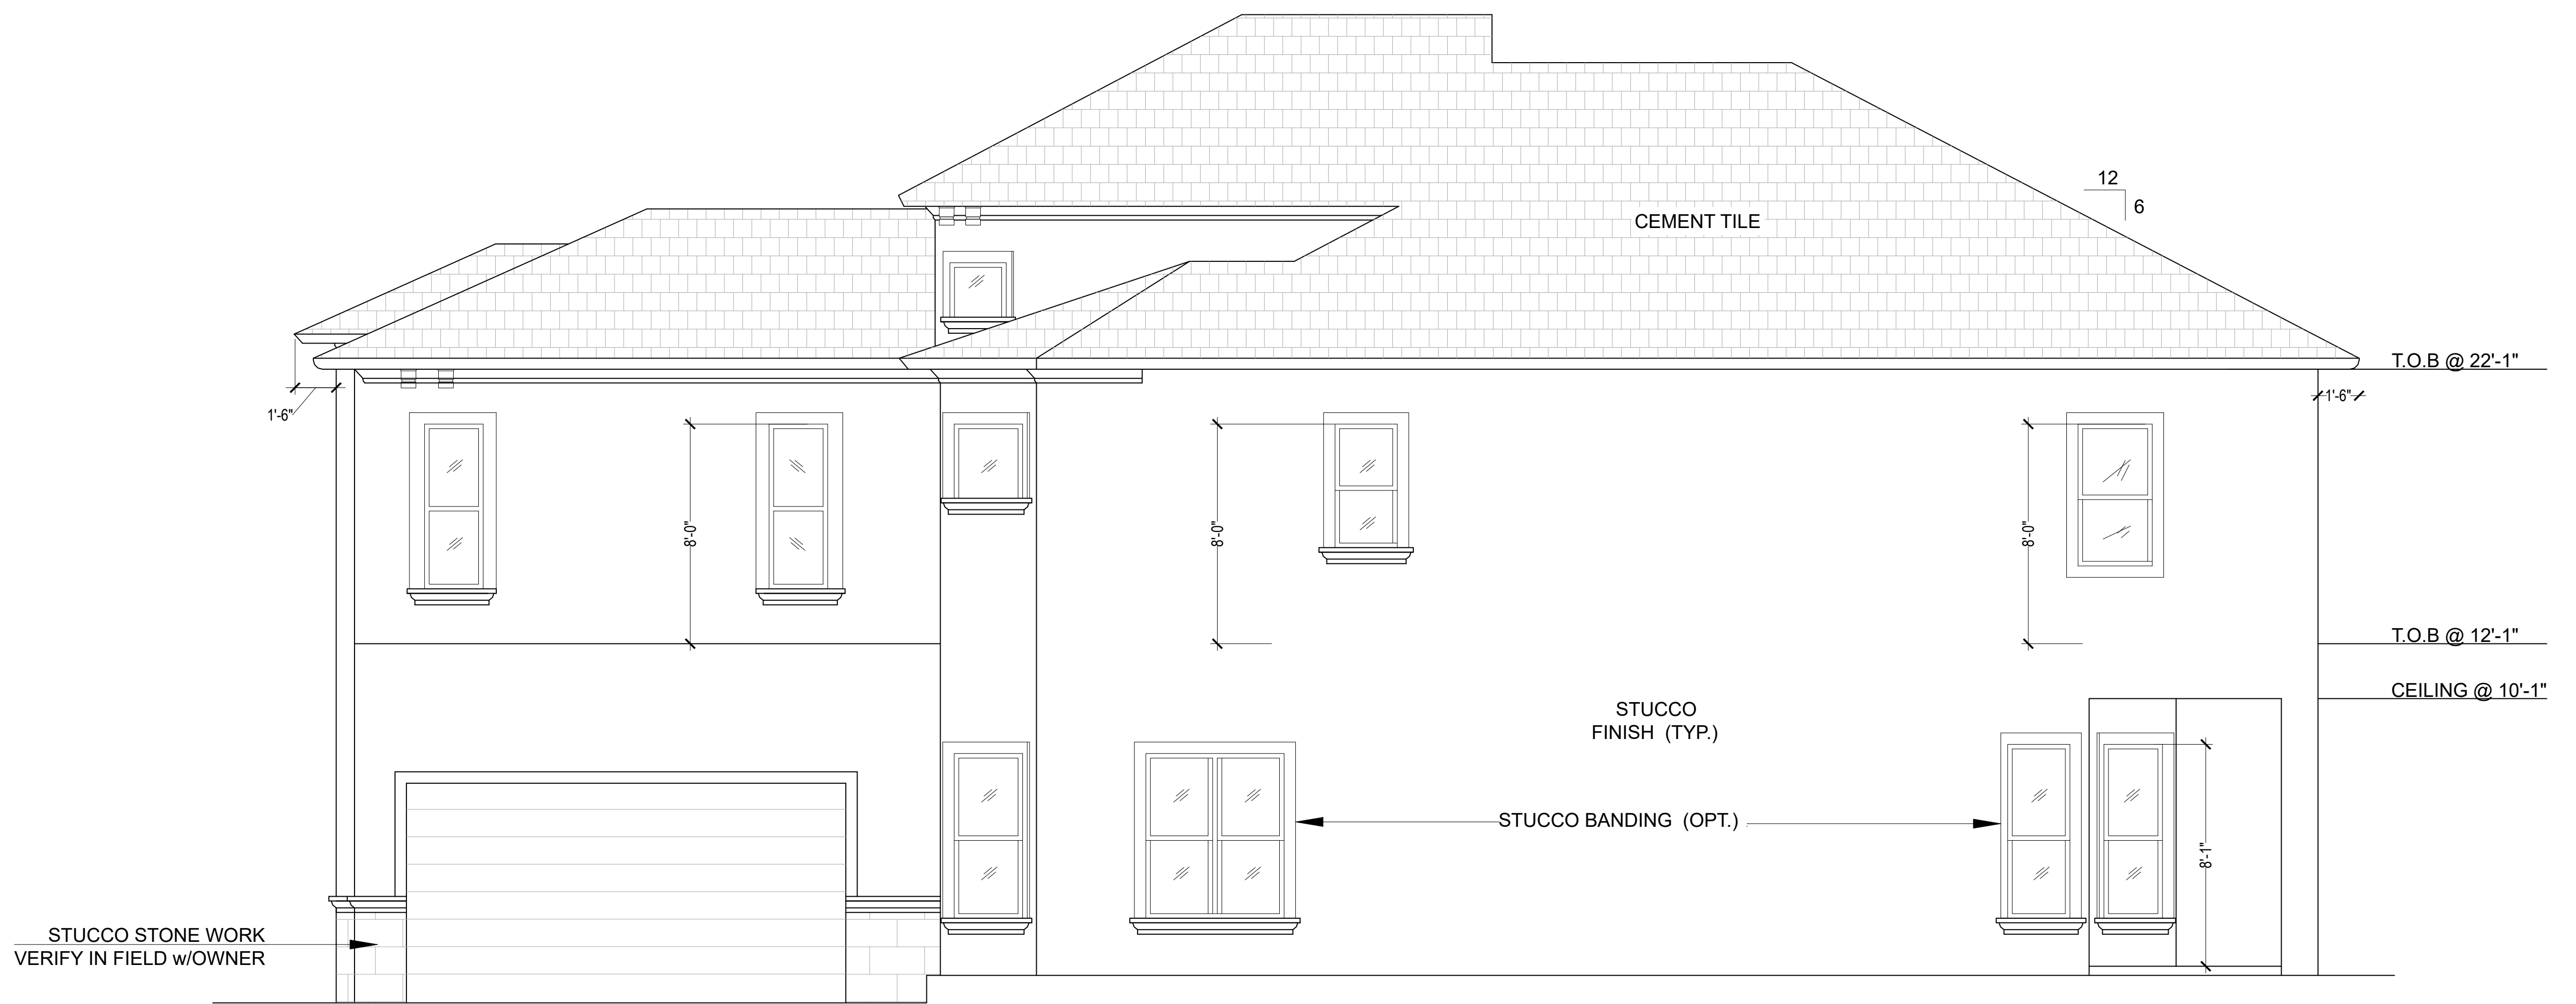


③ RIGHT SIDE ELEVATION
1/4" = 1'-0"

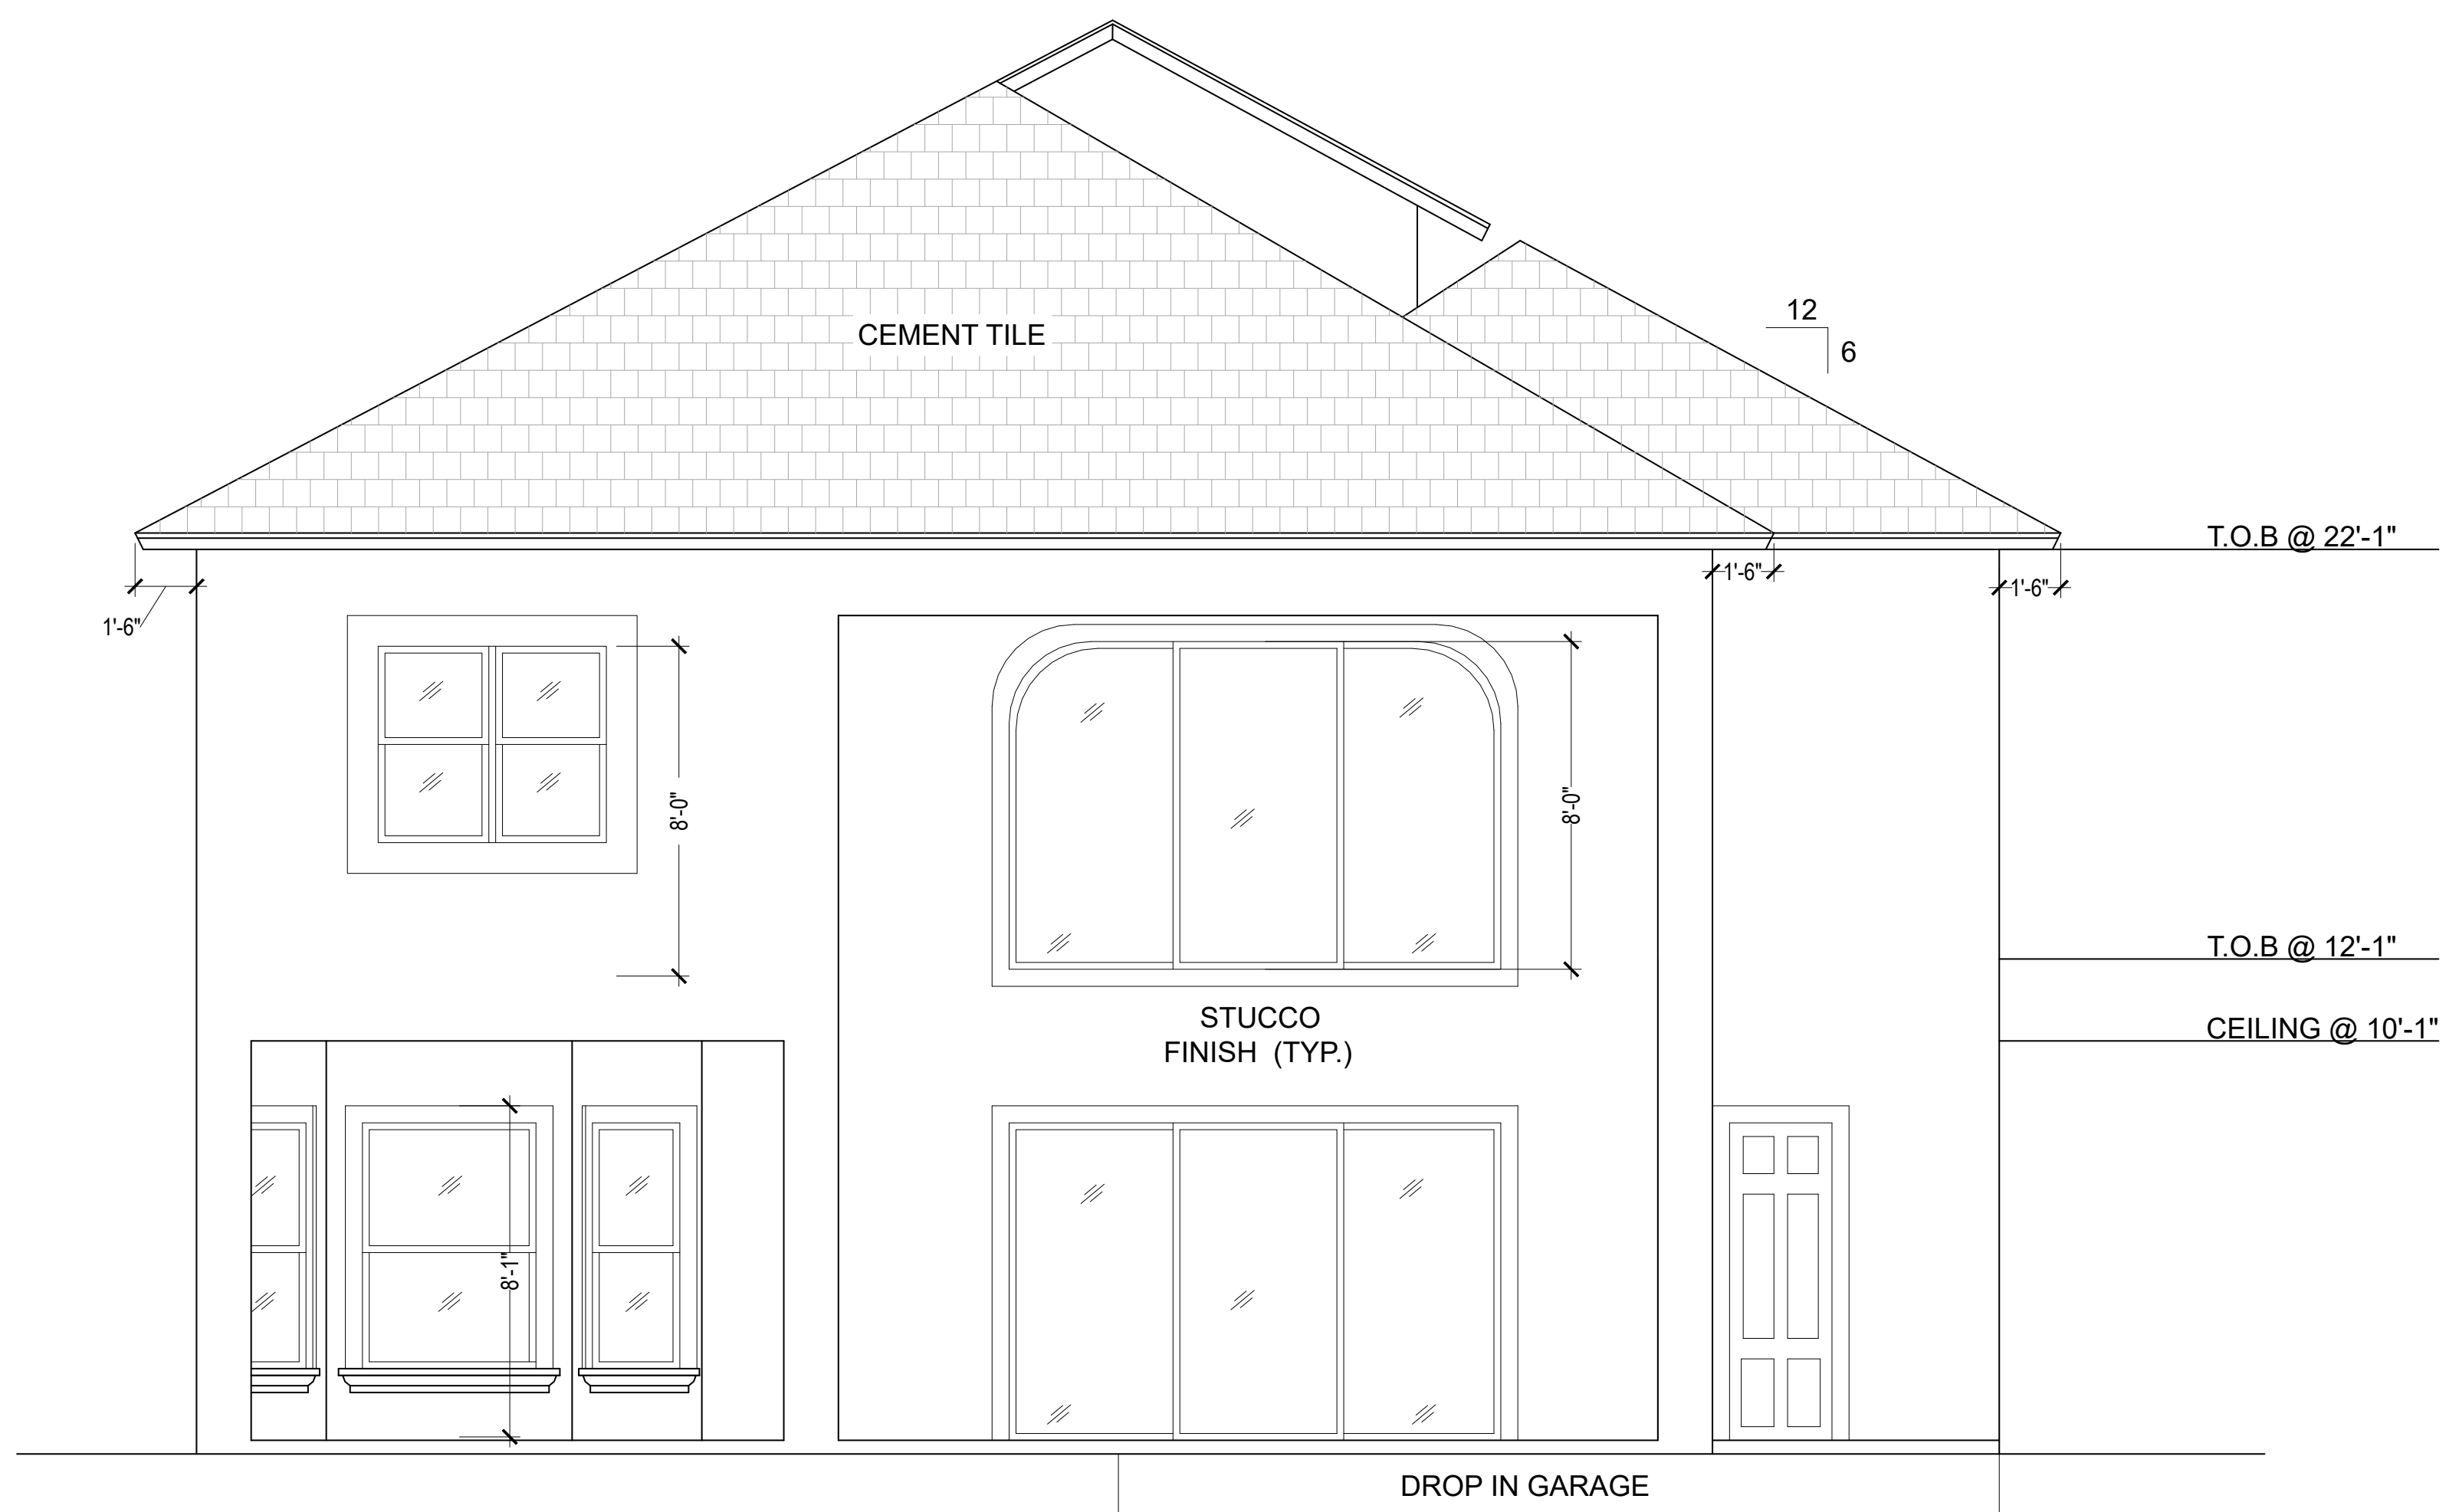


② REAR ELEVATION
1/4" = 1'-0"

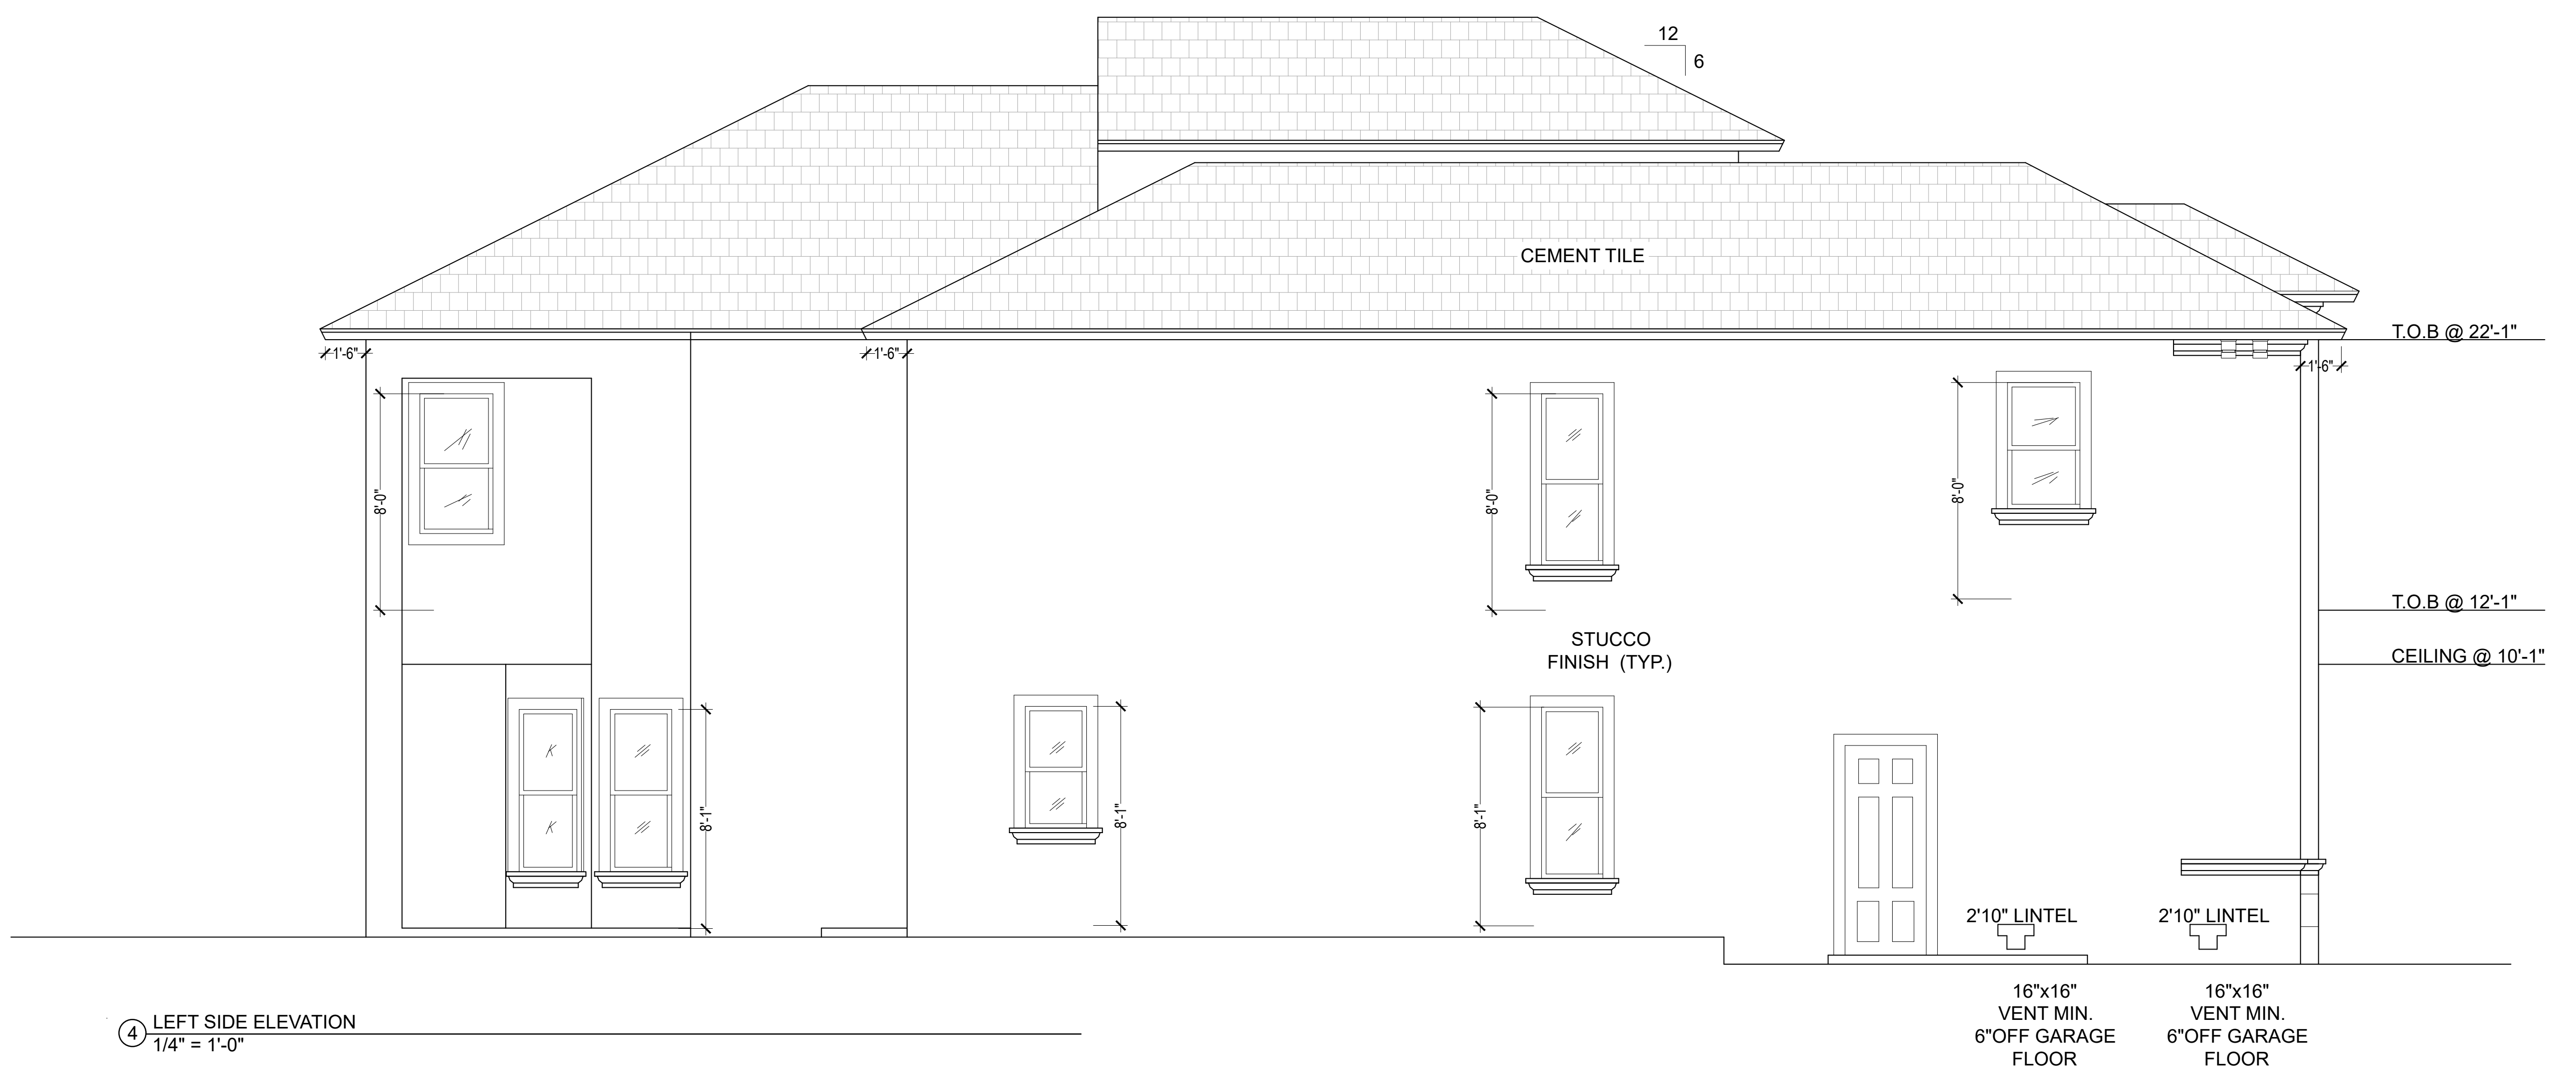


④ LEFT SIDE ELEVATION
1/4" = 1'-0"

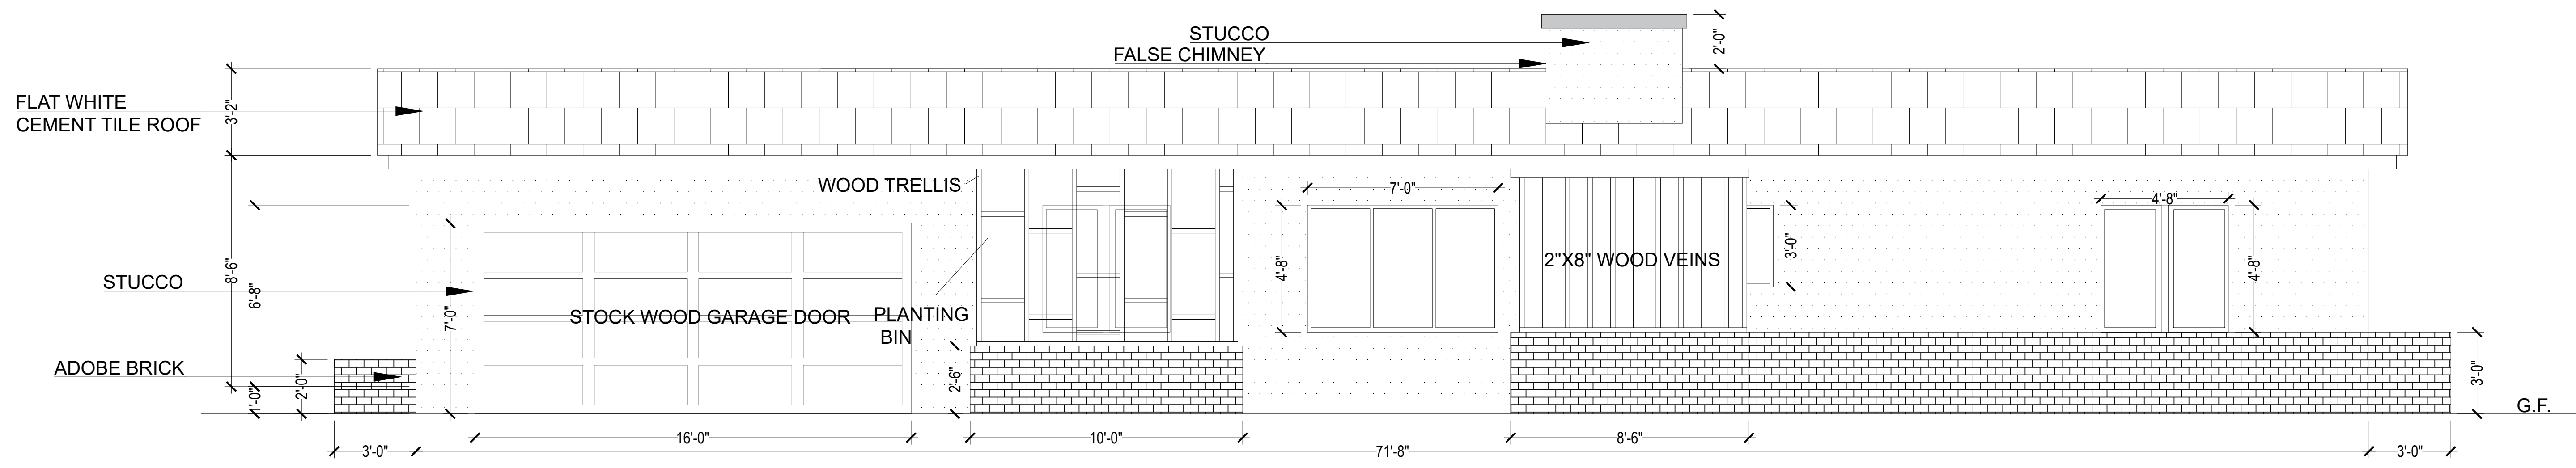


1 FRONT ELEVATION
1/4" = 1'-0"

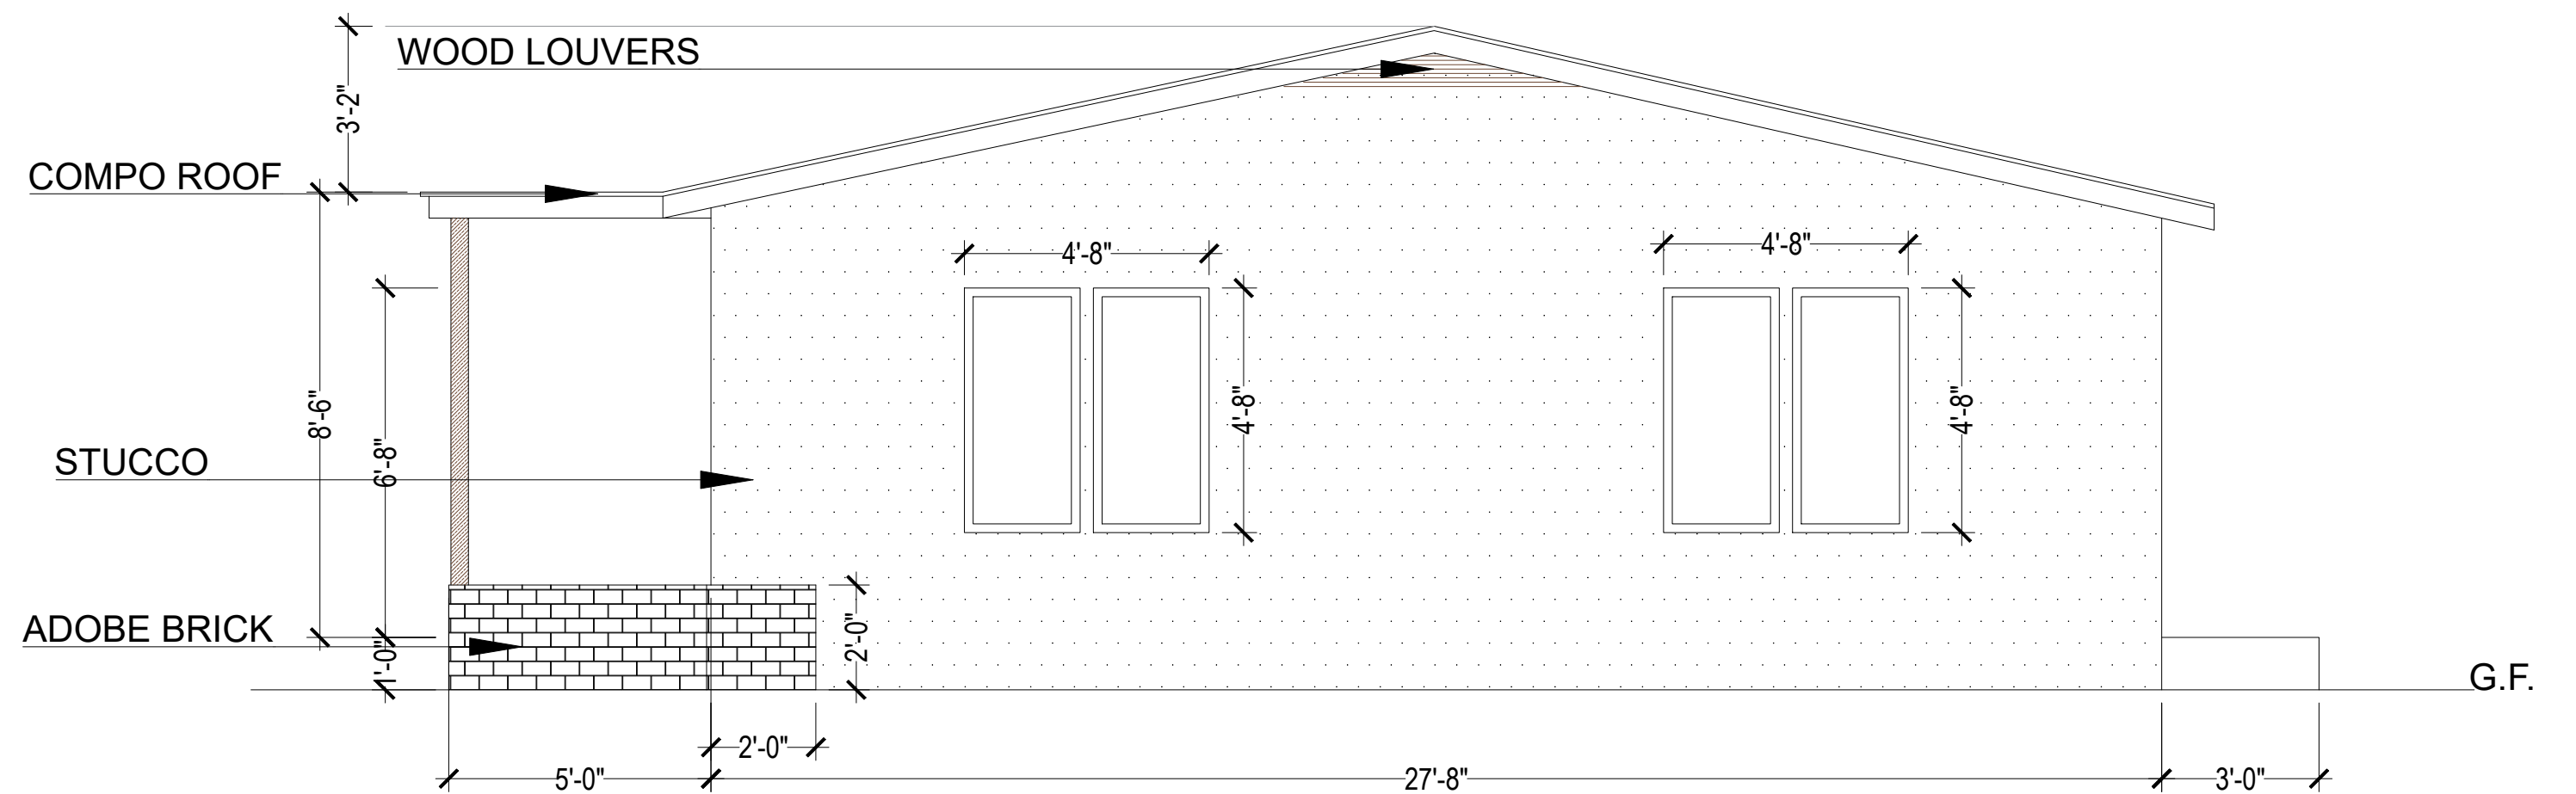


3 RIGHT SIDE ELEVATION
1/4" = 1'-0"

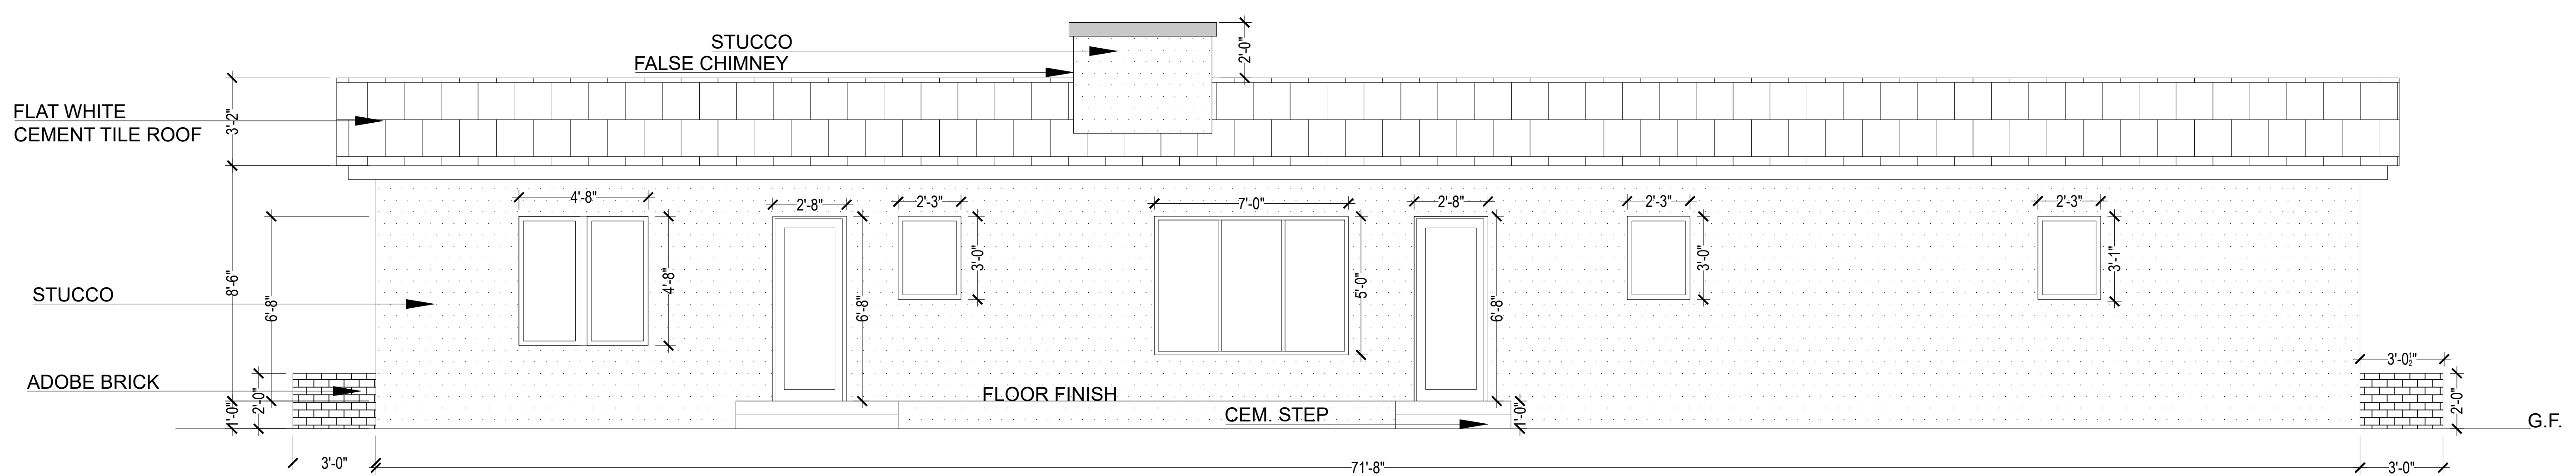

2 REAR ELEVATION
1/4" = 1'-0"

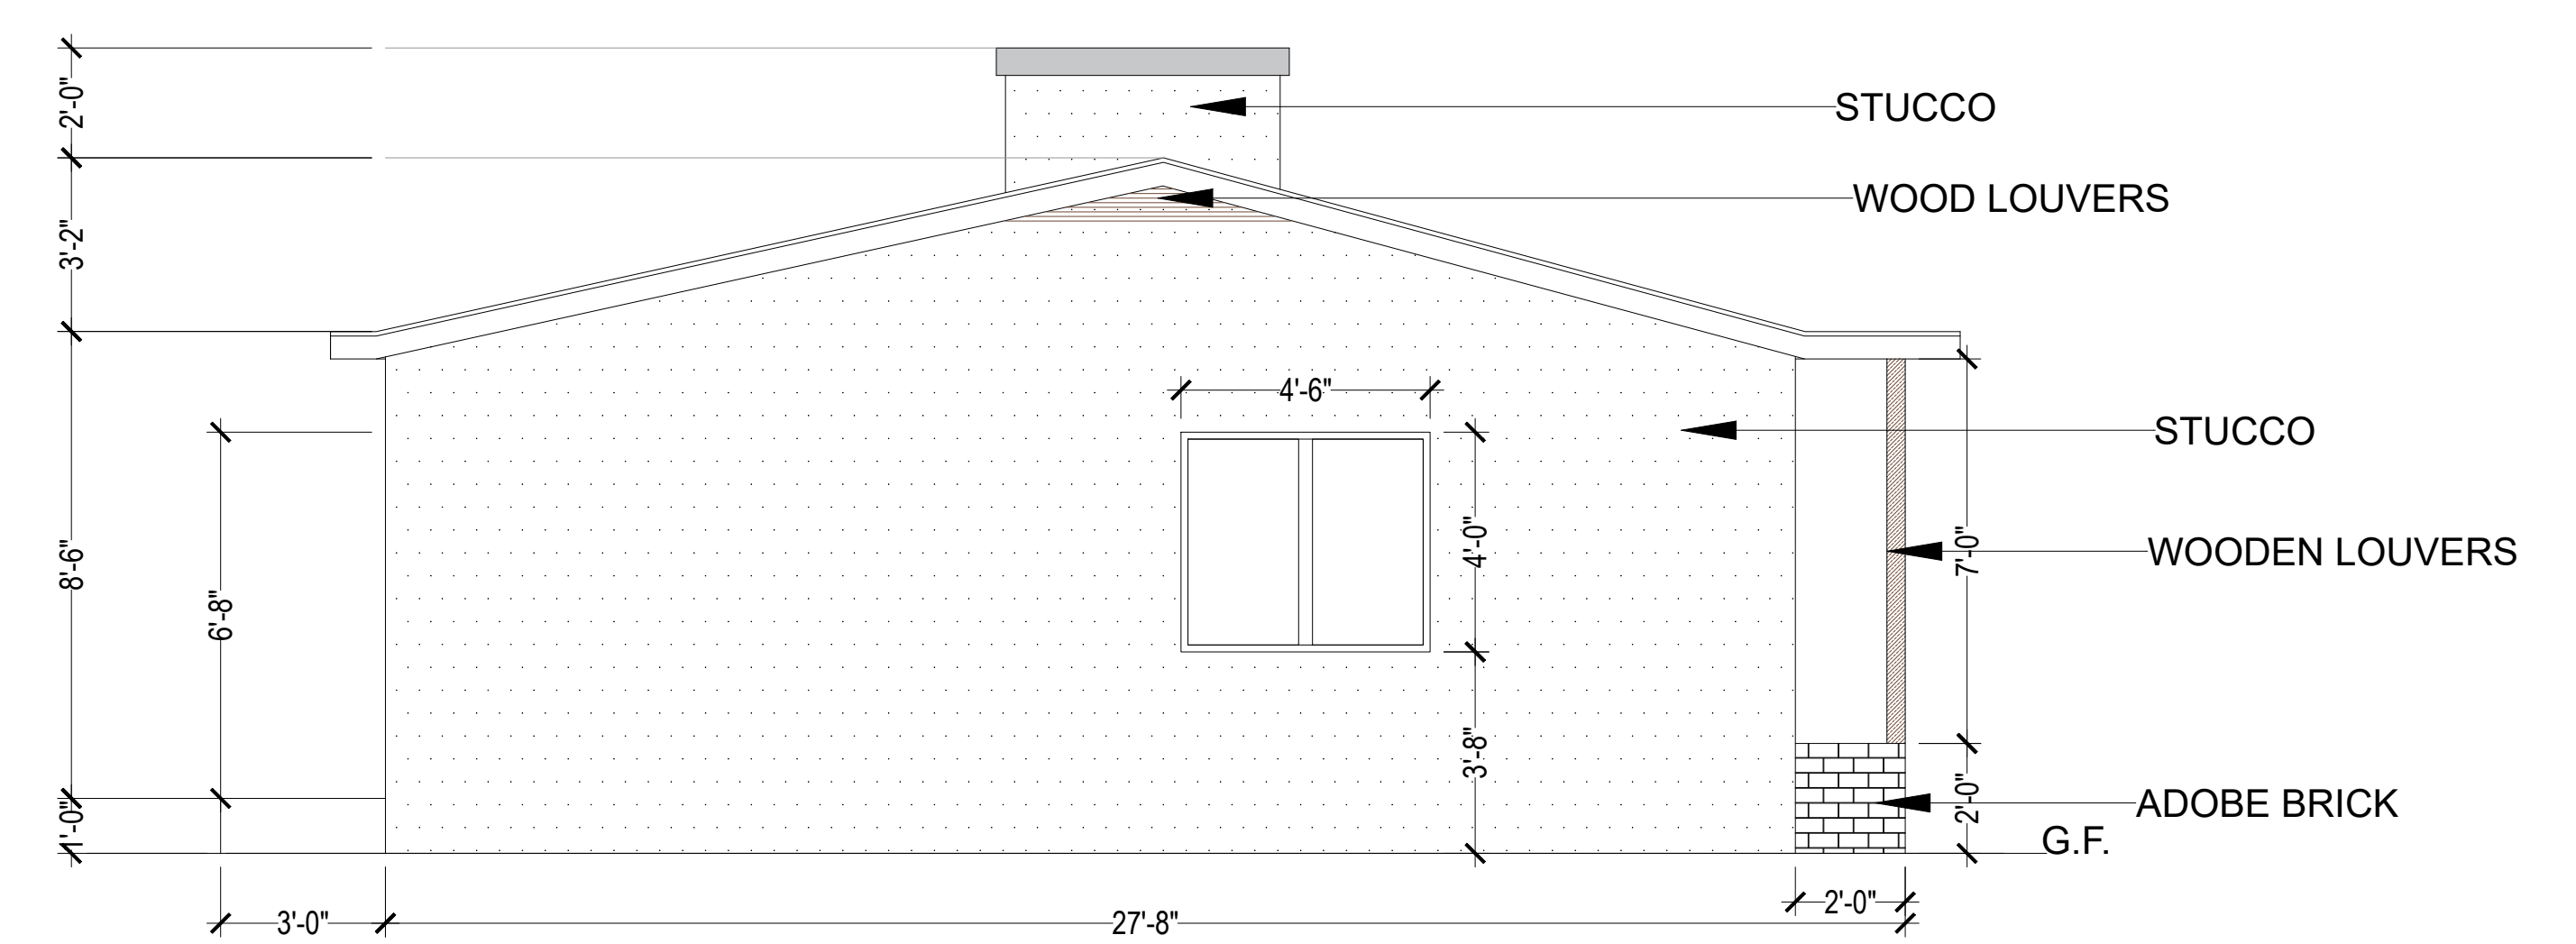


4 LEFT SIDE ELEVATION
1/4" = 1'-0"

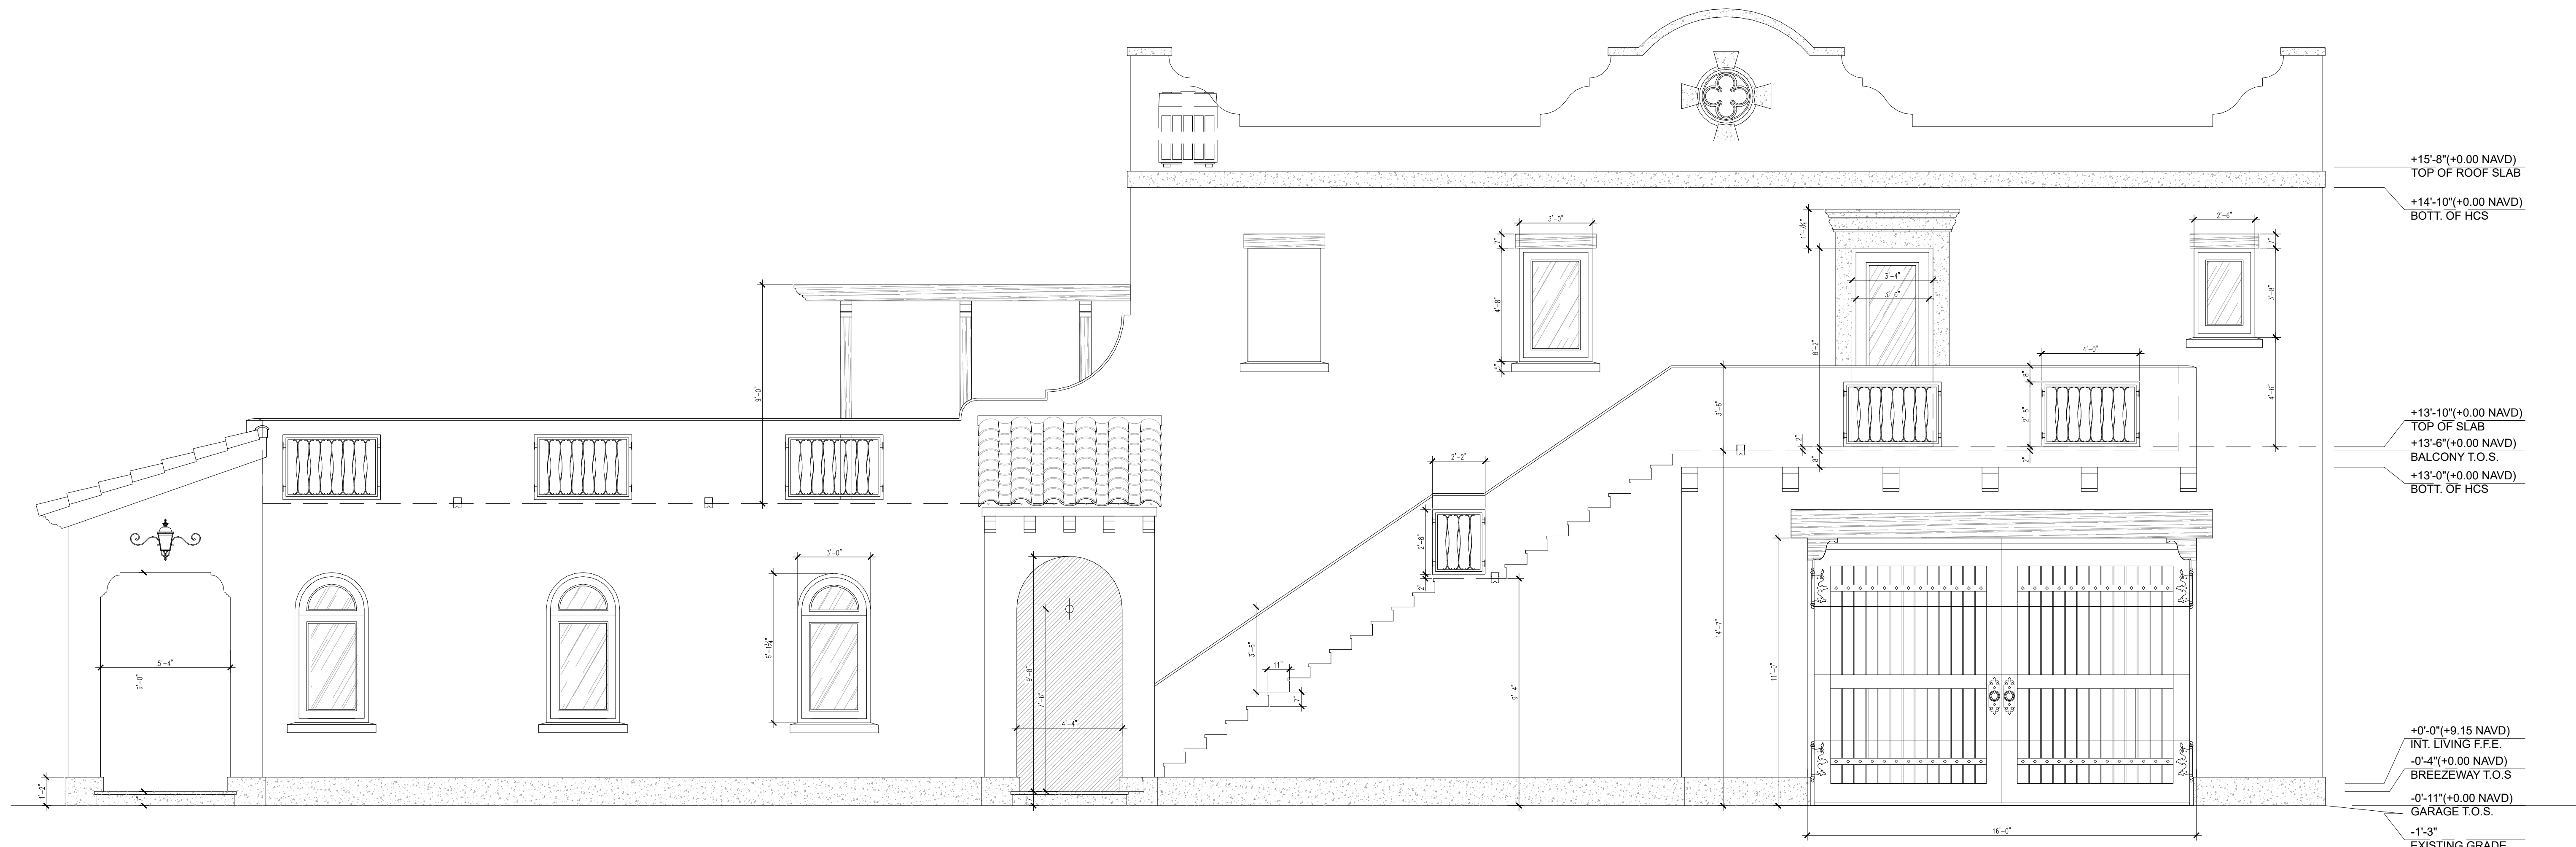


1 NORTH ELEVATION
1/4" = 1'-0"




1 SOUTH ELEVATION
1/4" = 1'-0"

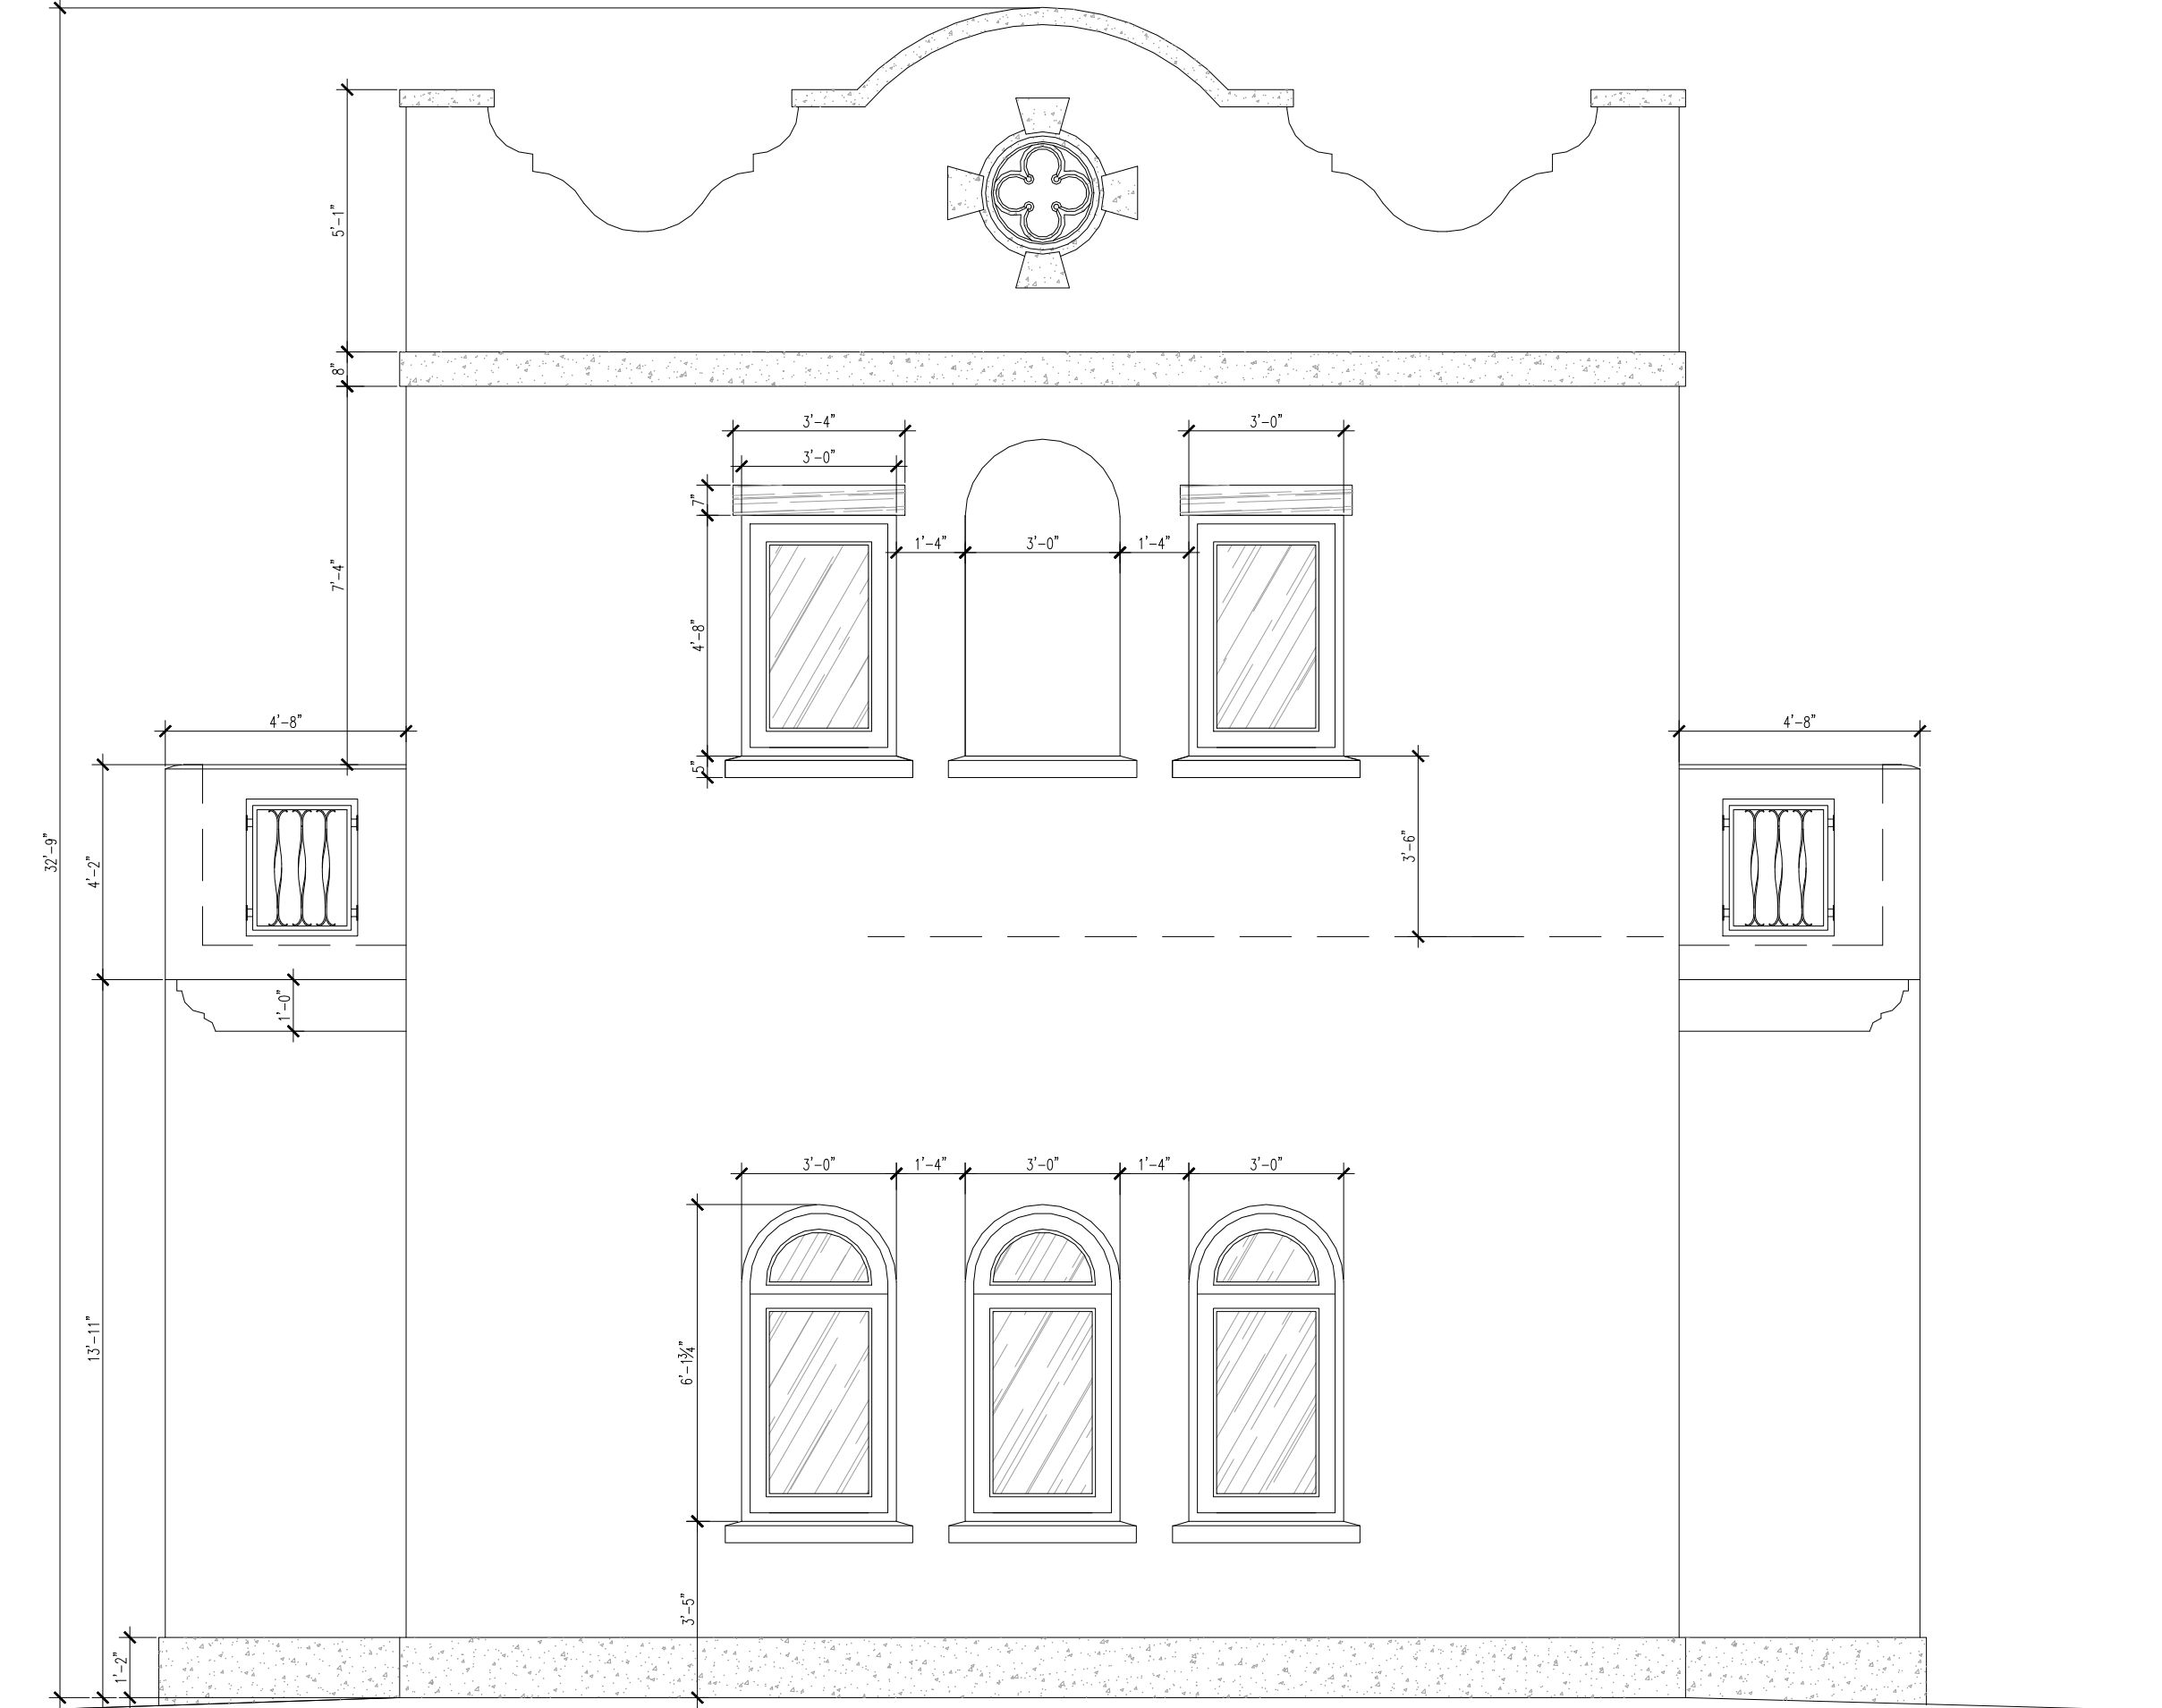


2 WEST ELEVATION
1/4" = 1'-0"

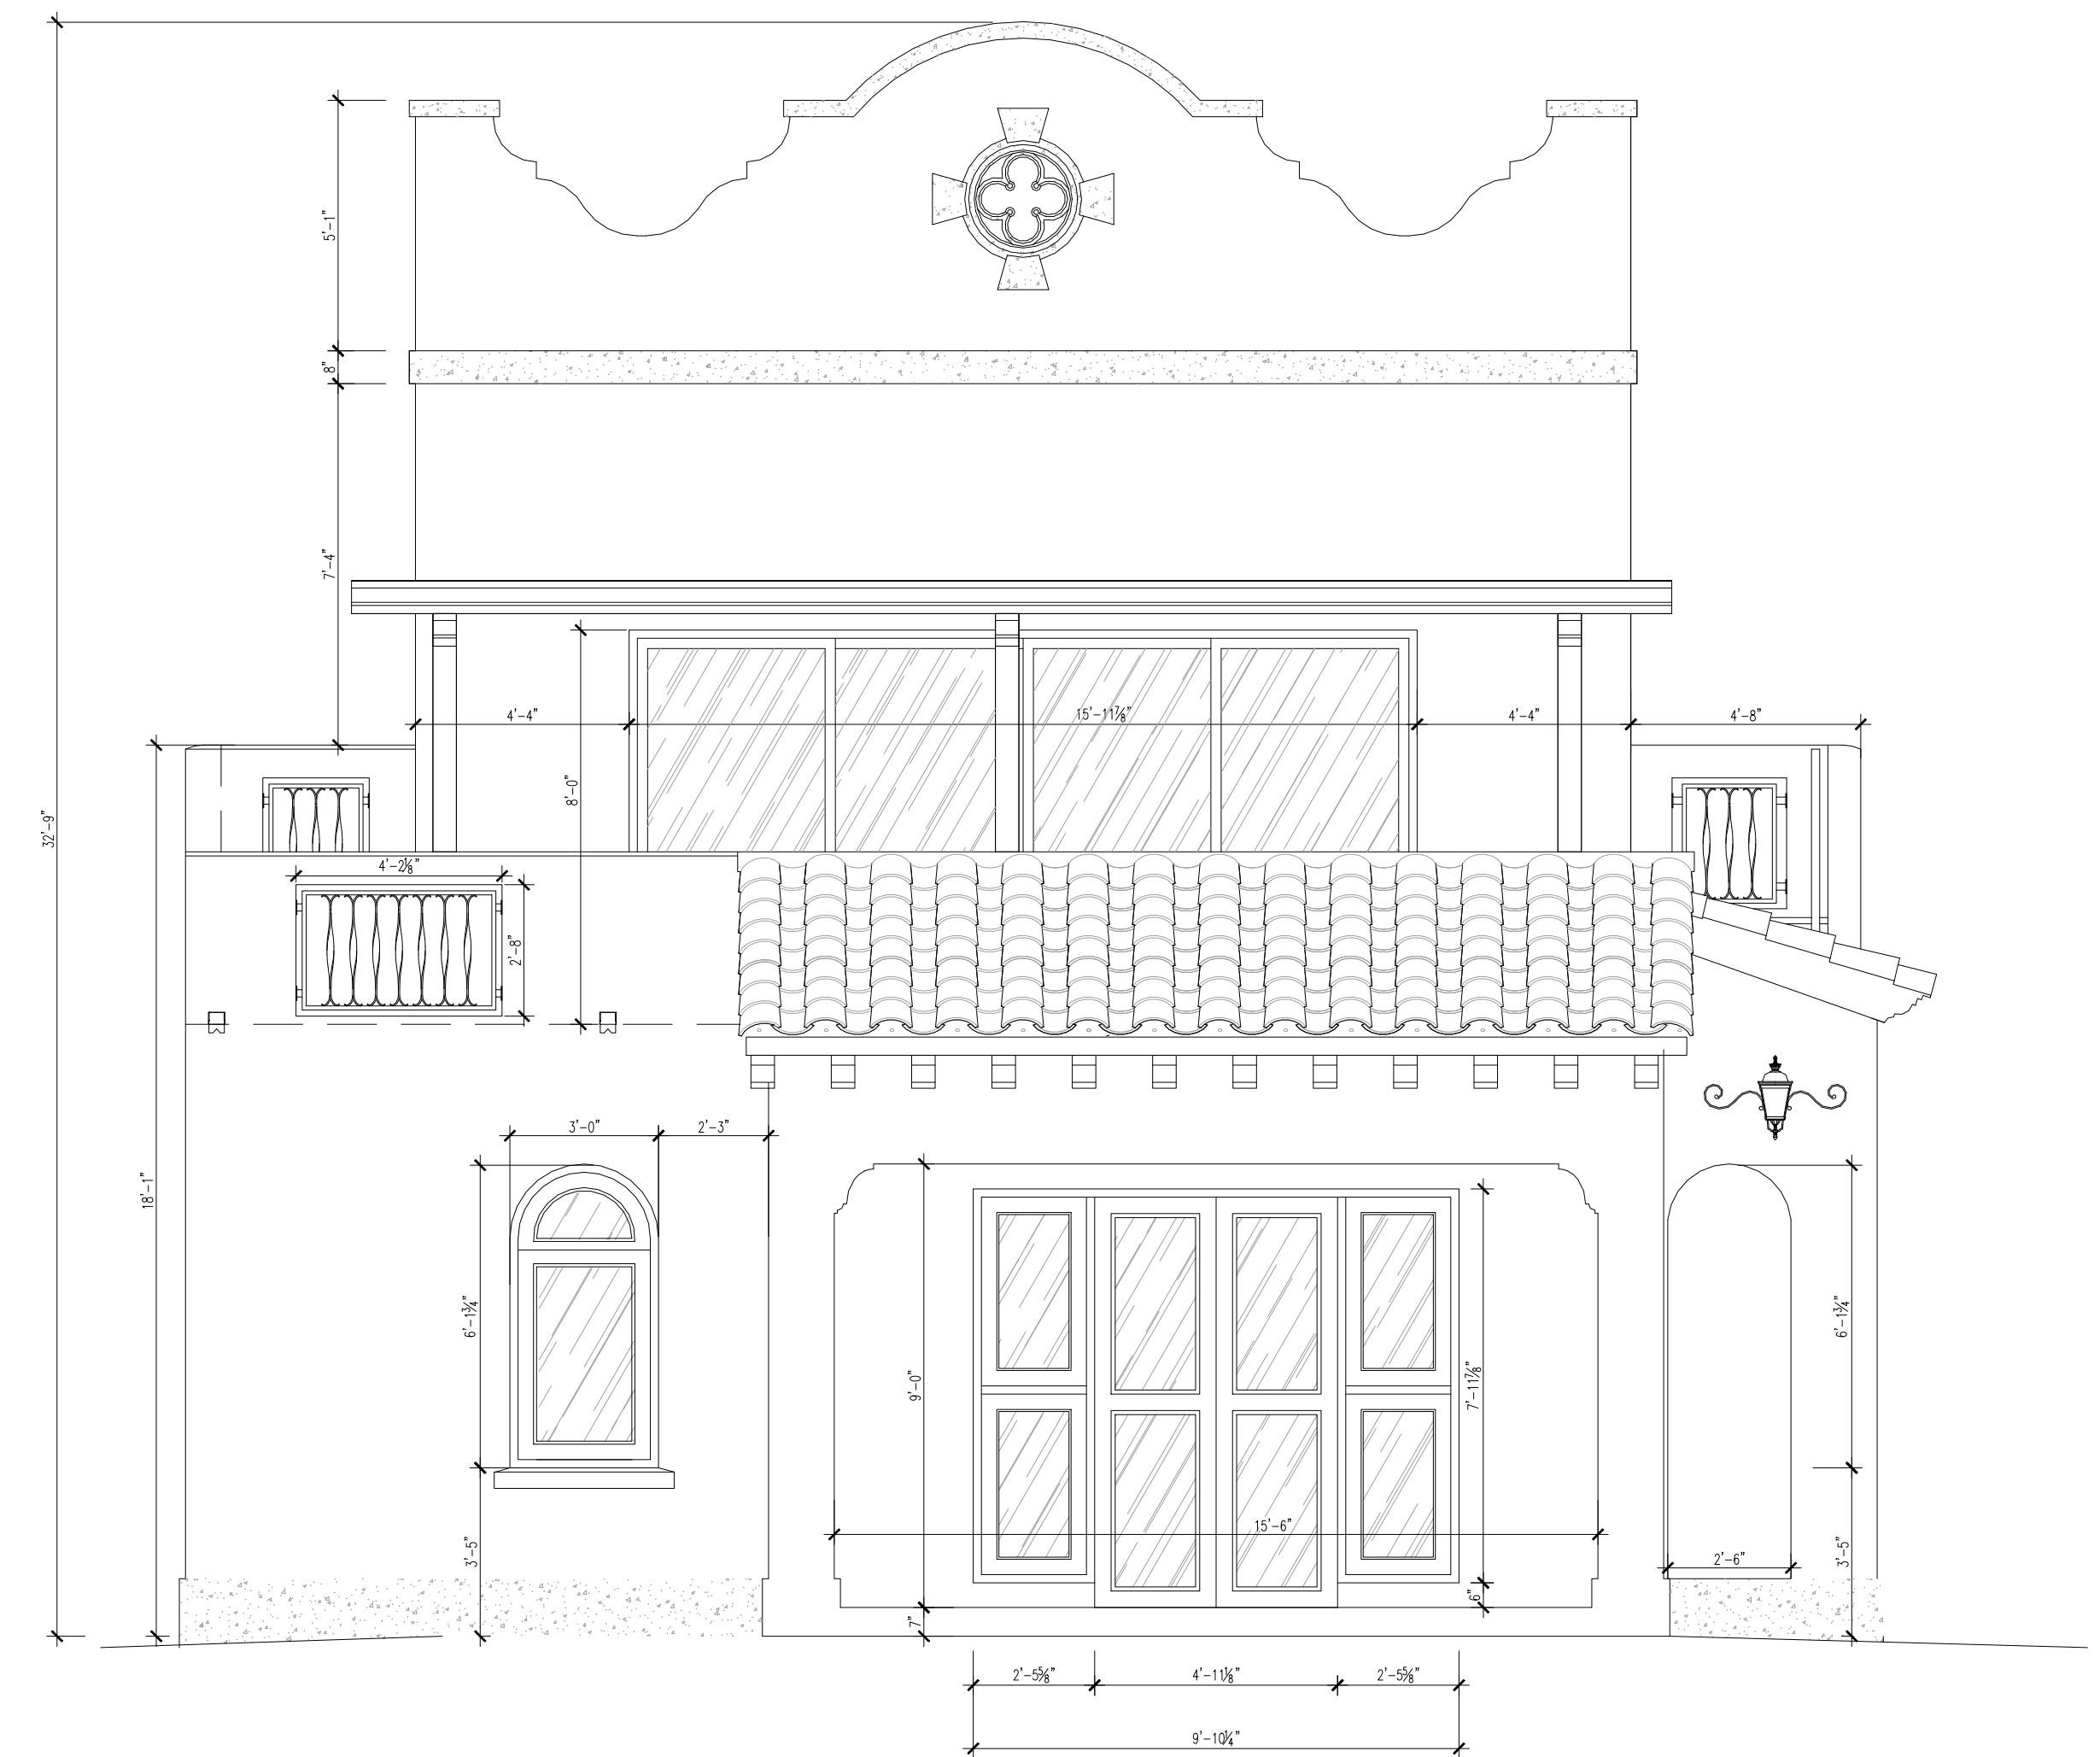


2 EAST ELEVATION
1/4" = 1'-0"

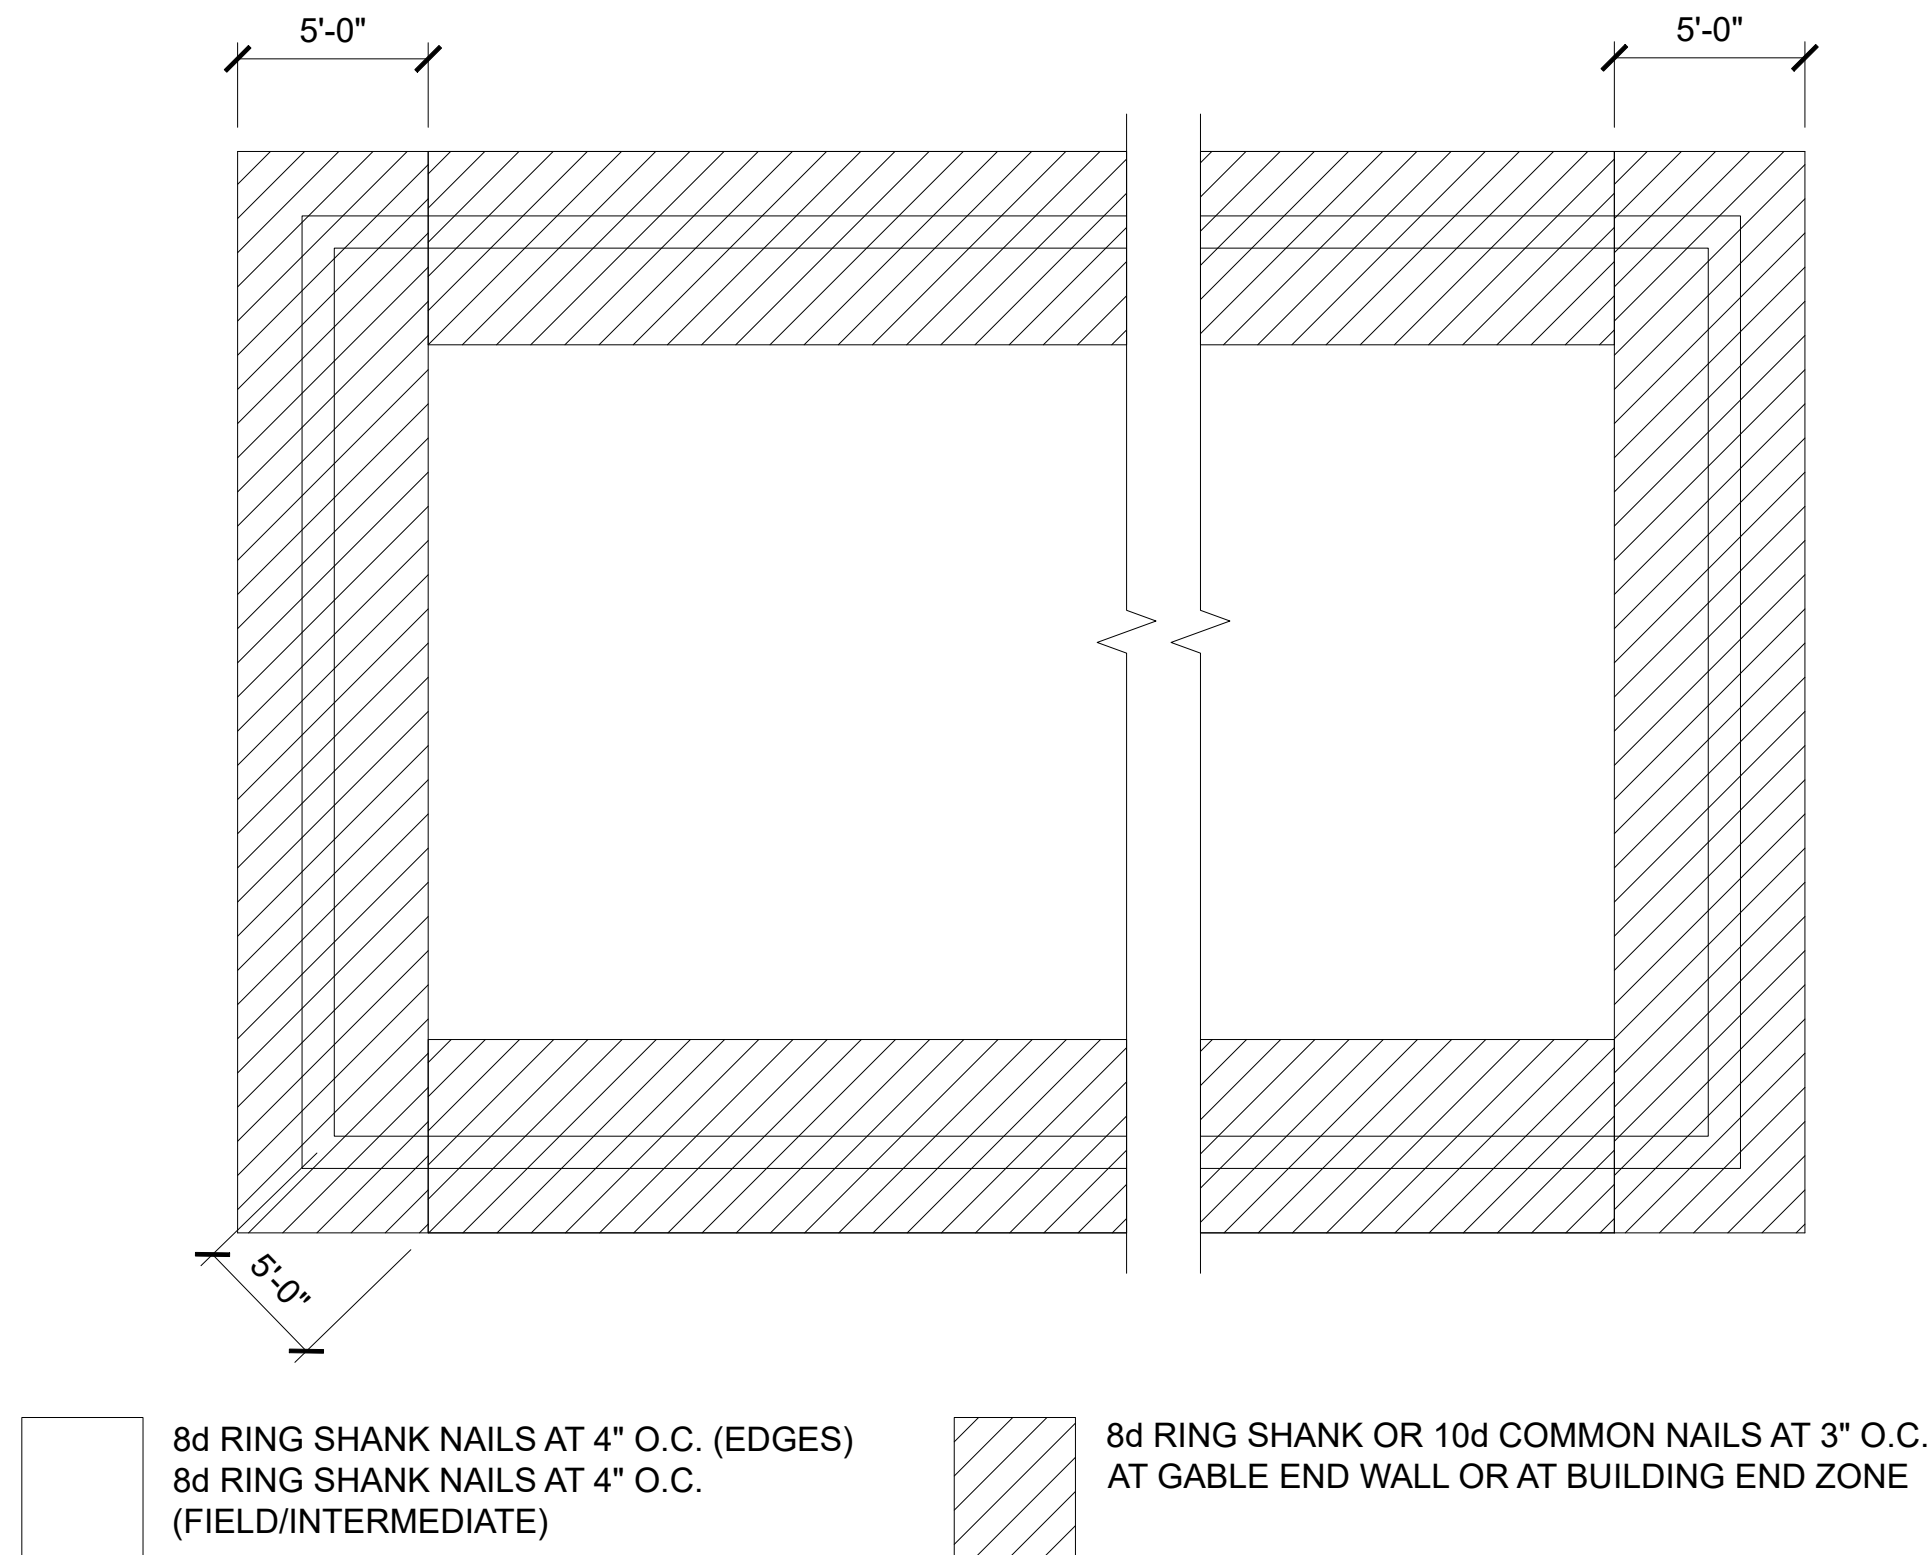


1 ROOF NAILING DETAIL
SCALE: 3/4"=1'-0"

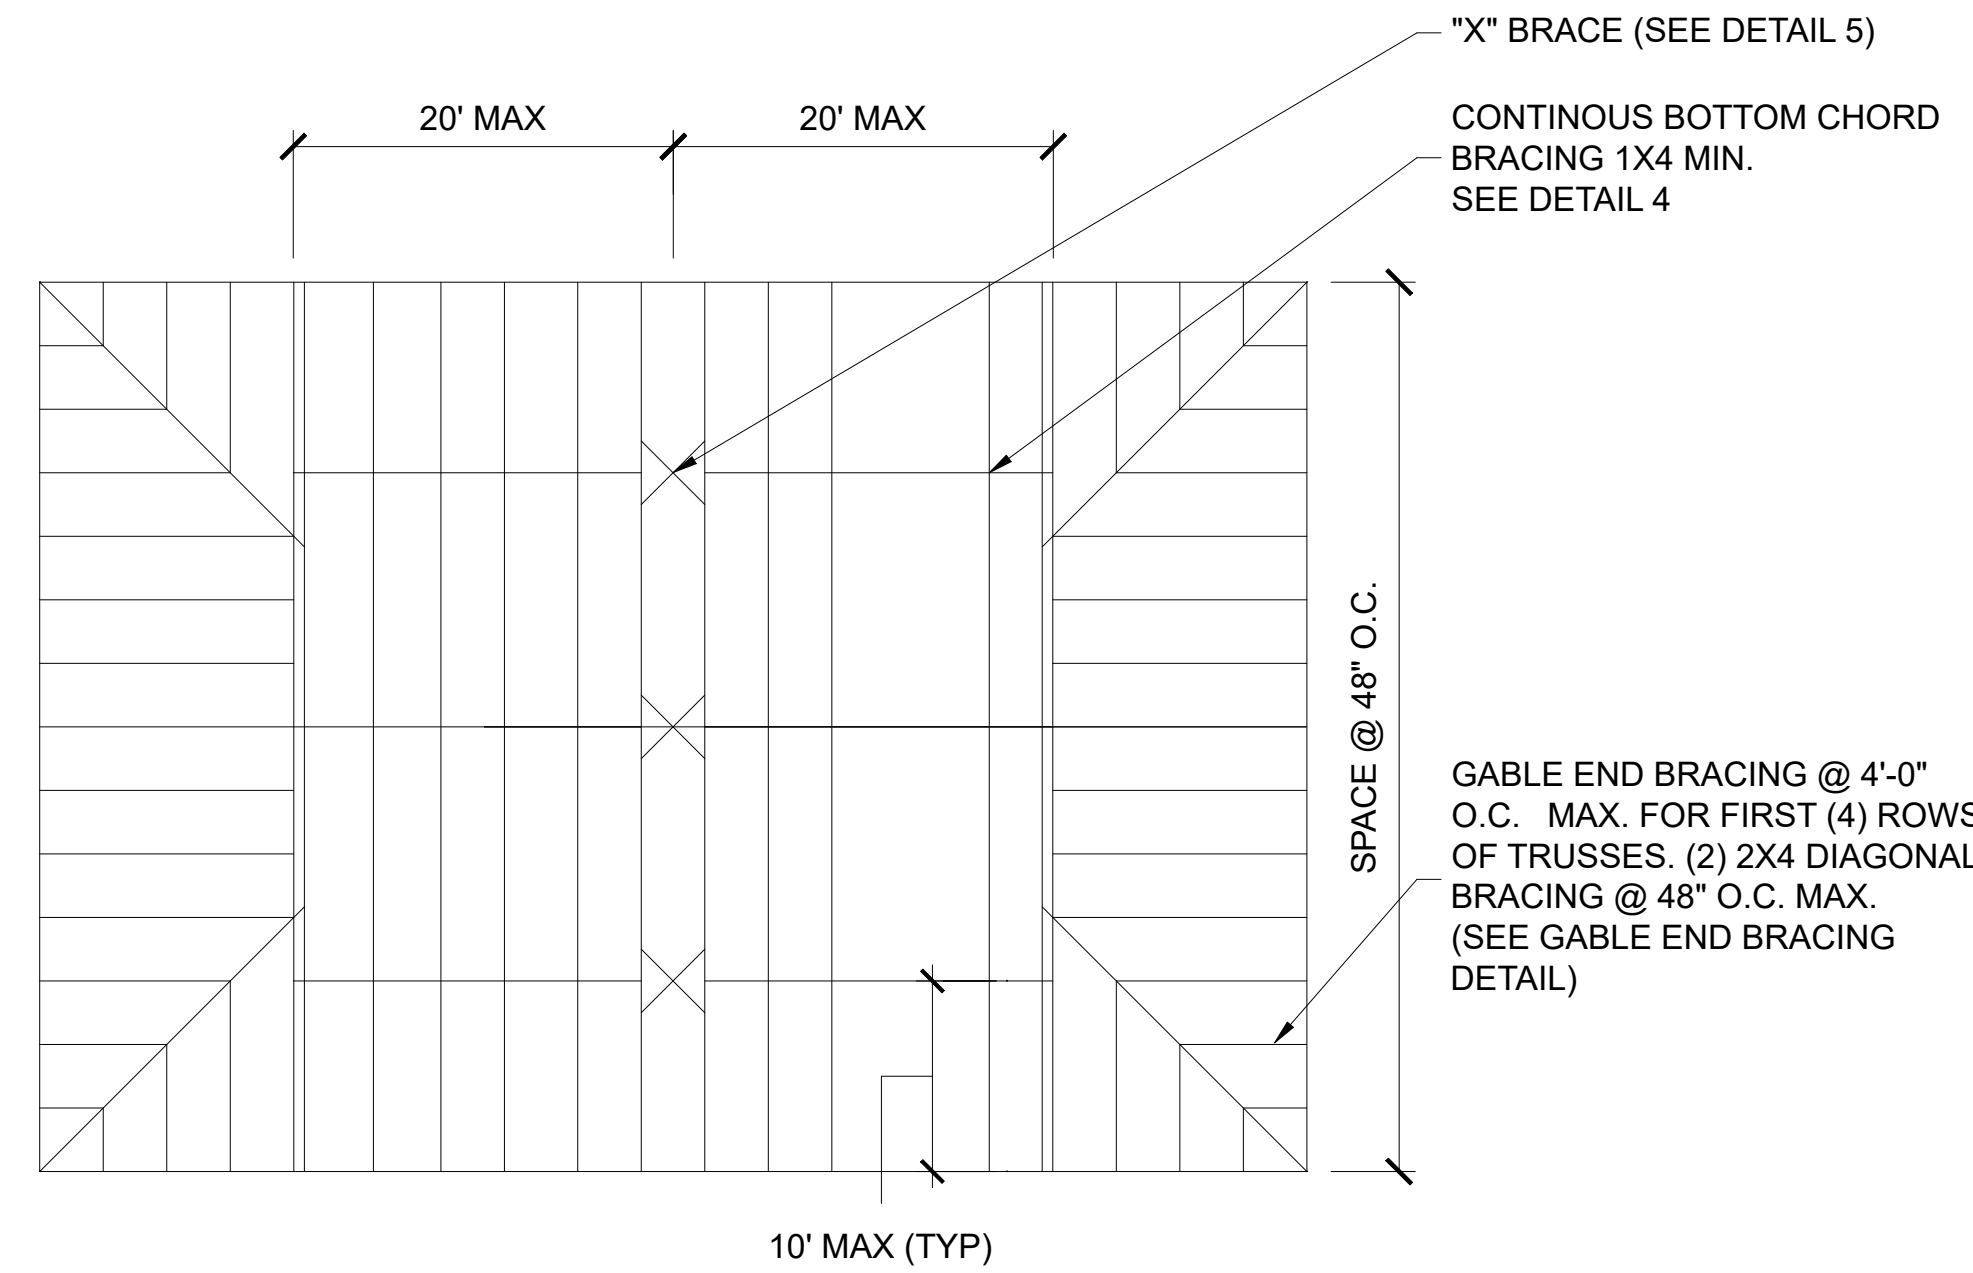


2 ROOF FRAMING DETAIL
SCALE: 3/4"=1'-0"

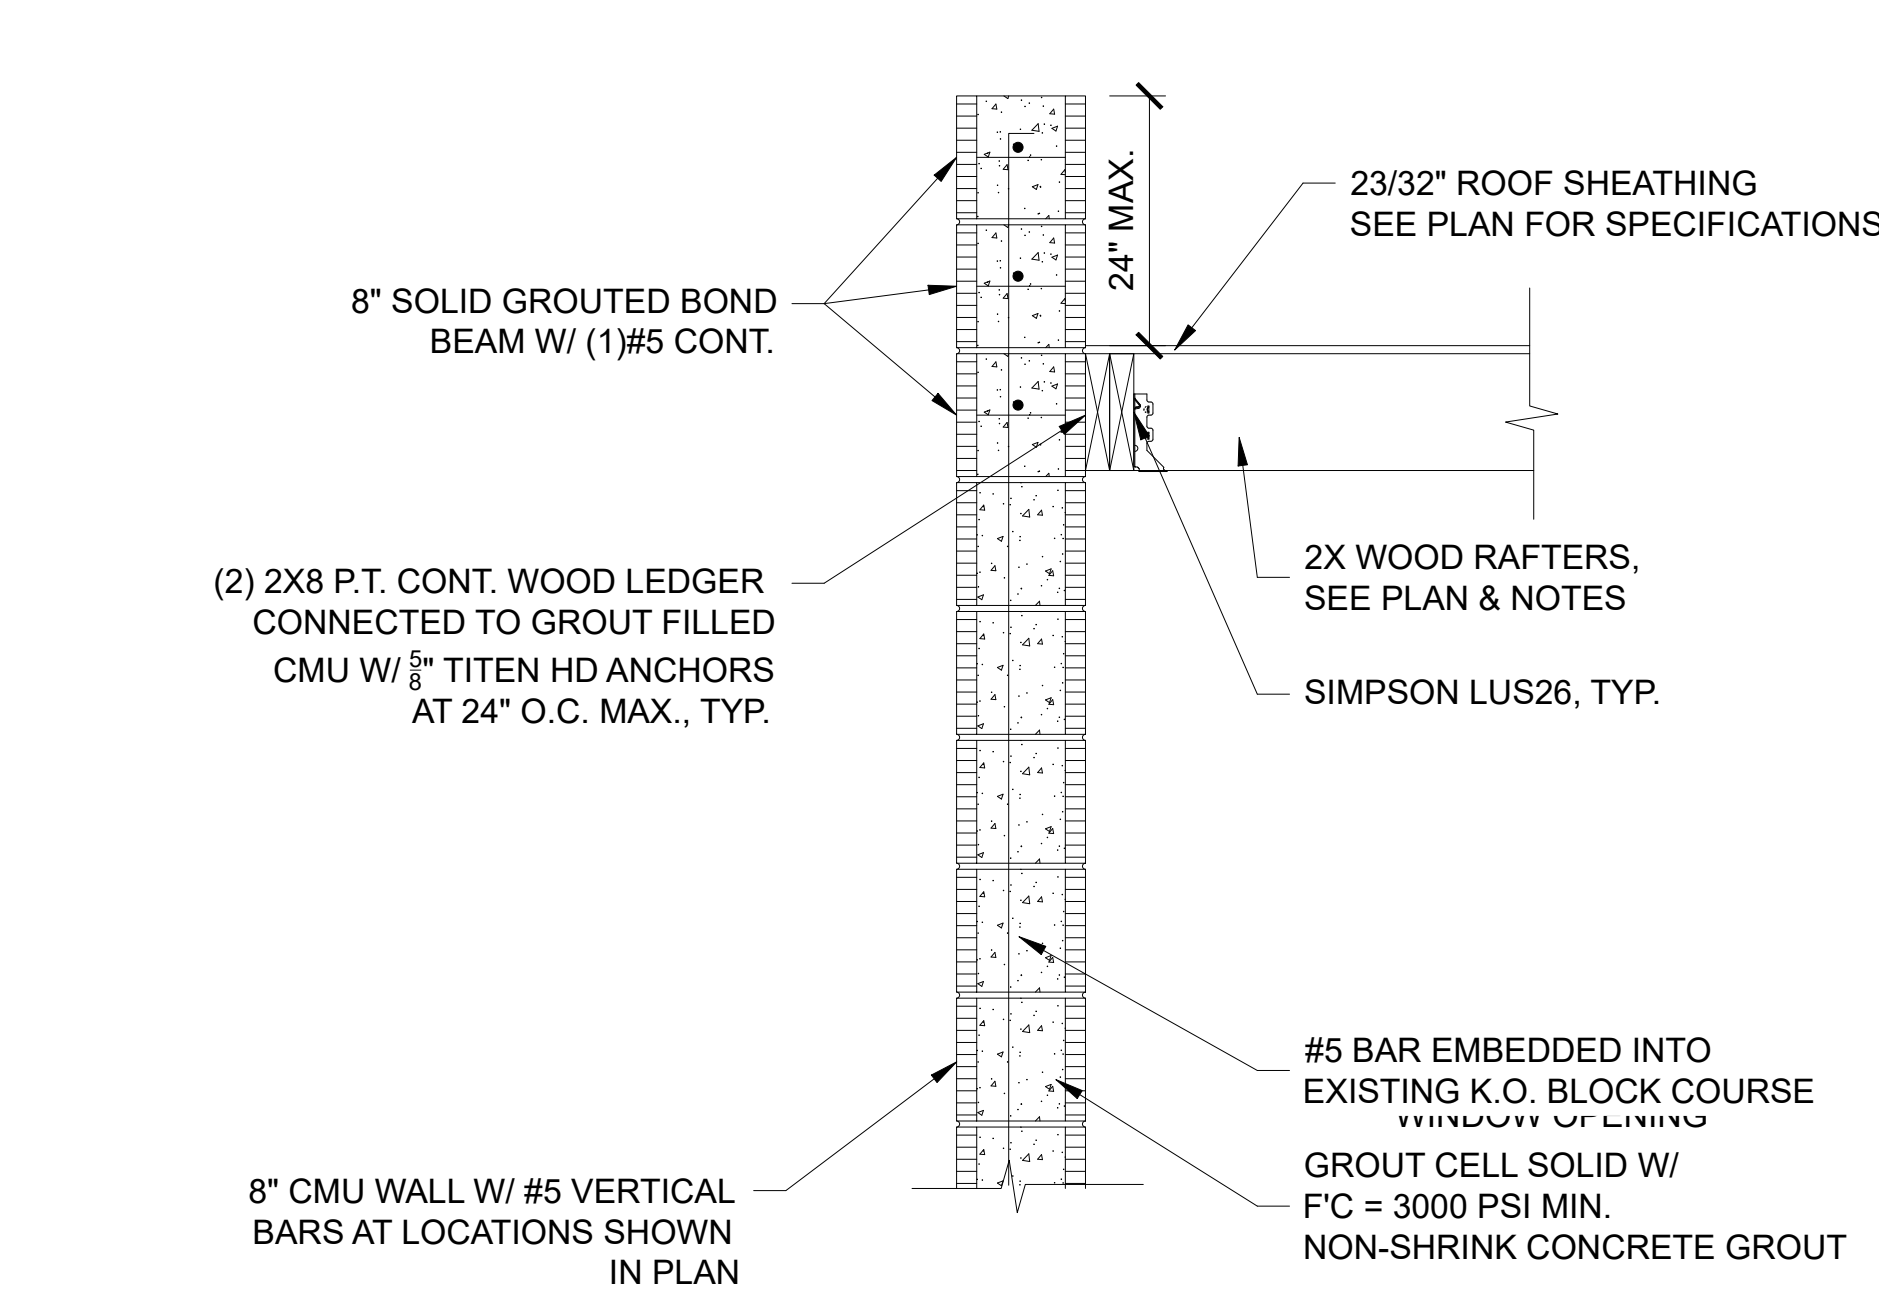


3 ROOF TRUSS TO CMU WALL
SCALE: 3/4"=1'-0"

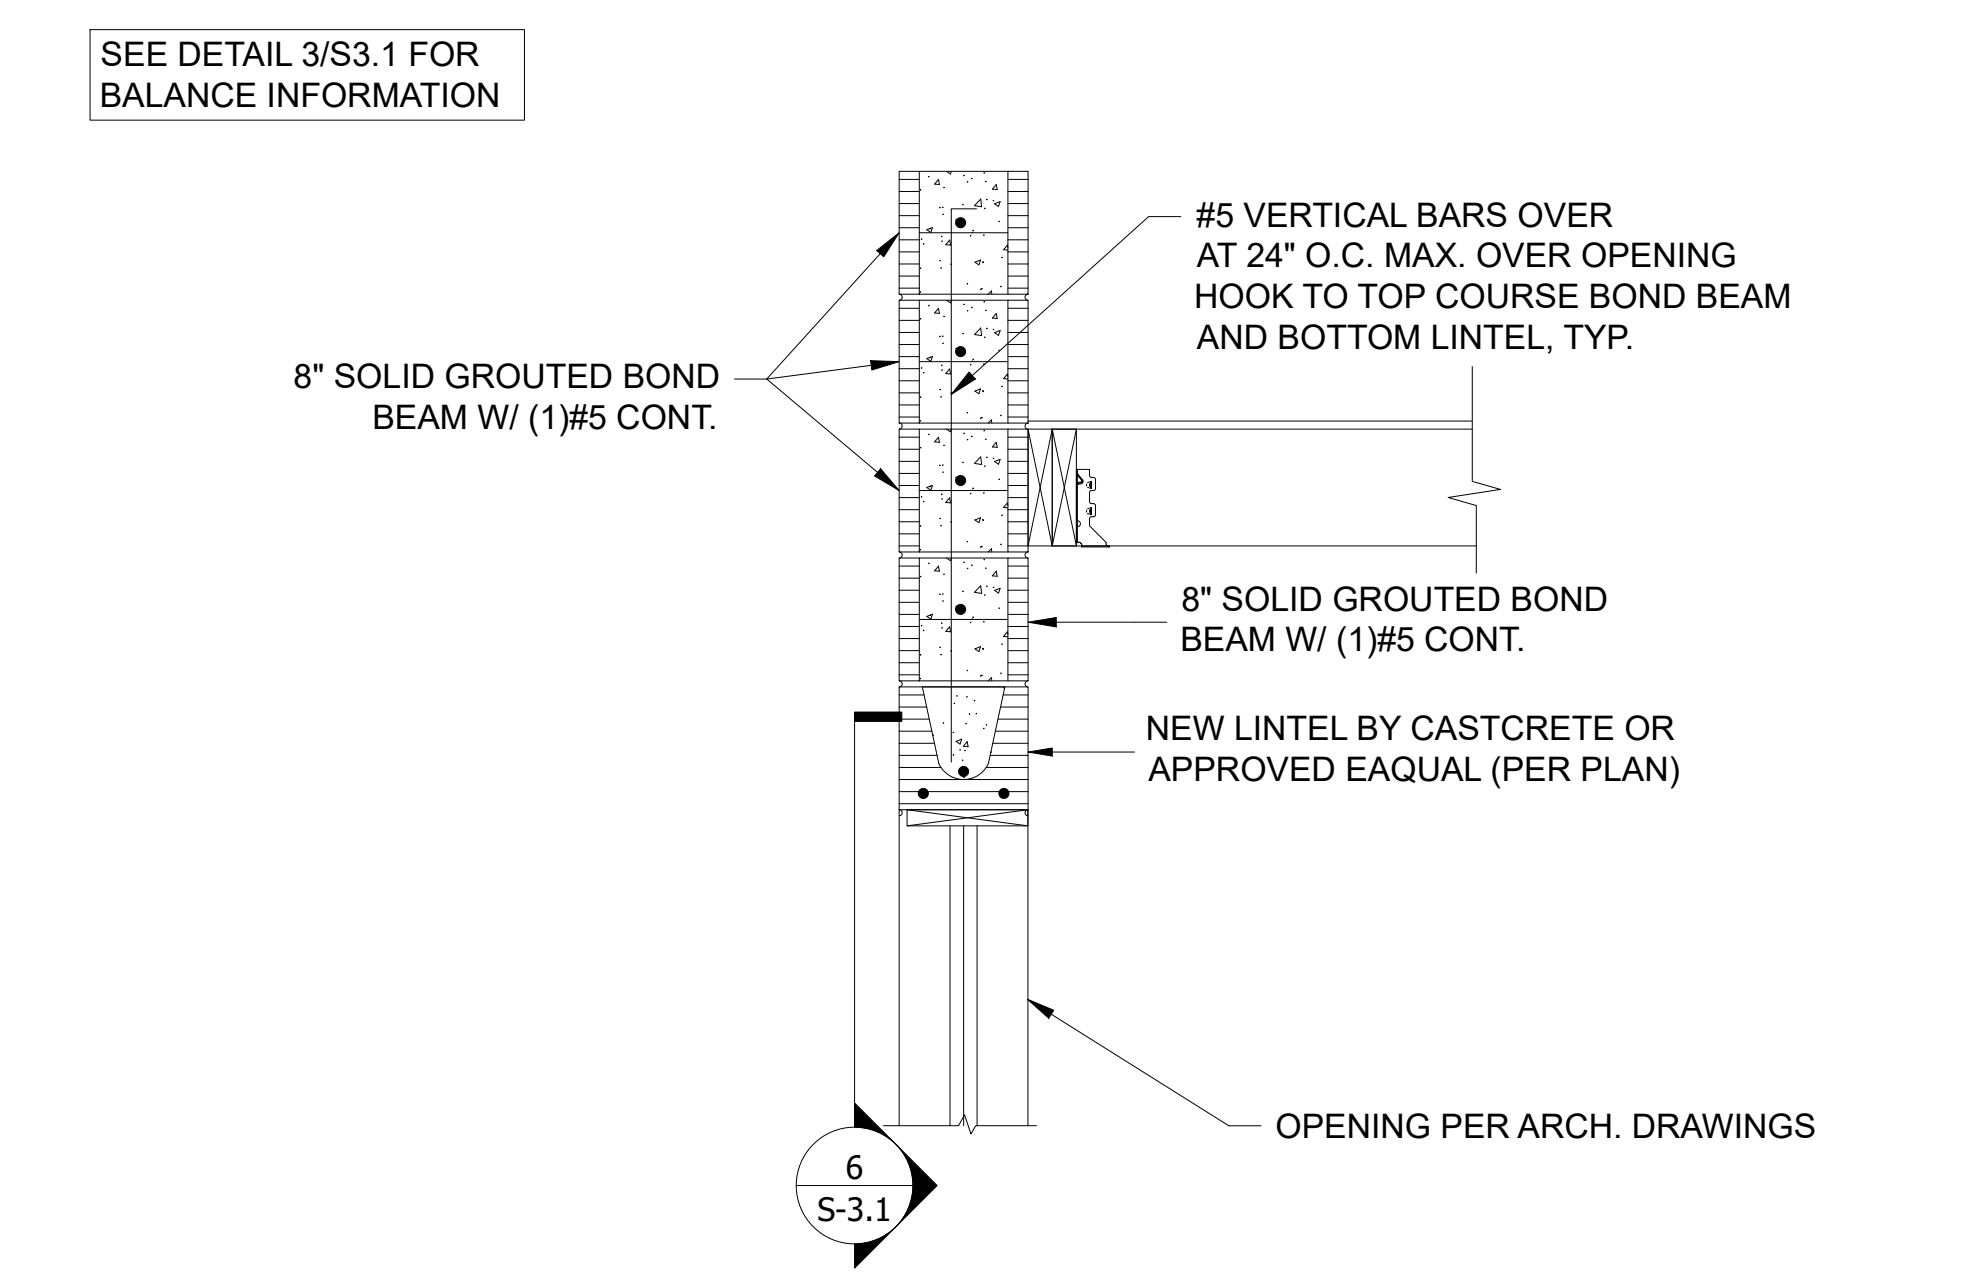


4 SECTION @ OPENING
SCALE: 3/4"=1'-0"

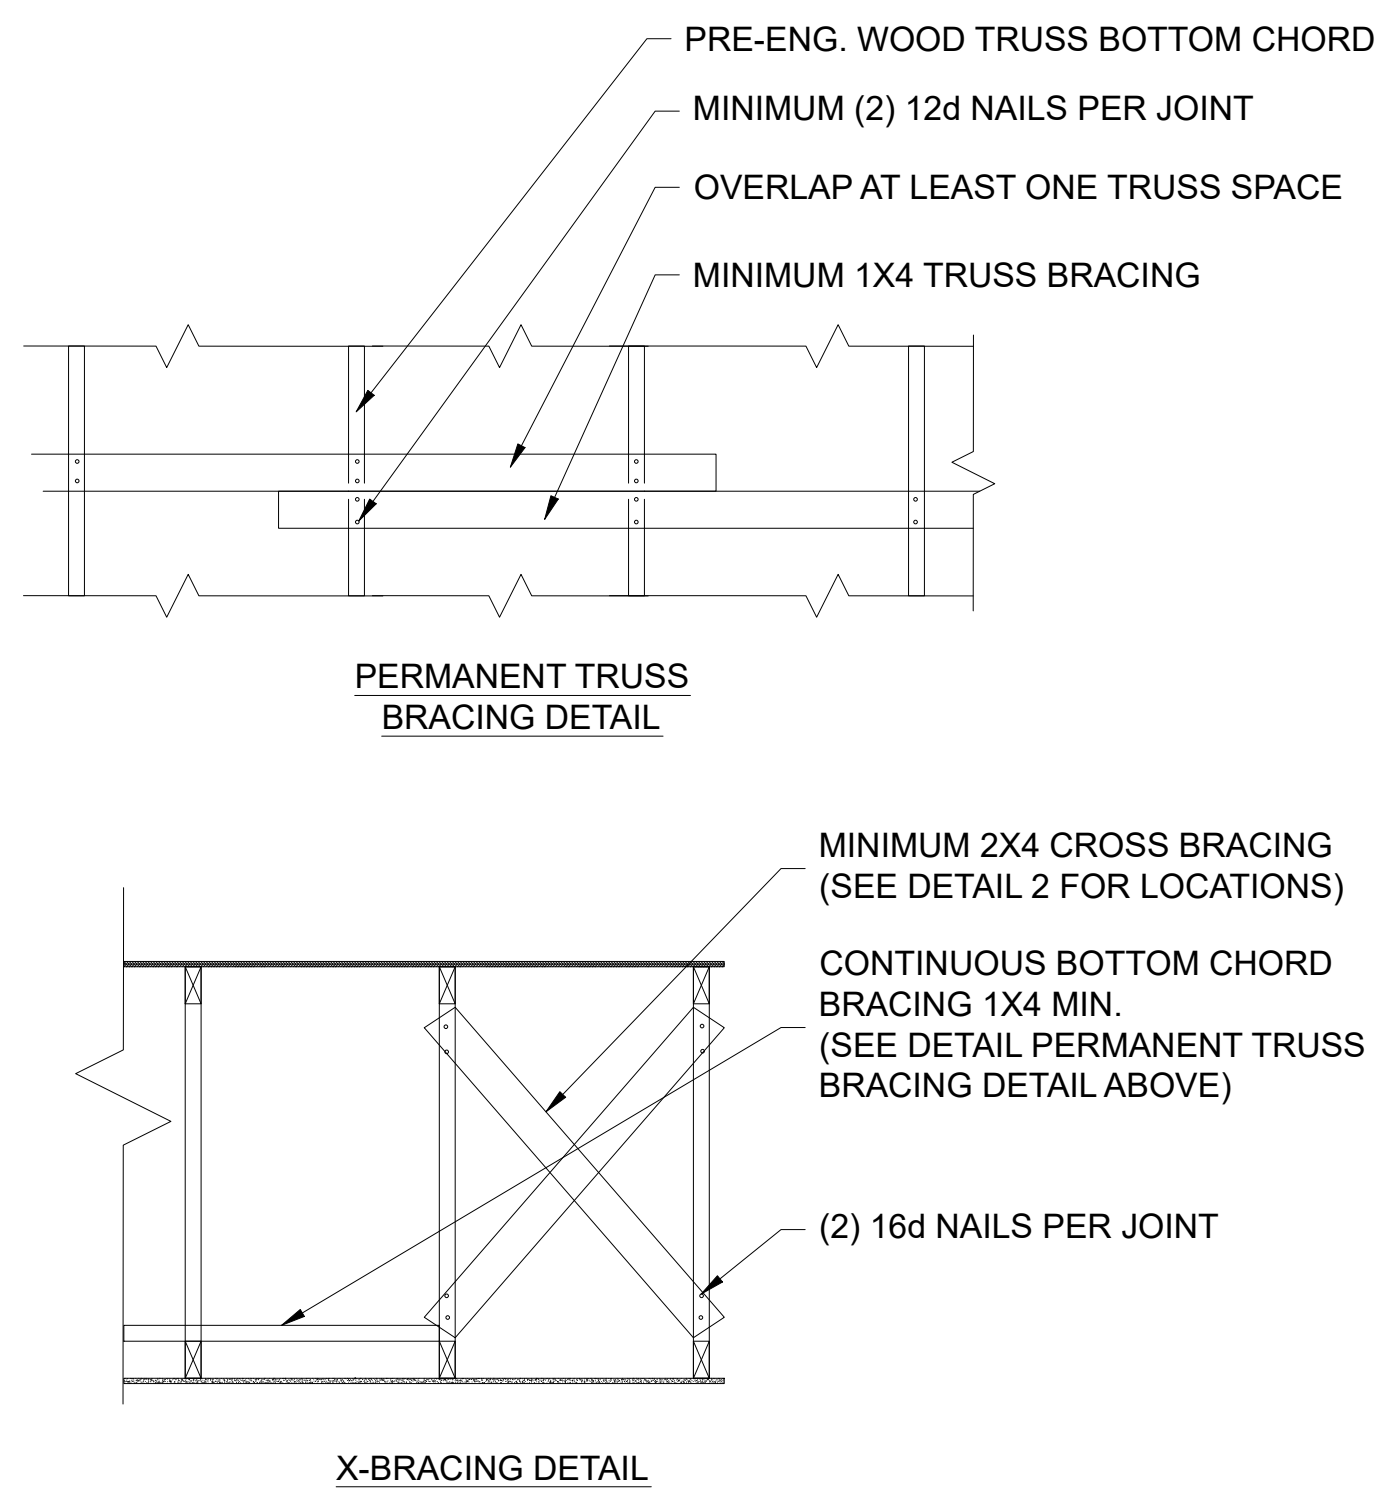


5 ROOF BRACING DETAIL
SCALE: 3/4"=1'-0"

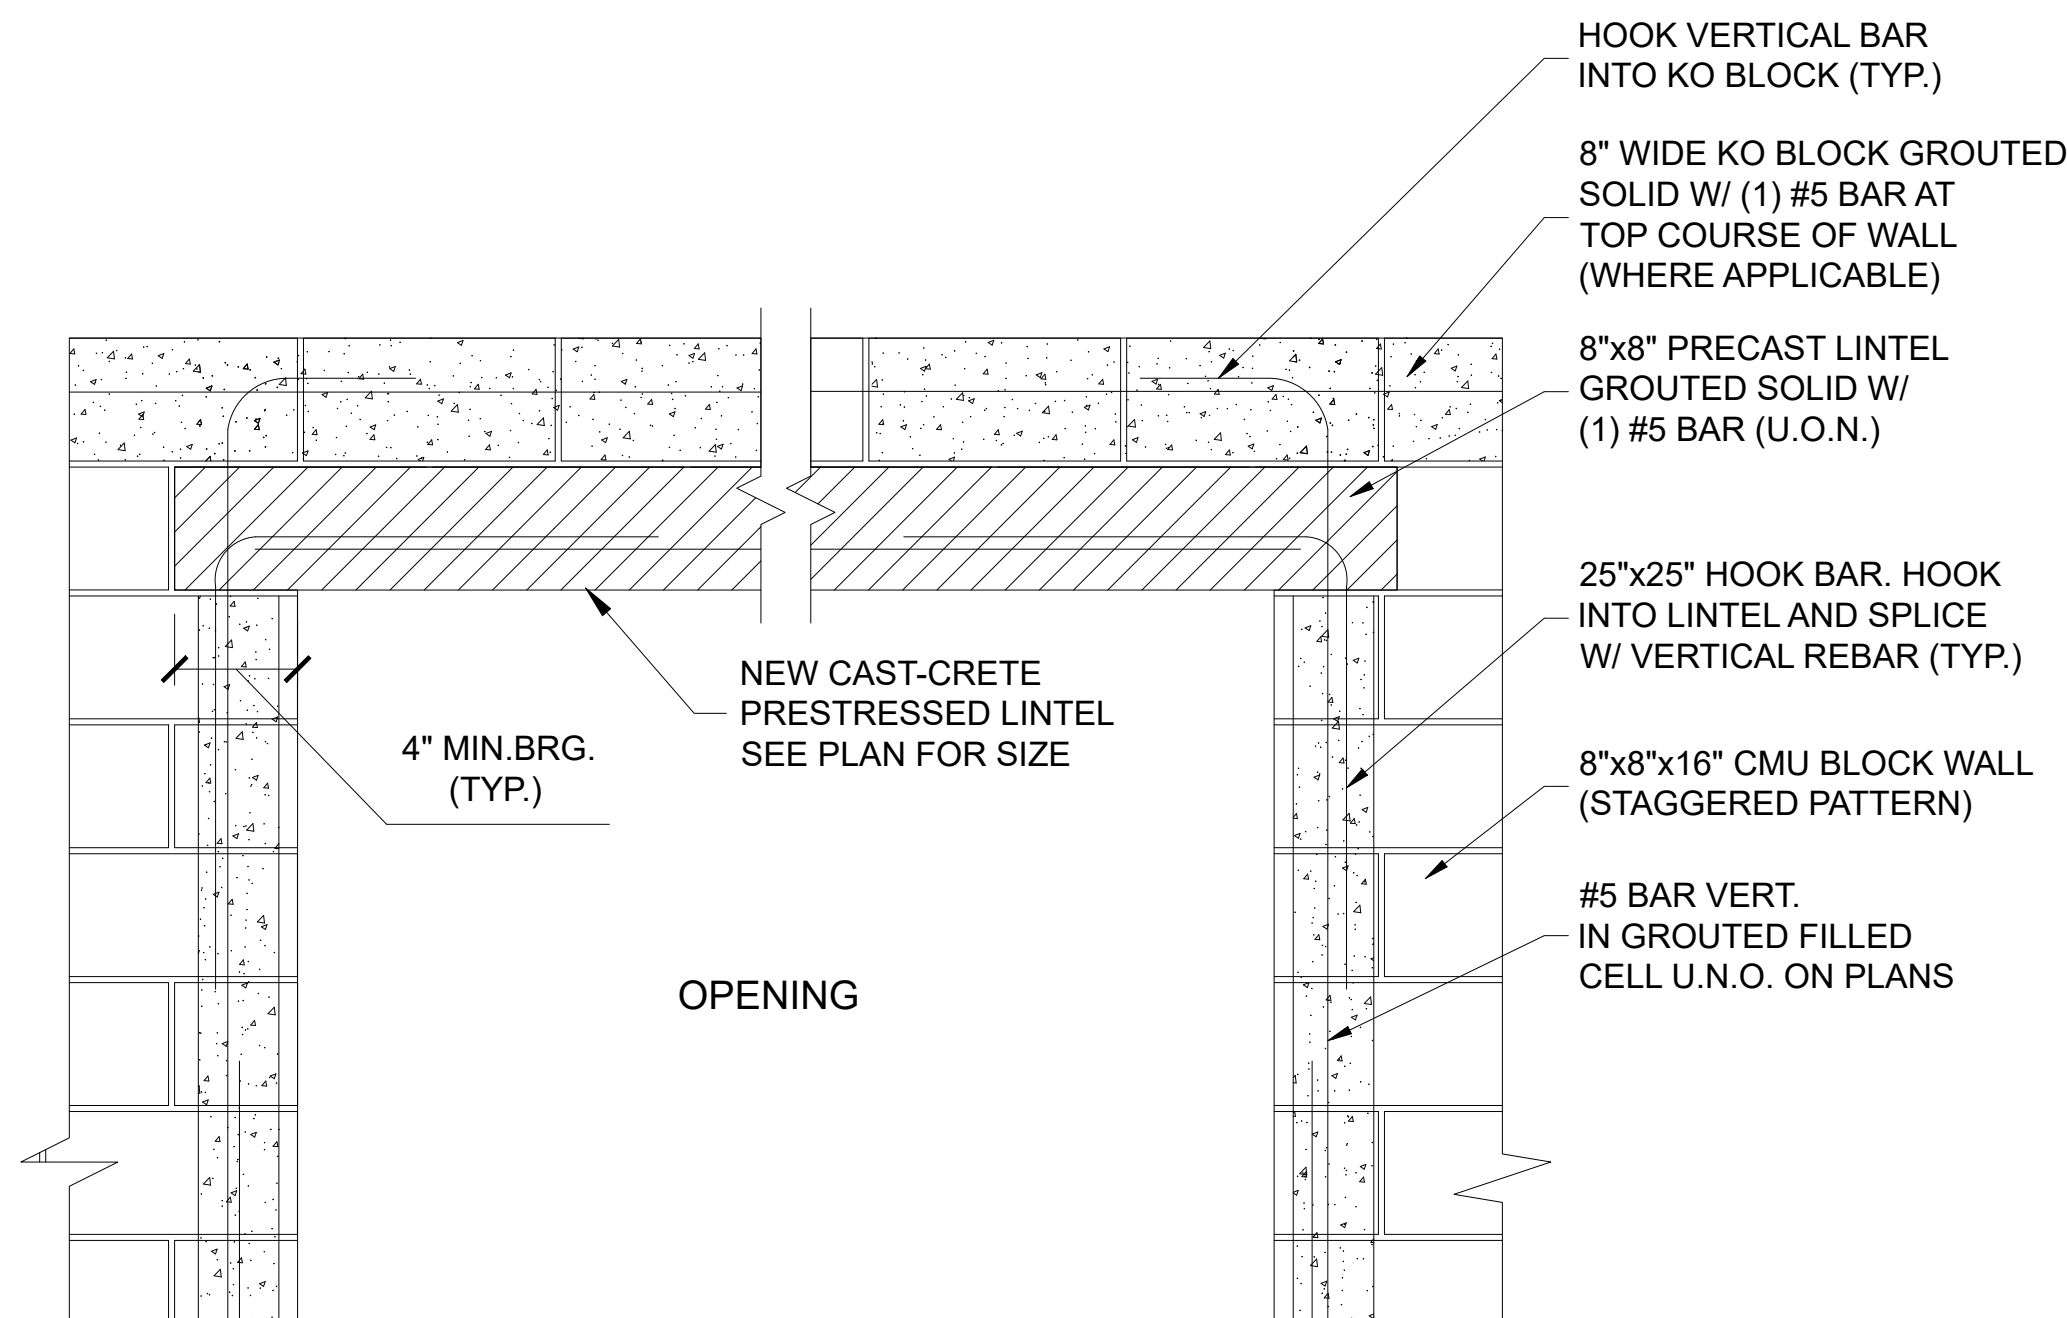


6 TYPICAL LINTEL ASSEMBLY
SCALE: 3/4"=1'-0"

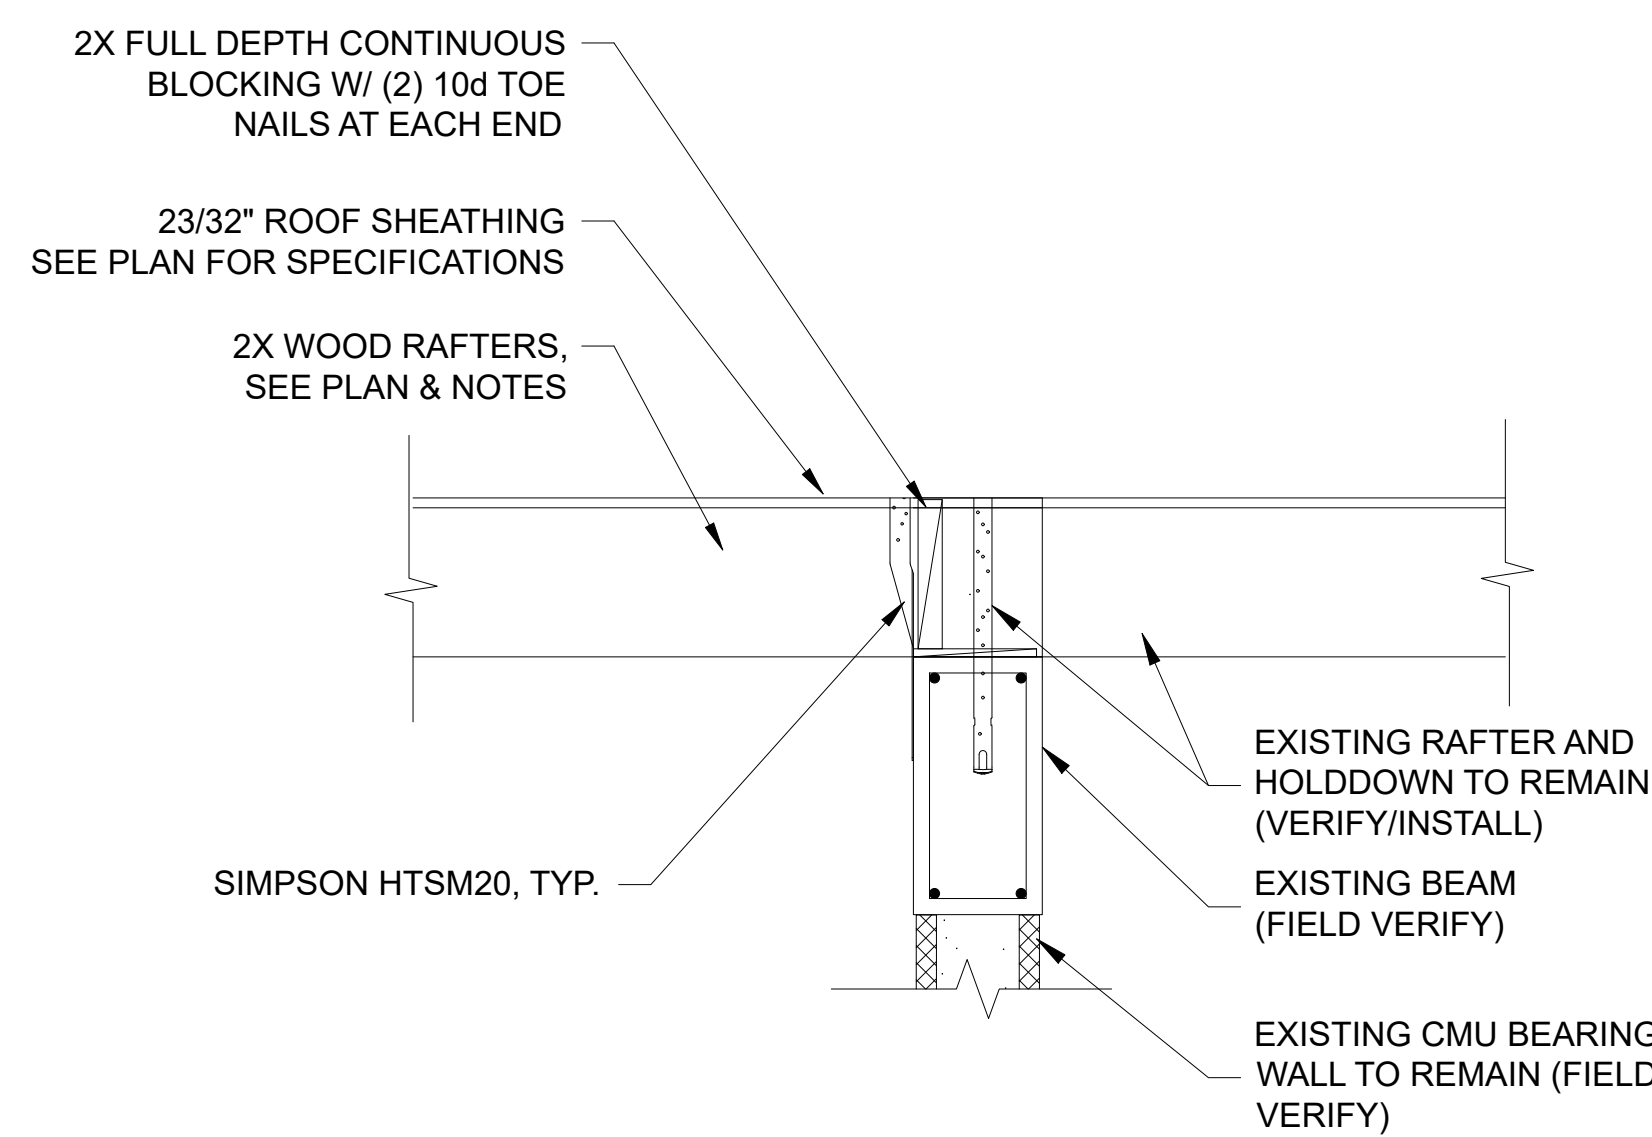


7 NEW RAFTER TO CMU DETAIL
SCALE: 3/4"=1'-0"

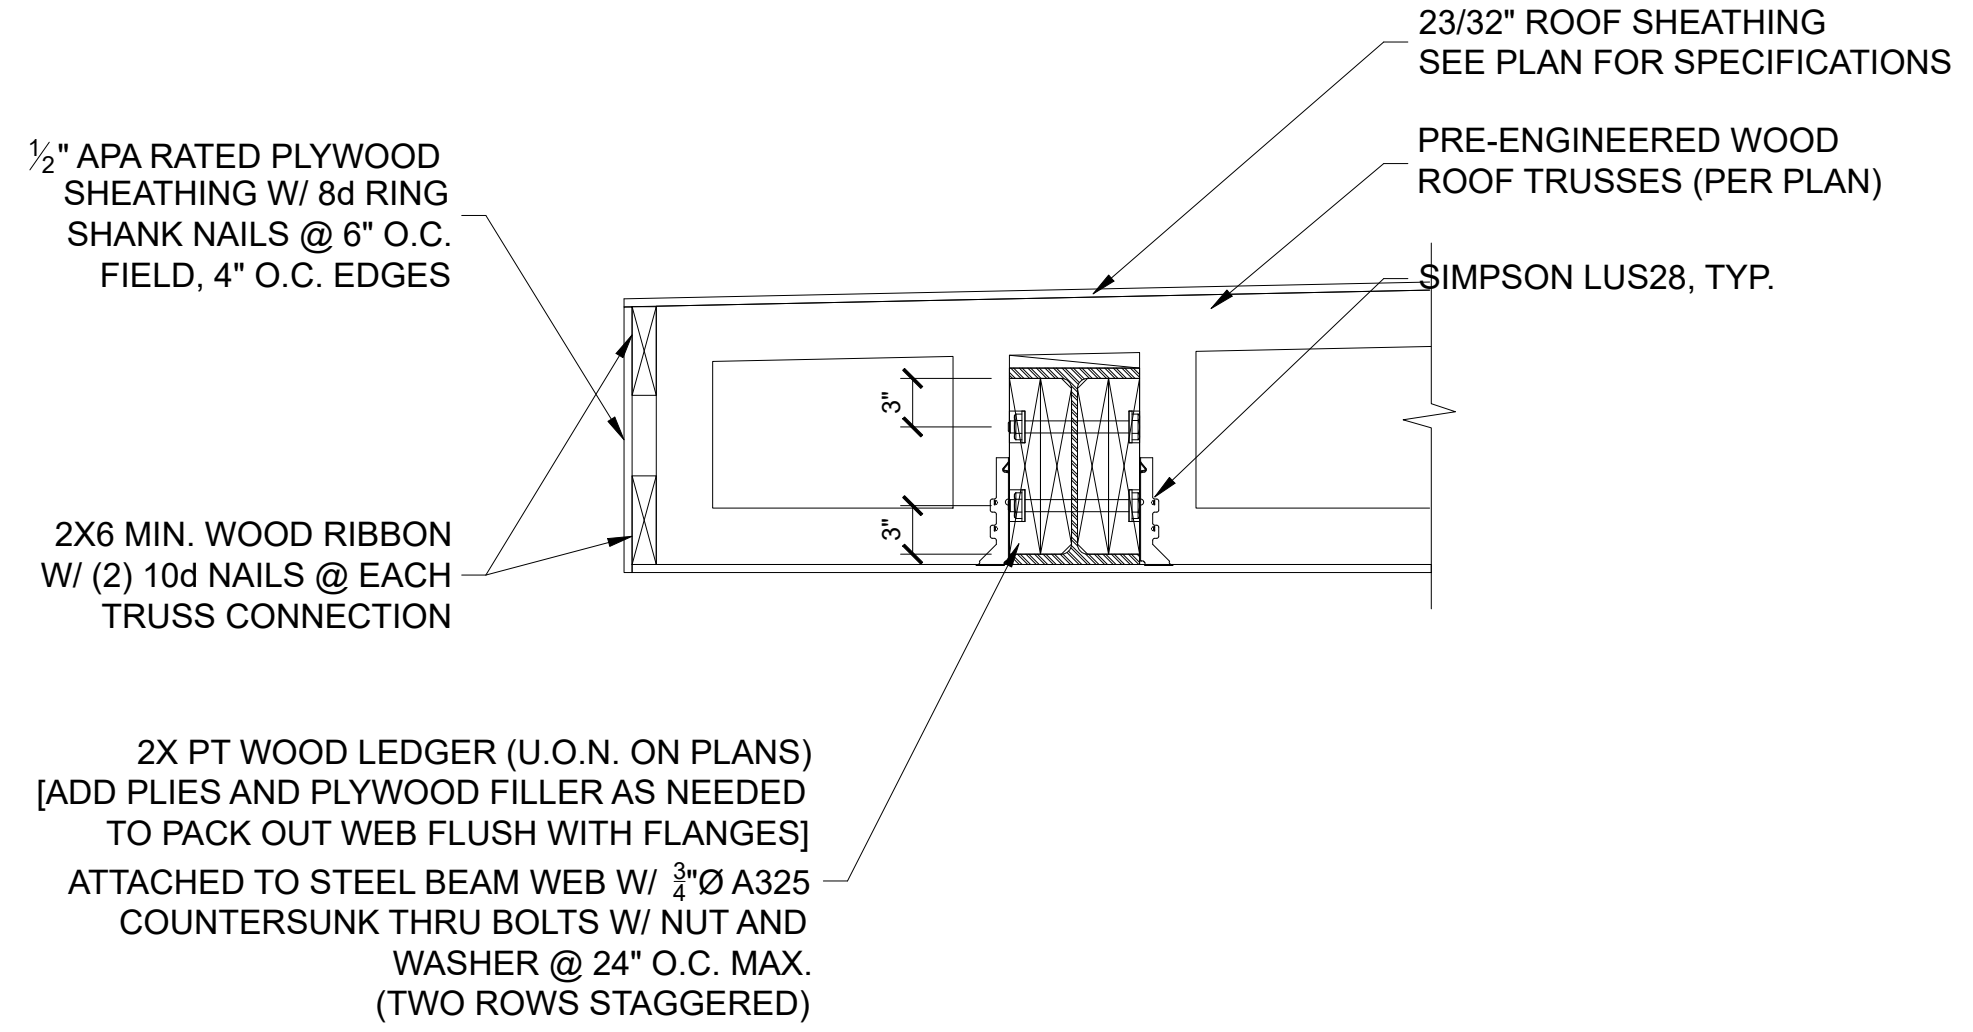

8 SECTION AT ROOF
SCALE: 3/4"=1'-0"

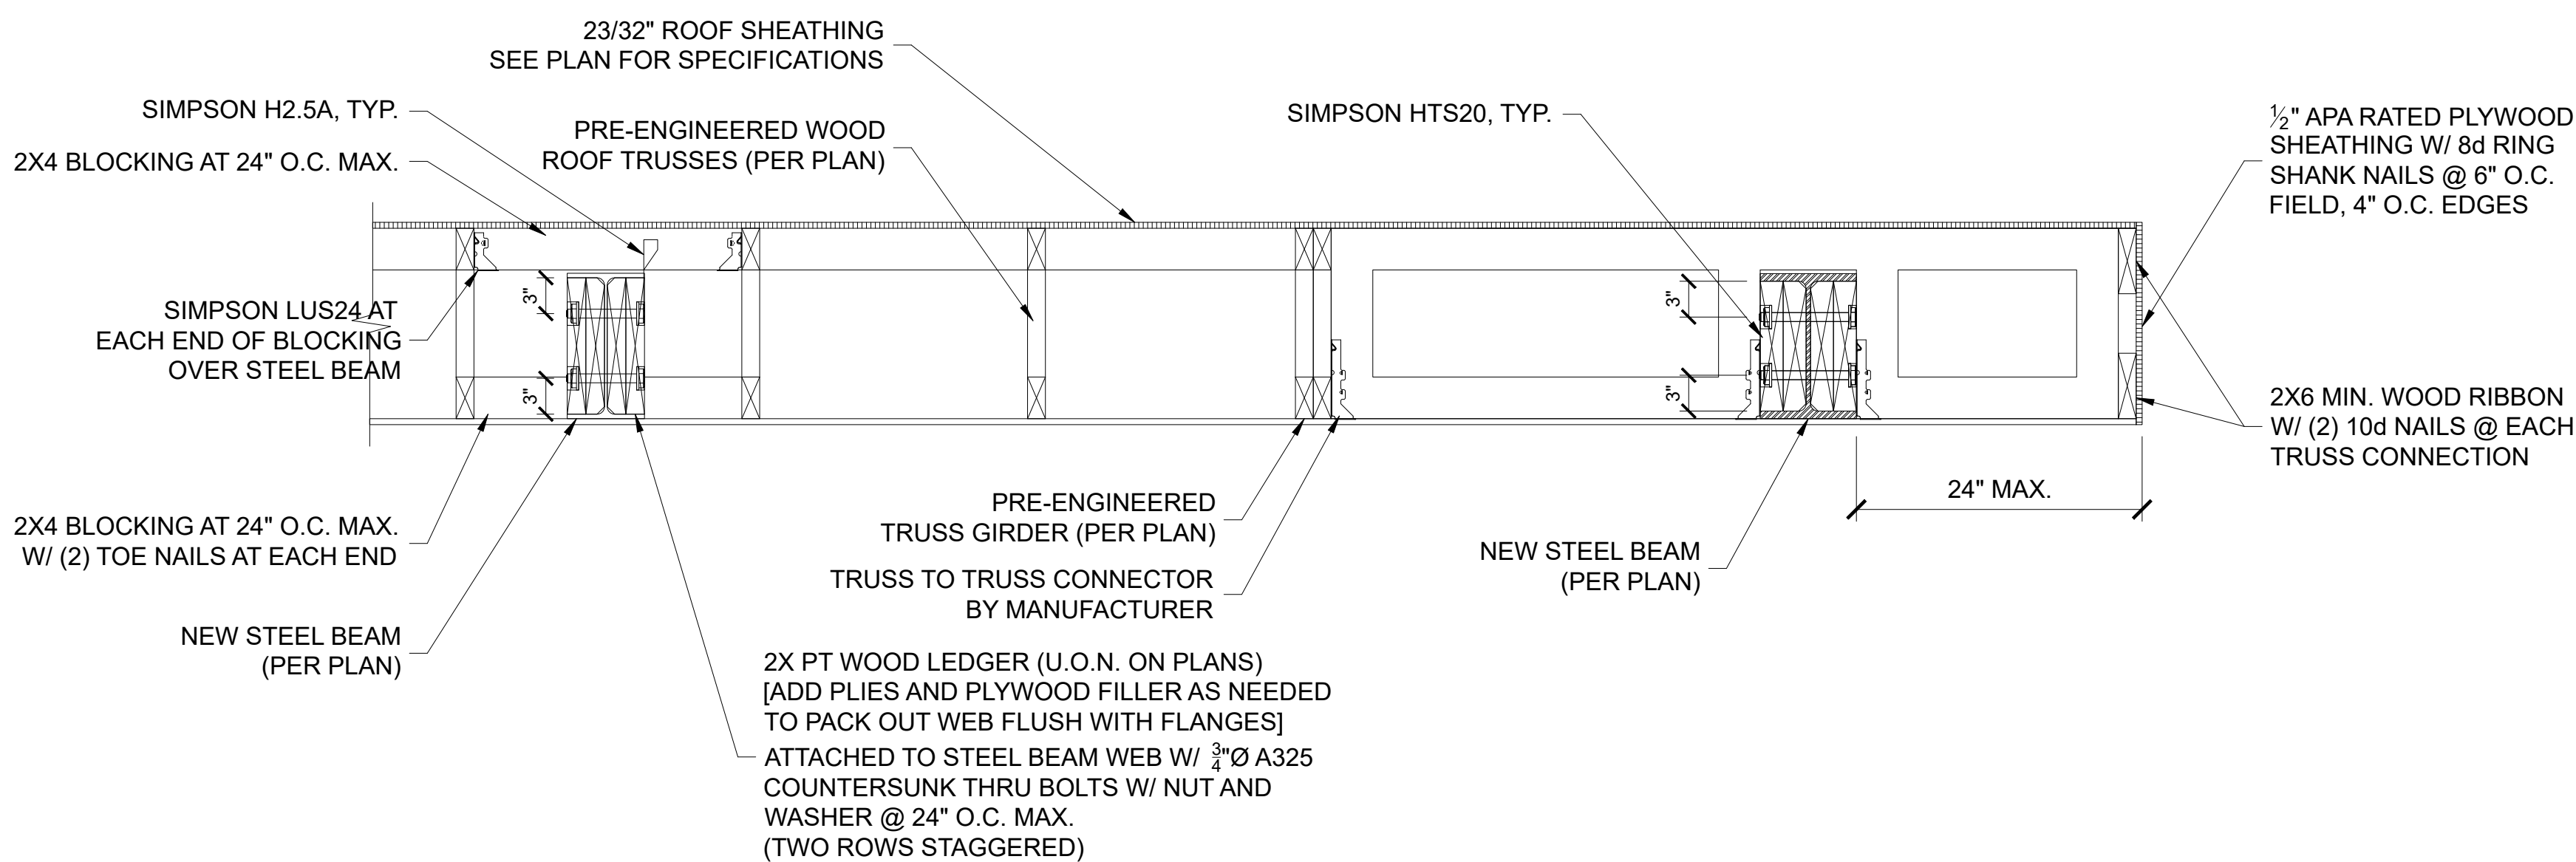

9 NEW ROOF TRUSS AT STEEL BEAM
SCALE: 3/4"=1'-0"

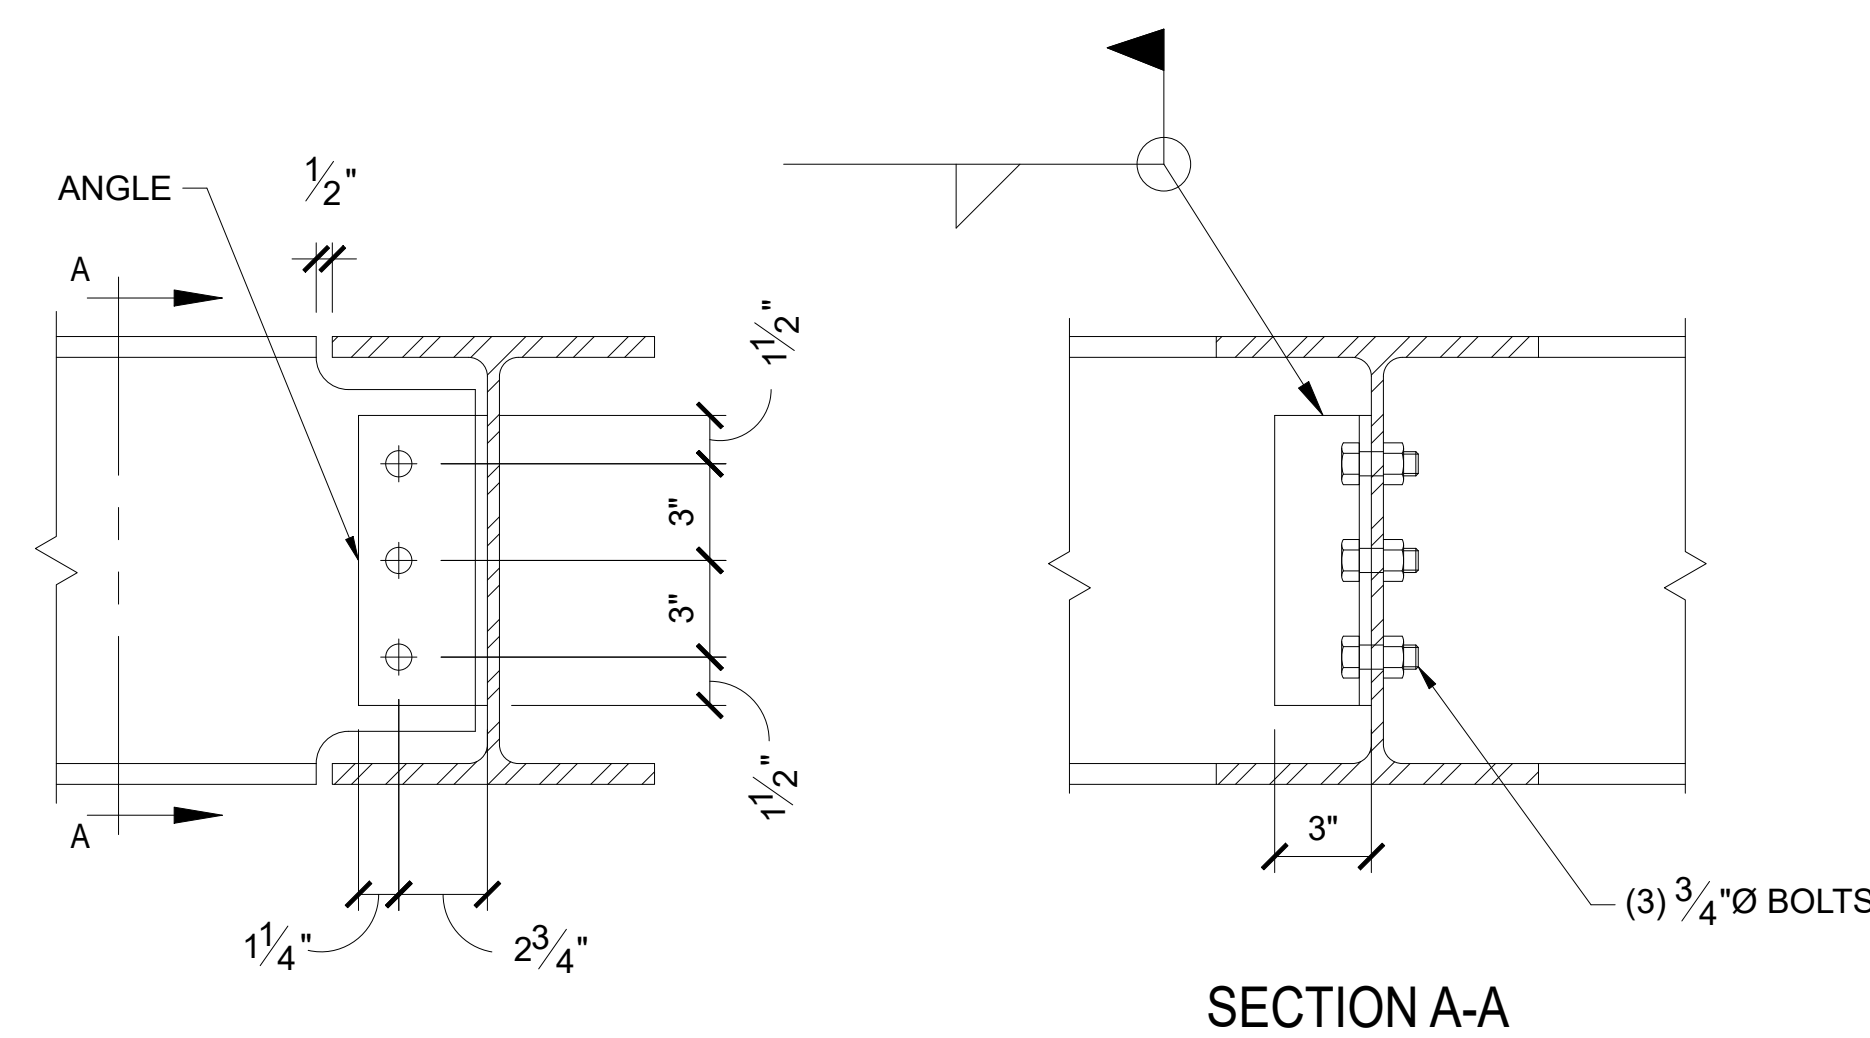

10 STEEL BEAM TO STEEL BEAM CONNECTION
SCALE: 1 1/2"=1'-0"



TYPICAL SPREAD FOUNDATION @ OPENING

CONC. FOUNDATION INTERSECTION DETAIL

TYPICAL MASONRY WALL CONSTRUCTION

MASONRY BOND BEAM DETAIL

NEW TO EXISTING SLAB

TYPICAL RETROFIT FILLED CELL DETAIL

NEW TO EXIST. CMU WALL/FOUNDATION DETAIL


TYPICAL SLAB REPAIR DETAIL

CONCRETE COLUMN DETAIL

STEEL BEAM CONNECTION


STEEL BEAM CONNECTION

SCALE: 3/4"=1'-0"

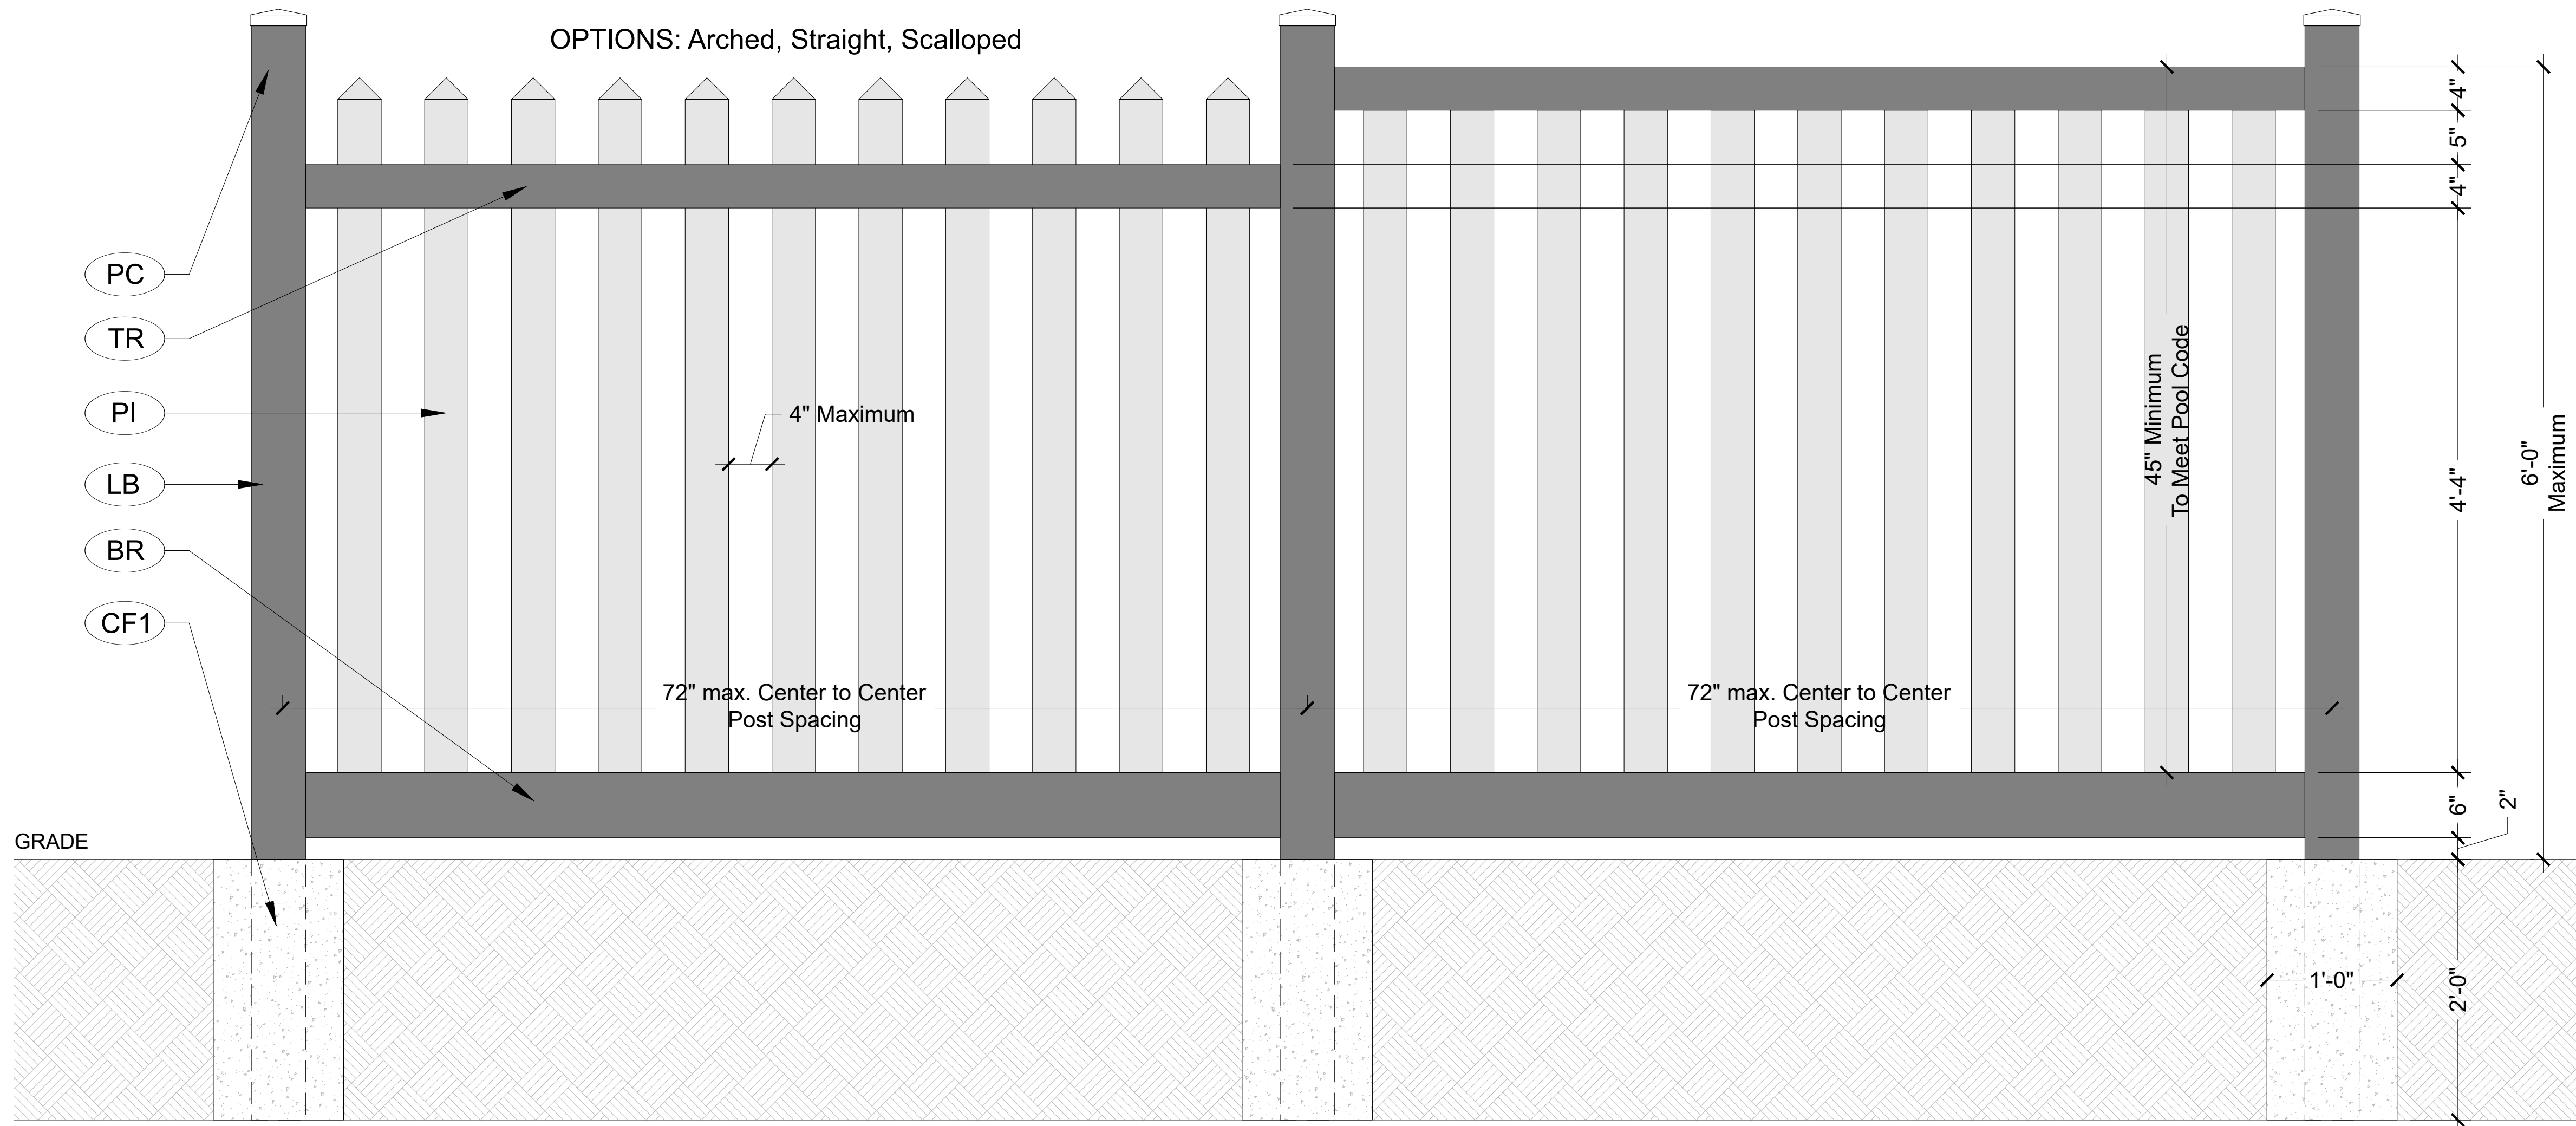


6 Fence Elevation
SCALE: 1/2"=1'-0"

POOL CODE COMPLIANT !! Can be used around pools but must adhere to the HEIGHT & GAP SPACING Required by the POOL CODE REQUIREMENTS!

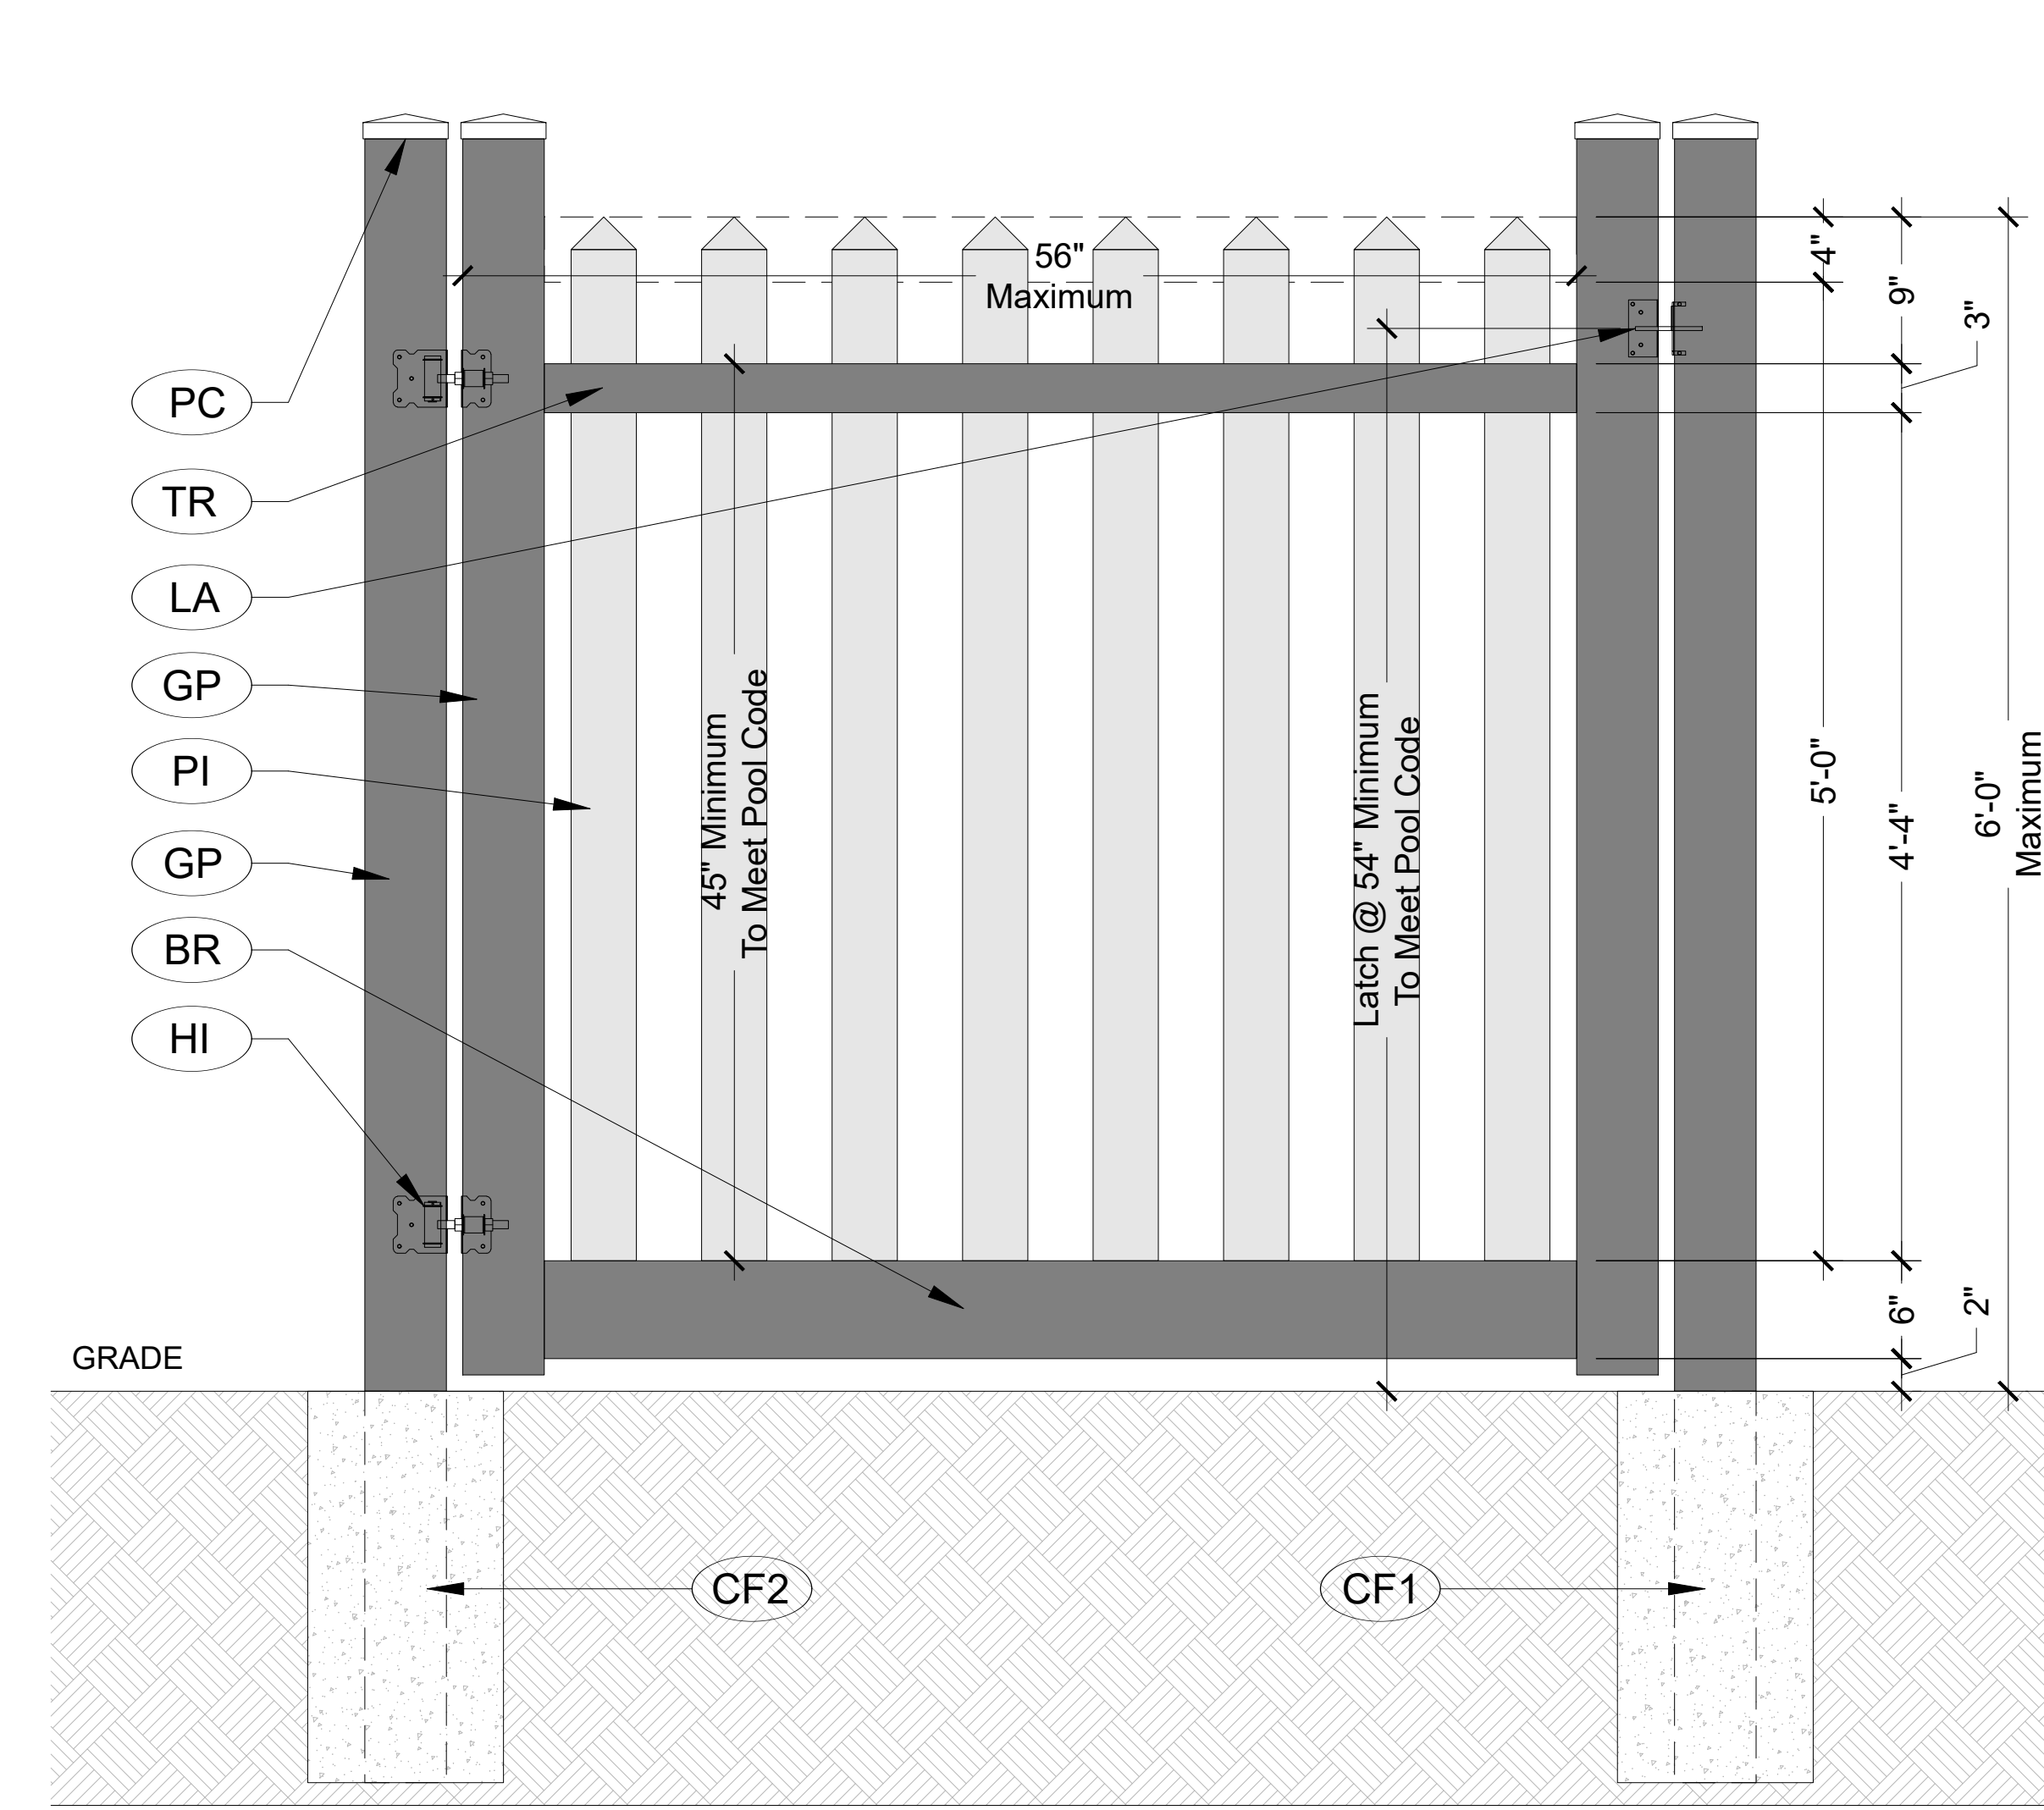

3 Gate DEtails
SCALE: 1/2"=1'-0"

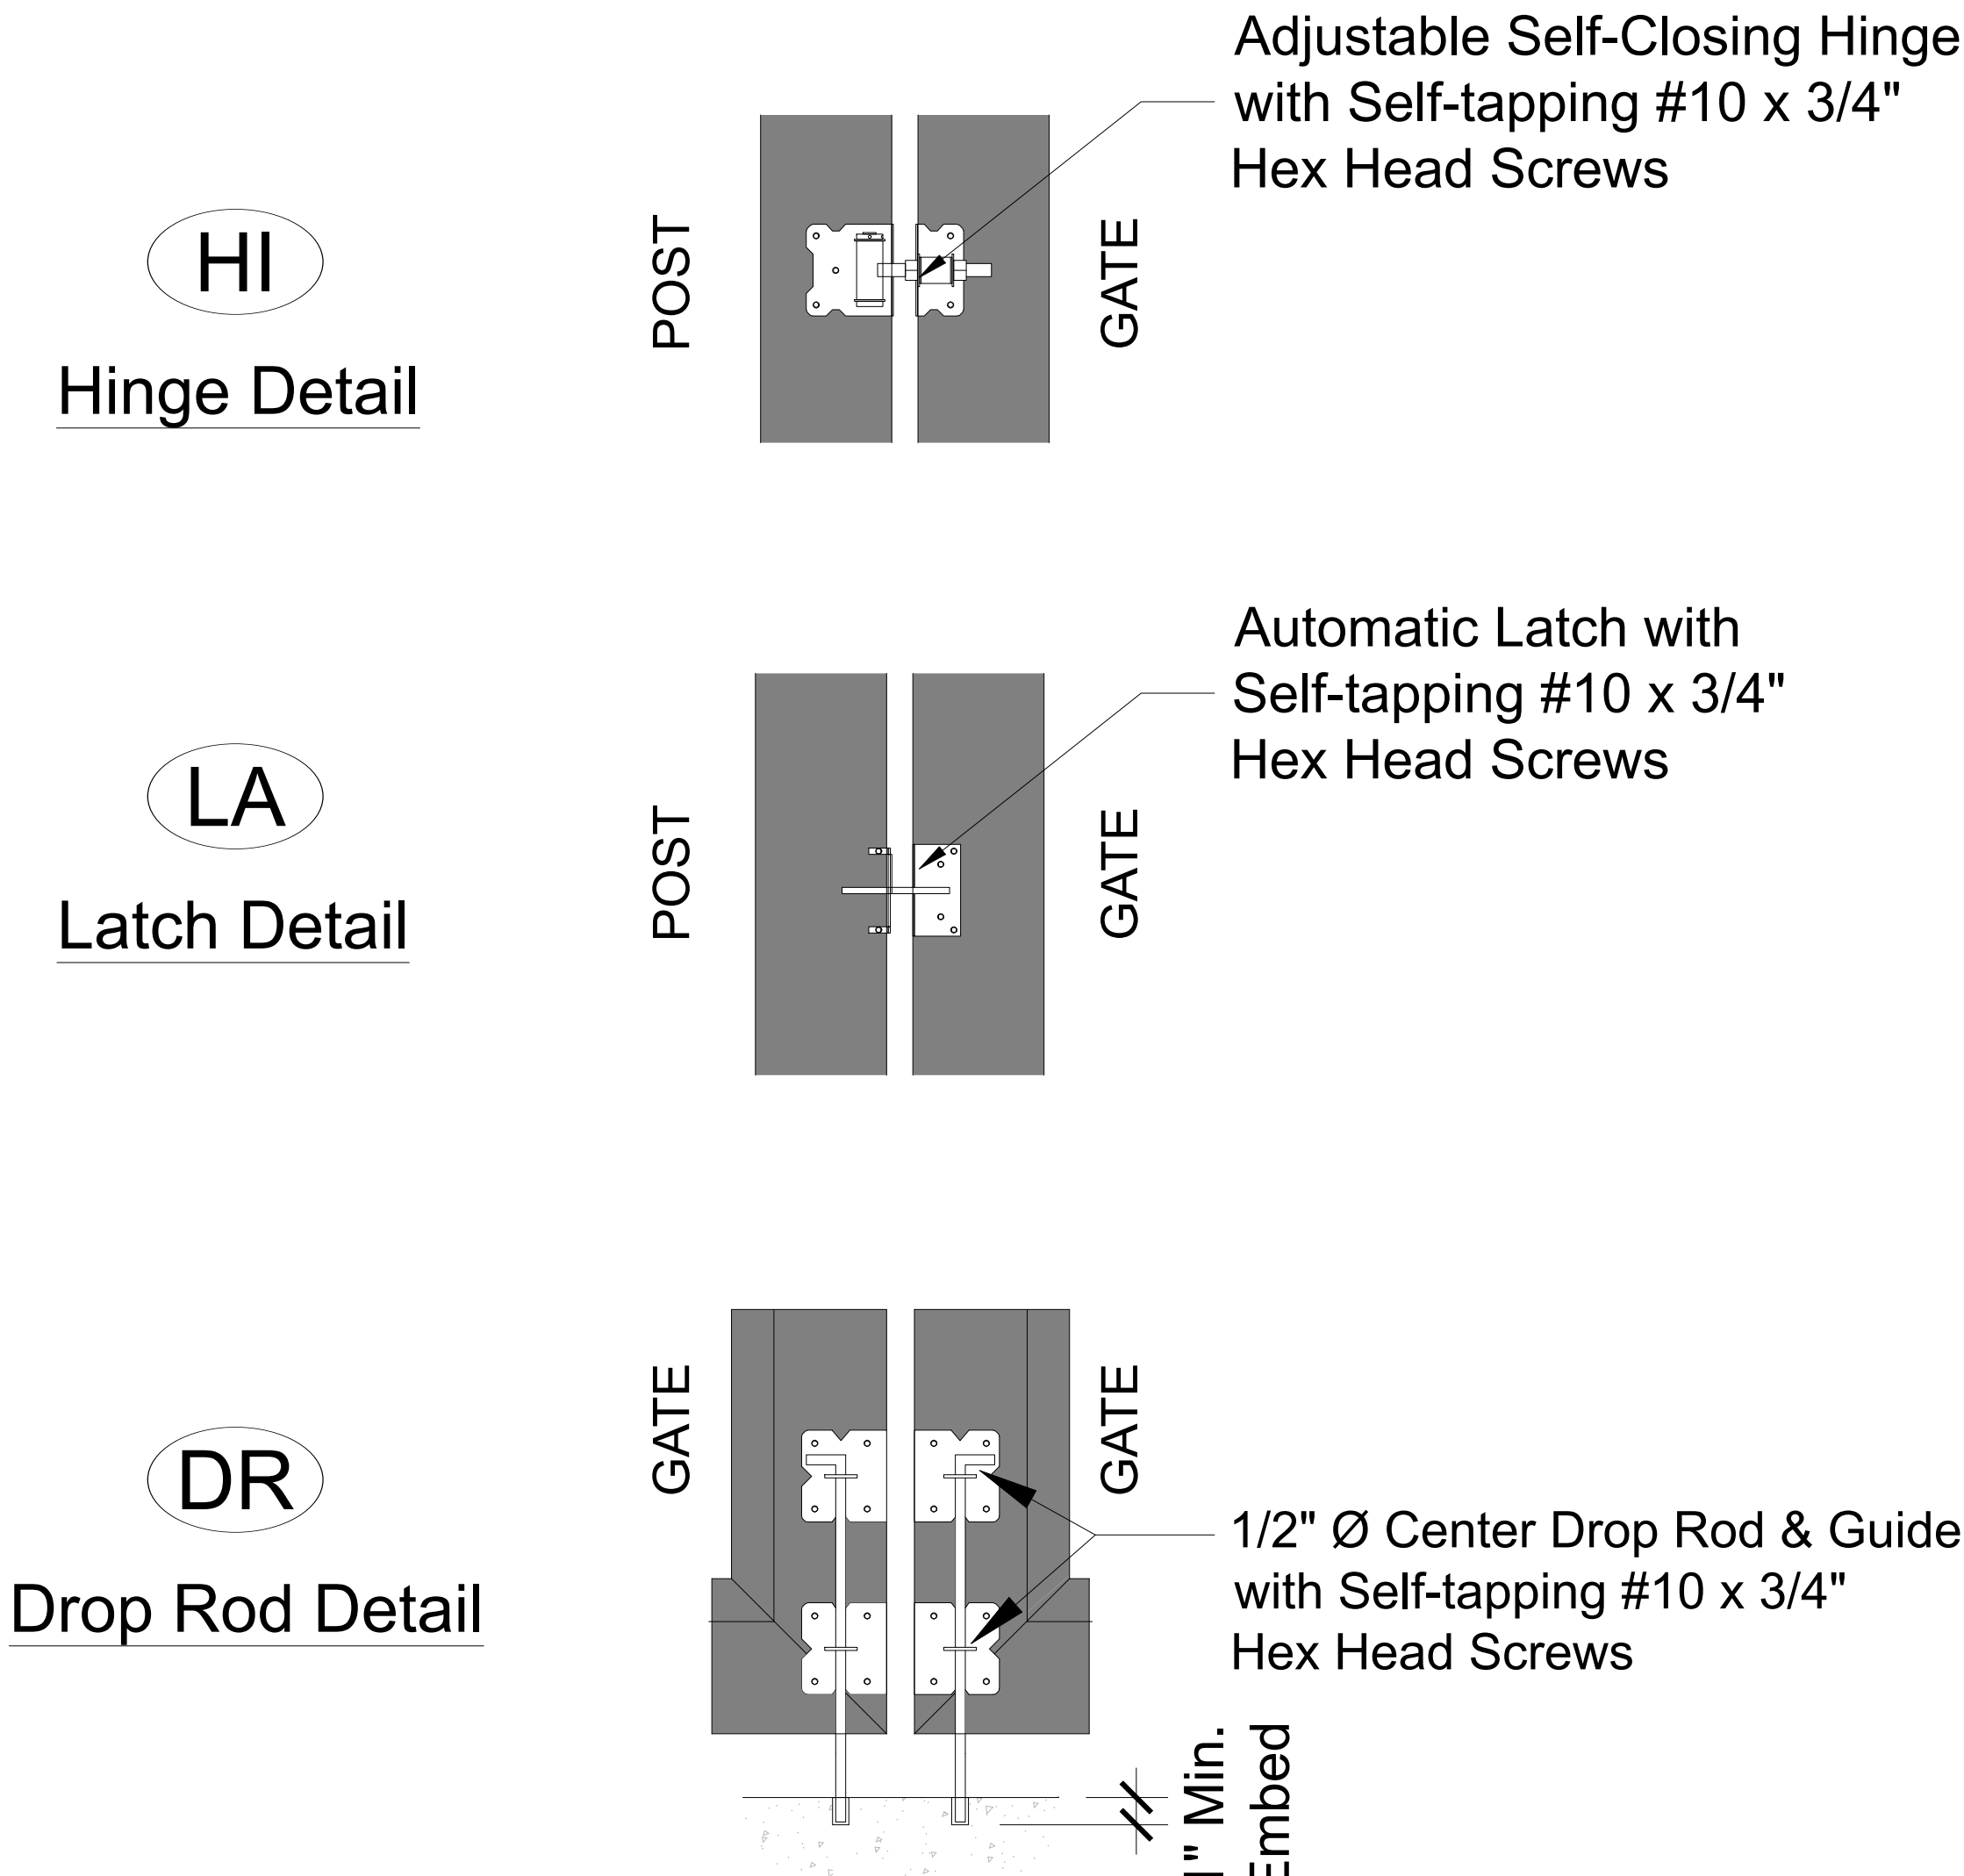


2 Hardware Details
SCALE: 1"=1'-0"

ID	DESCRIPTION	SIZE	THICKNESS	REMARKS
BR	Bottom Rail	2" x 6"	0.080	Deco Rail
DR	Drop Rod	1/2" Ø Rod	-	Self-tapping #10 x 3/4" Hex Head Screw
GB	Gate Brace	0.895" x 3"	0.060	-
GP	Gate Post	5" x 5"	0.160	Stiffener post insert required
HI	Hinge	6"	-	Heavy Duty, Self Closing
LA	Latch	2" x 4"	-	Self Latching (@36" aff min.)
LP	Line Post	5" x 5"	0.135 or 0.160	(0' ot 4') 0.135" required (+4'-6"> 0.160")
PC	Post Cap	Match Post	0.080	-
PF	Post Footing	12"Ø x 36"	N/A	2,500 psi Concrete
PI	Picket	7/8" x 3"	0.050	OPTION: 1.5" x 1.5" Square Picket
PS	Post Stiffener	4.52" x 4.52"	0.060	Tensile: 50 Ksi Yield: 38 Ksi
TR	Top Rail	2" x 3-1/2"	0.090	-

- DESIGN GENERAL NOTES:**
- DESIGN (DECORATIVE BARRIER AT GRADE) COMPLIES WITH THE REQUIREMENTS OF THE FBC 2023, 8TH EDITION & ASCE 7-22, VULT= 115 MPH (CATEGORY L, 3 SECOND GUST), EXPOSURE D.
 - LIMITATIONS: GATE SHALL BE FULLY OPENED AGAINST FENCING AND SECURELY LOCKED IN PLACE DURING HIGH VELOCITY WIND EVENTS > 75 MPH. GATE IS DESIGNED & ENGINEERED AS A DUAL LEAF BUT MAY ALSO BE A SINGLE LEAF USING A GATE POST ON EACH SIDE WITH A LATCH AND PAIR OF HINGES.
 - GATE MAY BE INSTALLED SINGLE OR DOUBLE UP TO THE MAXIMUM WIDTH OF EACH LEAF.
 - THE DESIGN OF THIS FENCE IS TO BE USED FOR PERIMETER ENCLOSURE OF SPACE AT GRADE ONLY SHALL NOT BE USED FOR APPLICATIONS THAT REQUIRE SAFETY RAILS OR BARRIERS.
 - POOL CODE REQUIREMENTS: R4501.17.1.5 - WHERE THE BARRIER IS COMPOSED OF HORIZONTAL AND VERTICAL MEMBERS AND THE DISTANCE BETWEEN THE TOPS OF THE HORIZONTAL MEMBERS IS 45 INCHES OR MORE, SPACING BETWEEN VERTICAL MEMBERS SHALL NOT EXCEED 4 INCHES. WHERE THERE ARE DECORATIVE CUTOUTS WITHIN VERTICAL MEMBERS, SPACING WITHIN THE CUTOUTS SHALL NOT EXCEED 1-3/4 INCHES IN WIDTH.
 - NO CHANGES ARE ALLOWED WITHOUT WRITTEN AUTHORIZATION FROM THE ARCHITECT.
 - ALL EXPOSED VISIBLE ENDS SHALL BE PROVIDED WITH CAPS OR COVERS.
 - ALL RAILS SHALL BE NOTCHED TWICE ON EACH SIDE.
 - VERTICAL MEMBERS SHALL REMAIN CONTINUOUS FOR THE FULL HEIGHT OD EACH LEAF OF THE GATE.
 - ALL GATE CORNERS ARE TO BE FULLY WELDED,


- INSTALLATION GENERAL NOTES**
- POST @ GRADE: ANCHORED IN (2,500 psi) CONCRETE
- MATERIALS GENERAL NOTES:**
- PVC: ALL PVC EXTRUSIONS SHALL BE MADE OF PVC RESIN ASTM 1784 UNLESS NOTED OTHERWISE. FLEXURAL STRENGTH = 9,700 PSI.
 - CONCRETE: ALL CONCRETE USED FOR FOOTINGS OR POST GROUT SHALL REACH OF COMPRESSIVE STRENGTH OF 2,500 PSI WITHIN 7 DAYS
 - SOIL: ALL SURROUNDING SOIL USED FOR STRUCTURAL INSTALLATION PURPOSES SHALL BE WELL COMPACTED BY MECHANICAL MEANS TO OPTIMAL DENSITY AND SHALL BE FREE OF DELETERIOUS OR ORGANIC MATERIALS.
 - FASTENERS & ACCESSORIES:
 - ALL FASTENERS SHALL BE A300 NON-MAGNETIC ALLOY, STAINLESS STEEL, OR OTHER CORROSION RESISTANT MATERIAL UNLESS SPECIFIED OTHERWISE.
 - ANY HINGE OR LATCH SHALL BE OF STRUCTURAL QUALITY MOLDED POLYMERS OR ZINC COATED METAL AND SHALL BE INSTALLED IN ACCORDANCE WITH MANUFACTURERS RECOMMENDATIONS.
 - DROP ROD MAY BE PIPE STYLE OR PRE-MANUFACTURED STYLE.

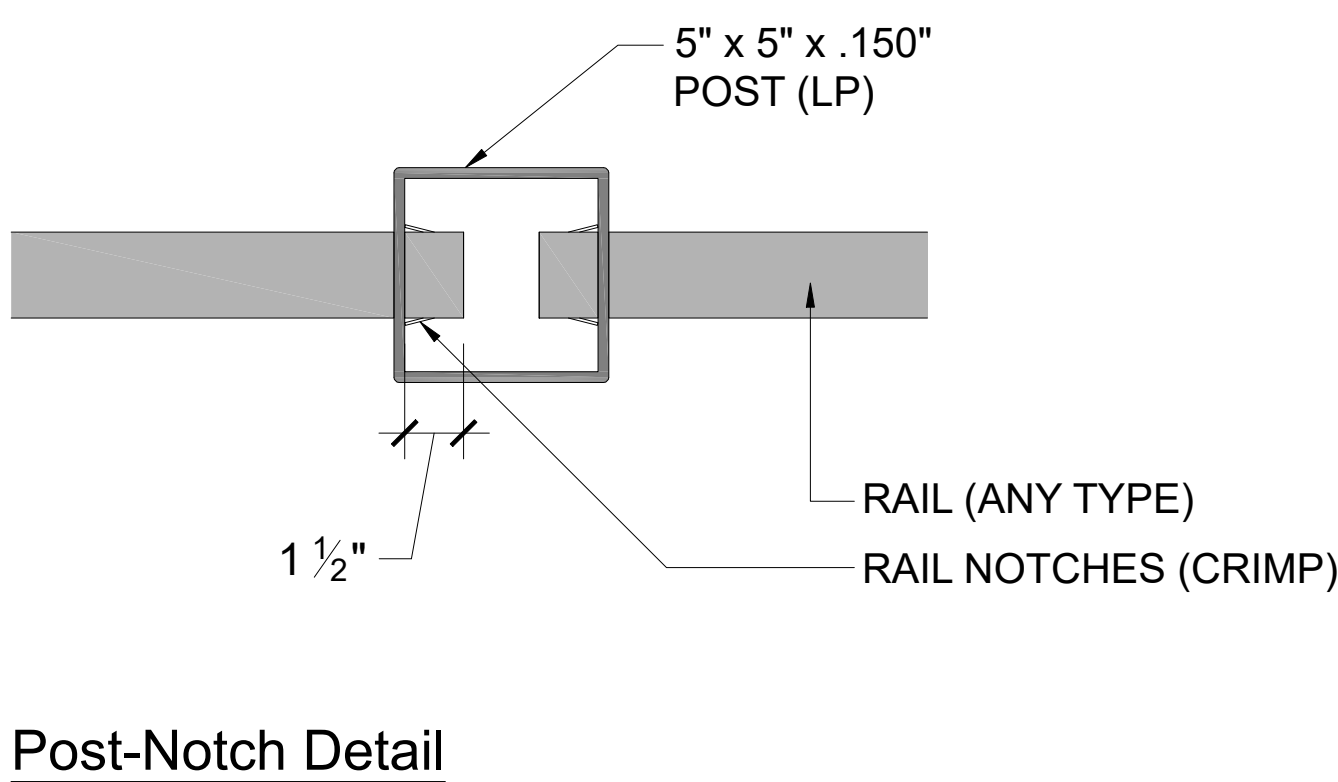

1 Component Schedule and General Notes
Not to Scale


ID	DESCRIPTION	SIZE	REMARKS
CF1	CONCRETE FOOTING	10"Ø x 24"	LINE POST: FOOTING (3,000 PSI MINIMUM)
CF2	CONCRETE FOOTING	12"Ø x 30"	HINGE POST: FOOTING (3,000 PSI MINIMUM)
CF3	CONCRETE FOOTING	12"Ø x 12"	DROP ROD: FOOTING (3,000 PSI MINIMUM) WITH 3/4"Ø GALV. PIPE
DR	DROP ROD	3/8"Ø x 24"	STANDARD DROP BOLT (LOCKABLE)
GF	GATE FRAME	2" x 2" x 0.125"	ALL CORNERS FULLY WELDED
GP	GATE POST	4" x 4" x 90"	0.25" GA.
HI	HINGE	N/A	STANDARD 4" SELF-CLOSING HINGES
HR	HORIZONTAL RAIL	1.6" x 2.6" x 0.06"	PICKETS MAY BE THRU OR STOP@ RAIL
LA	LATCH	N/A	STANDARD SELF-LOCKING LATCH
LP	LINE POST	2.5"x 2.5" x 90"	0.188" GA.
PI	PICKET	1" x 1" x 0.044"	-
TR	TOP RAIL	1.6" x 2.6" x 0.06"	-
WC	WALL CLIP	1-3/8" x 1-1/4"	-

POOL CODE COMPLIANT !! Can be used around pools but must adhere to the
HEIGHT & GAP SPACING Required by the POOL CODE REQUIREMENTS!

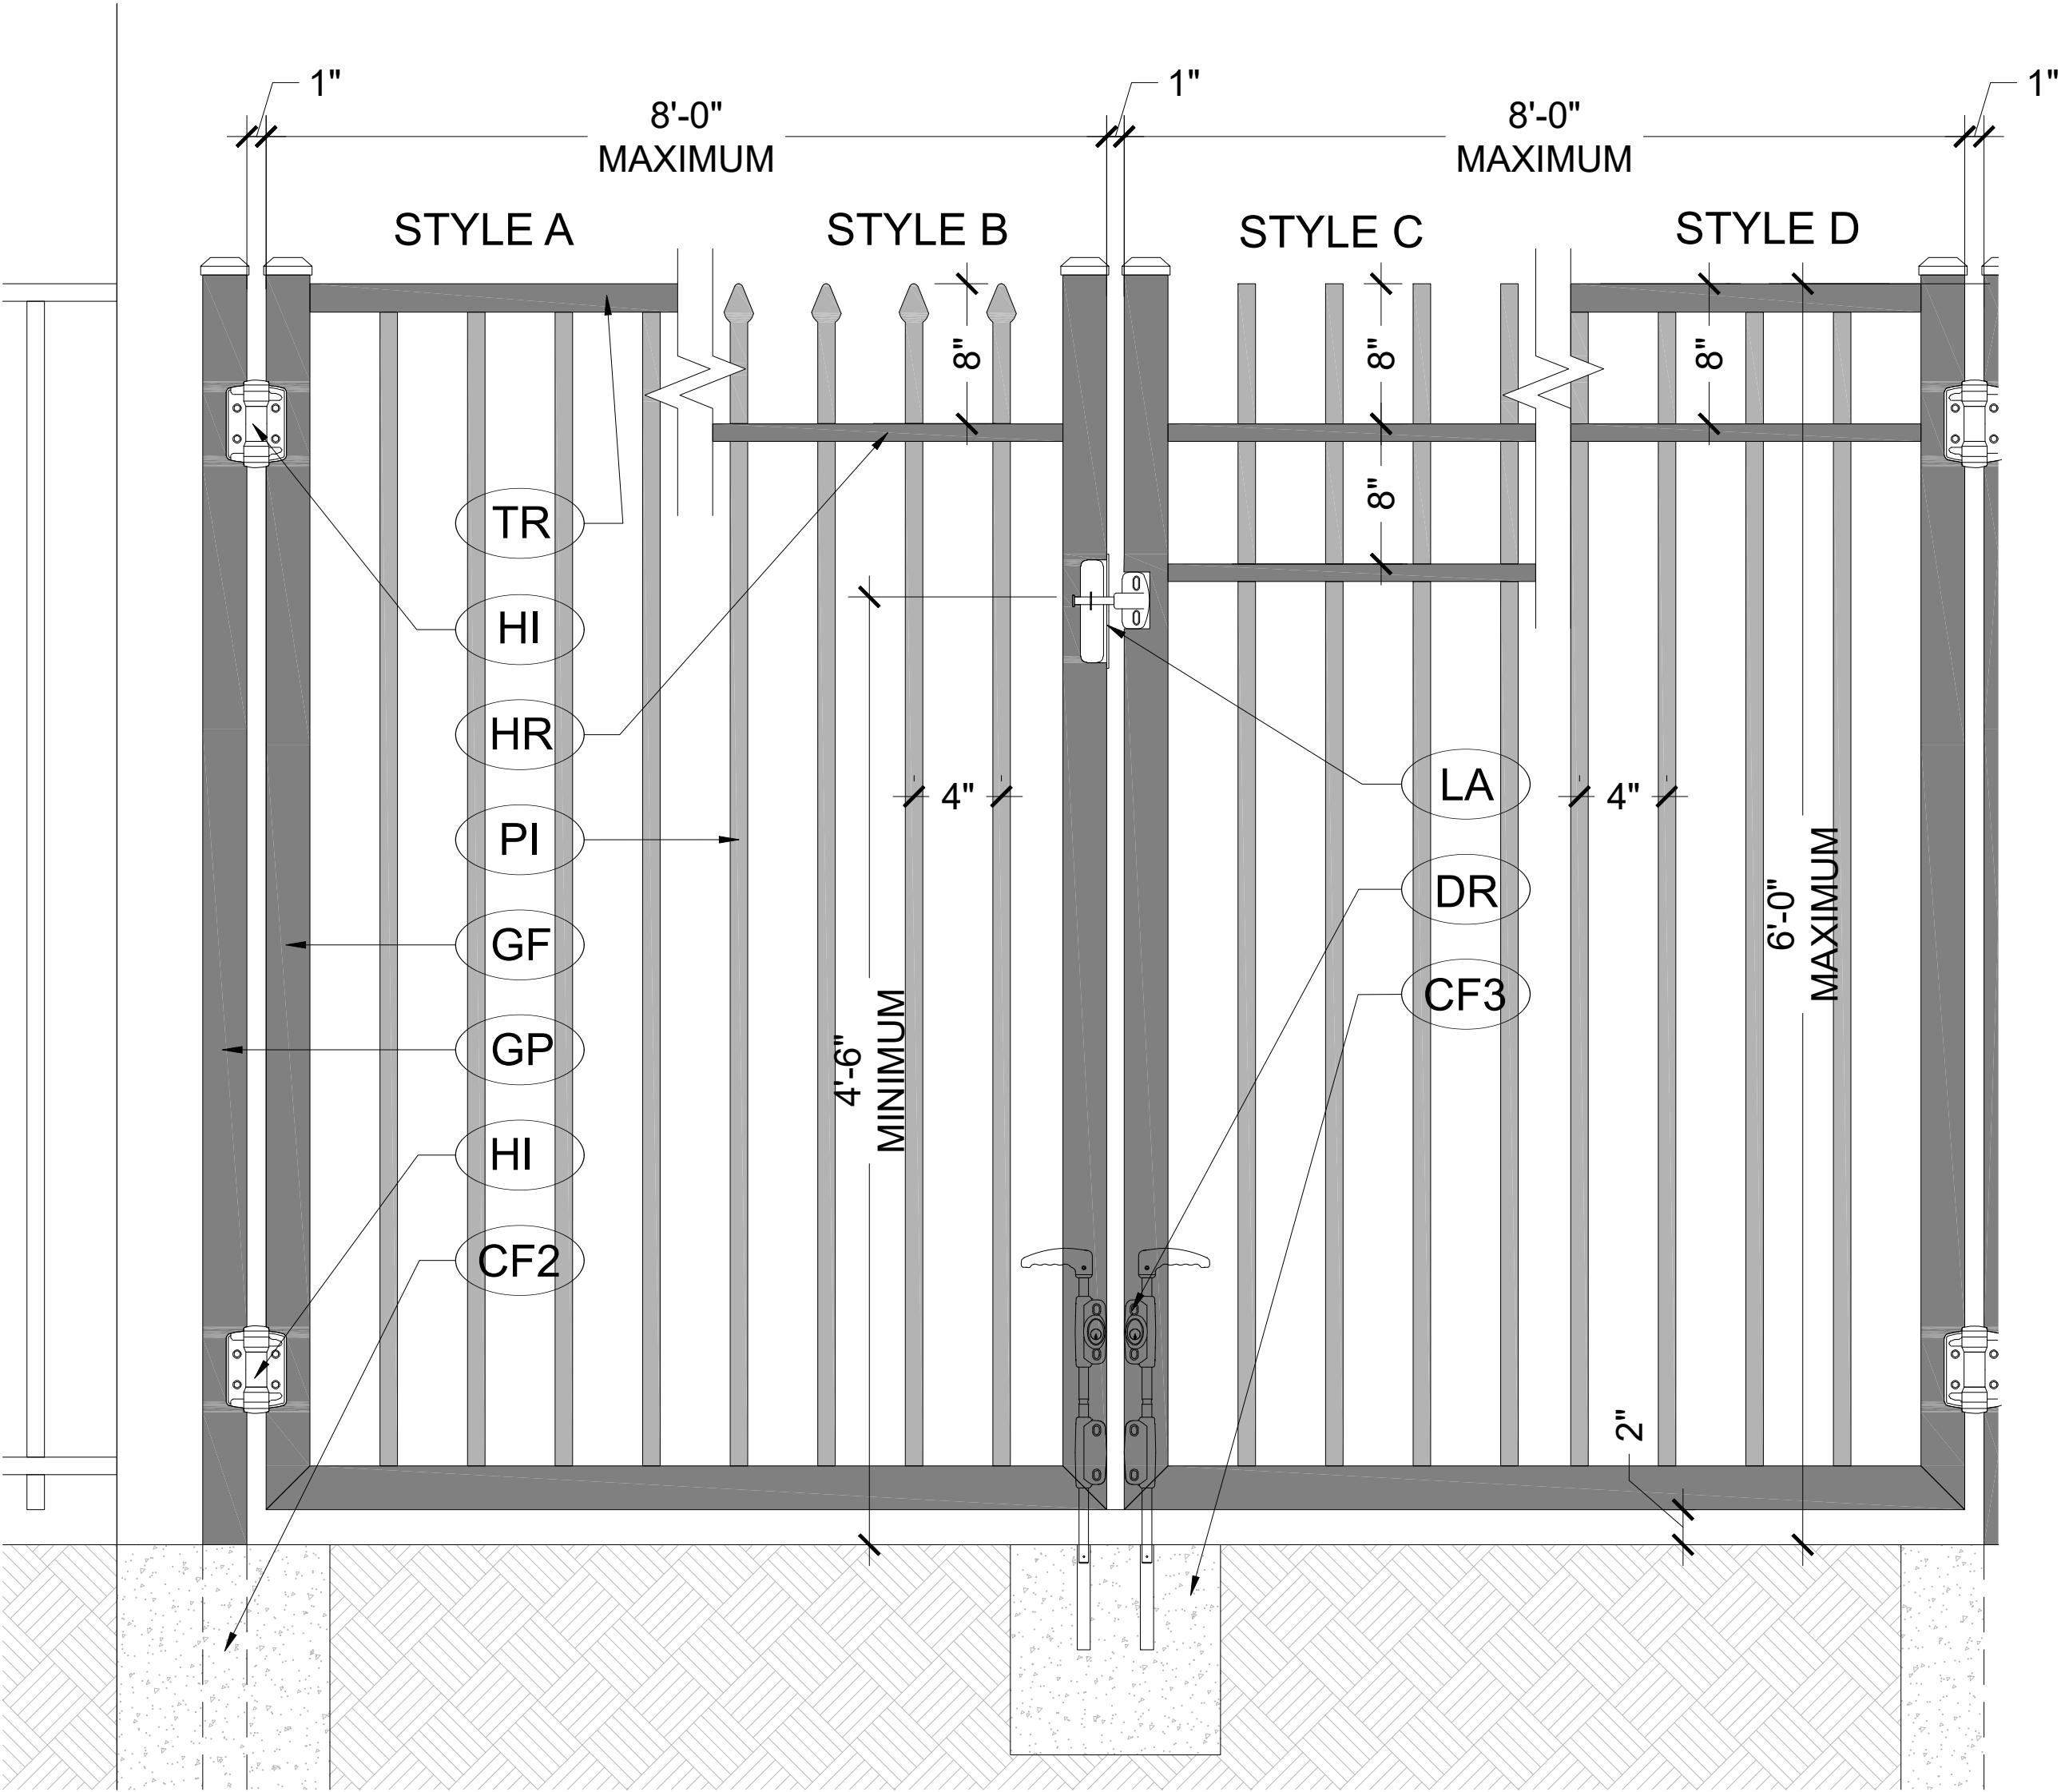


3 DOUBLE SWING GATE DETAILS

SCALE: 1/2"=1'-0"

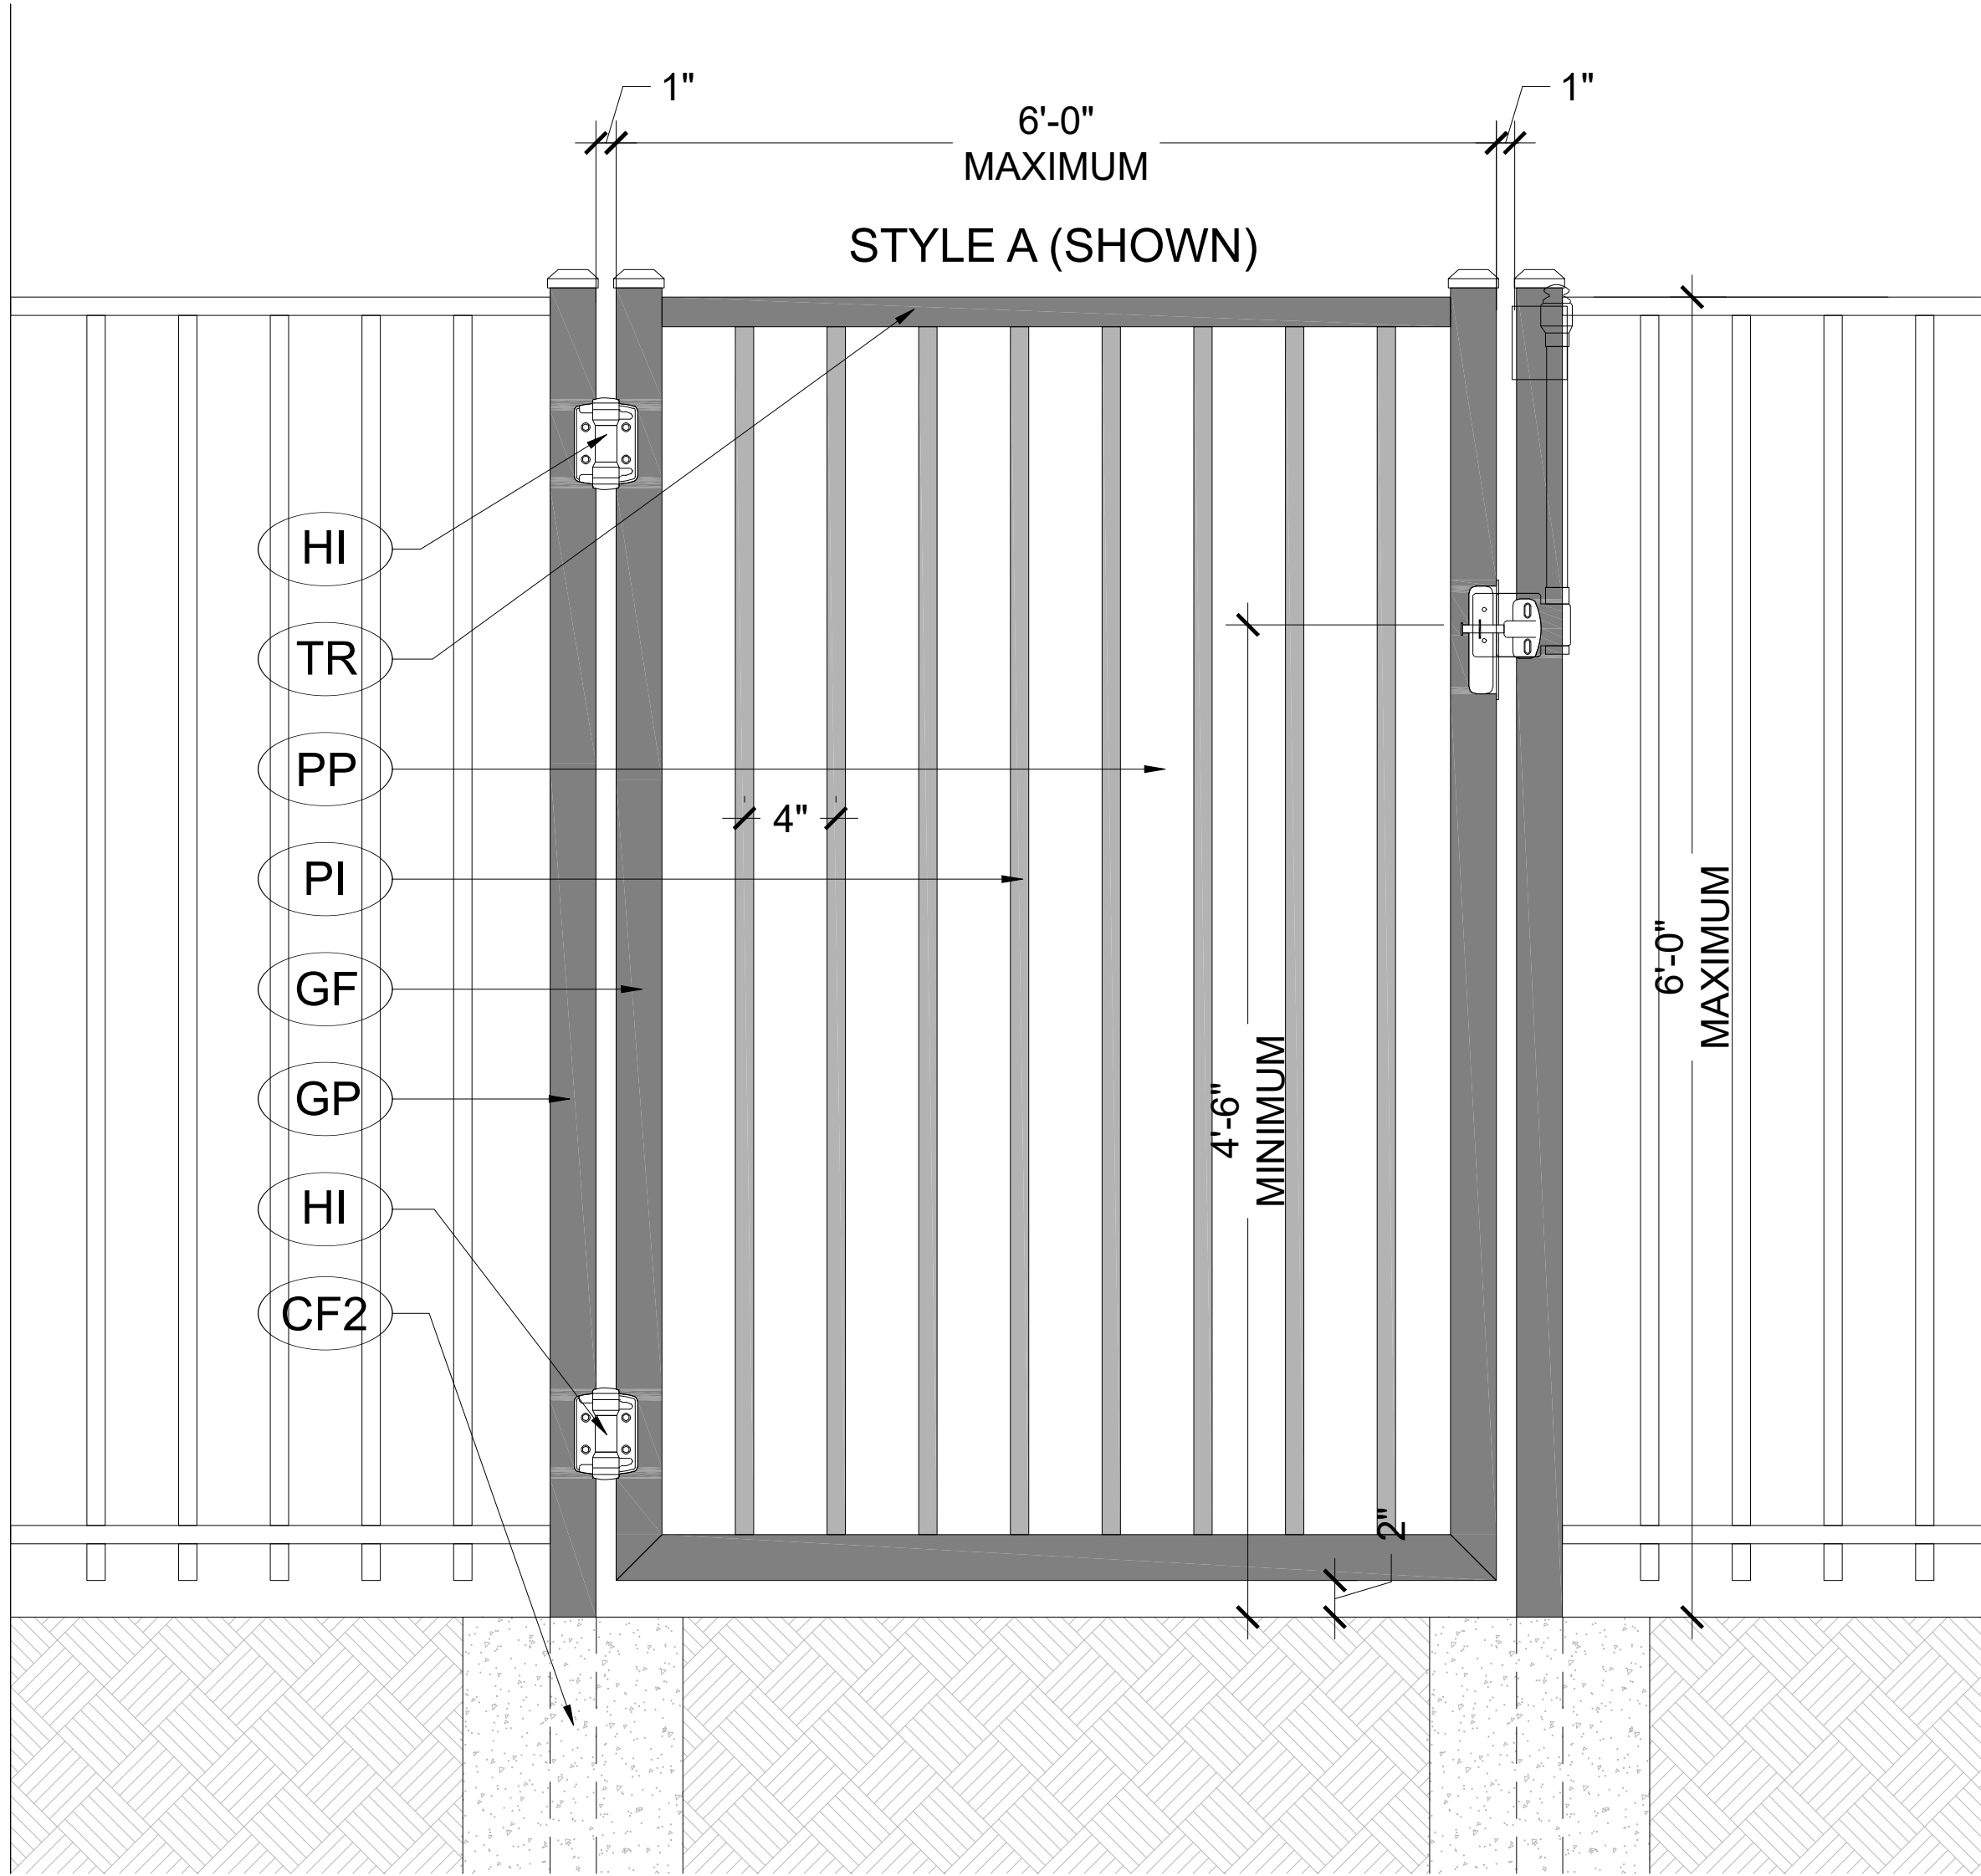





2 SINGLE SWING GATE DETAILS

SCALE: 1/2"=1'-0"

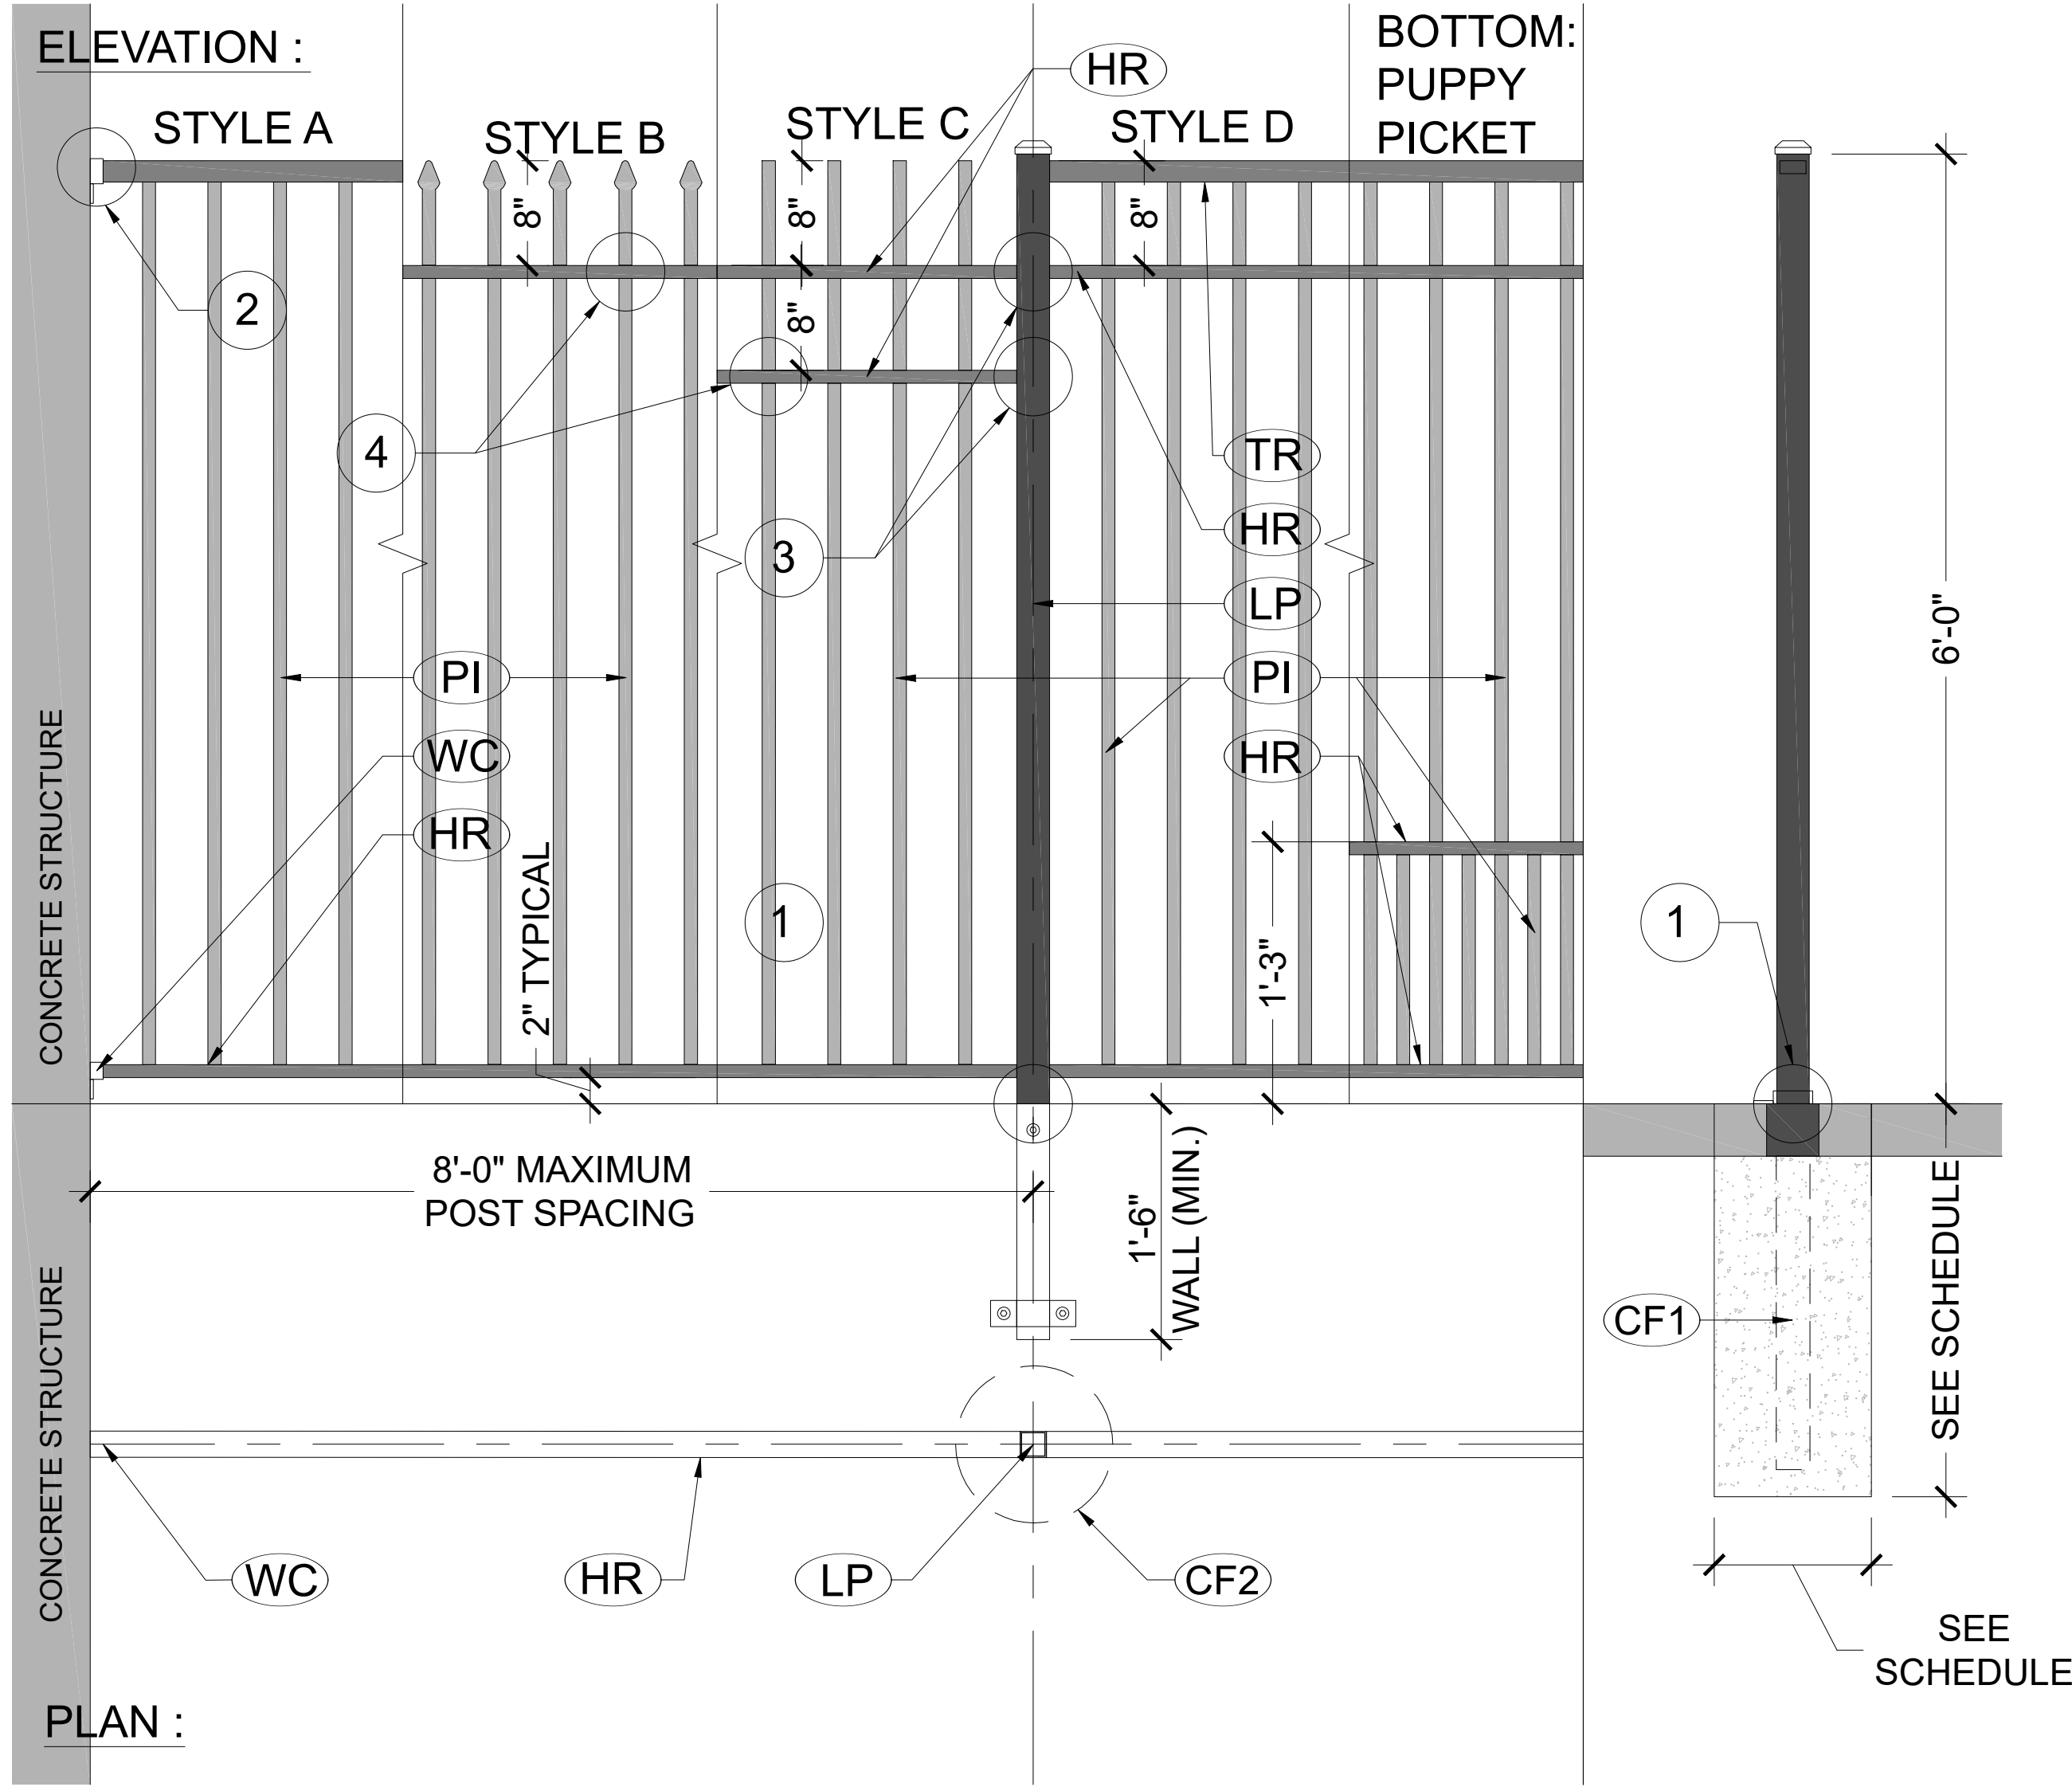

1 FENCING DETAILS

SCALE: 3/8"=1'-0"

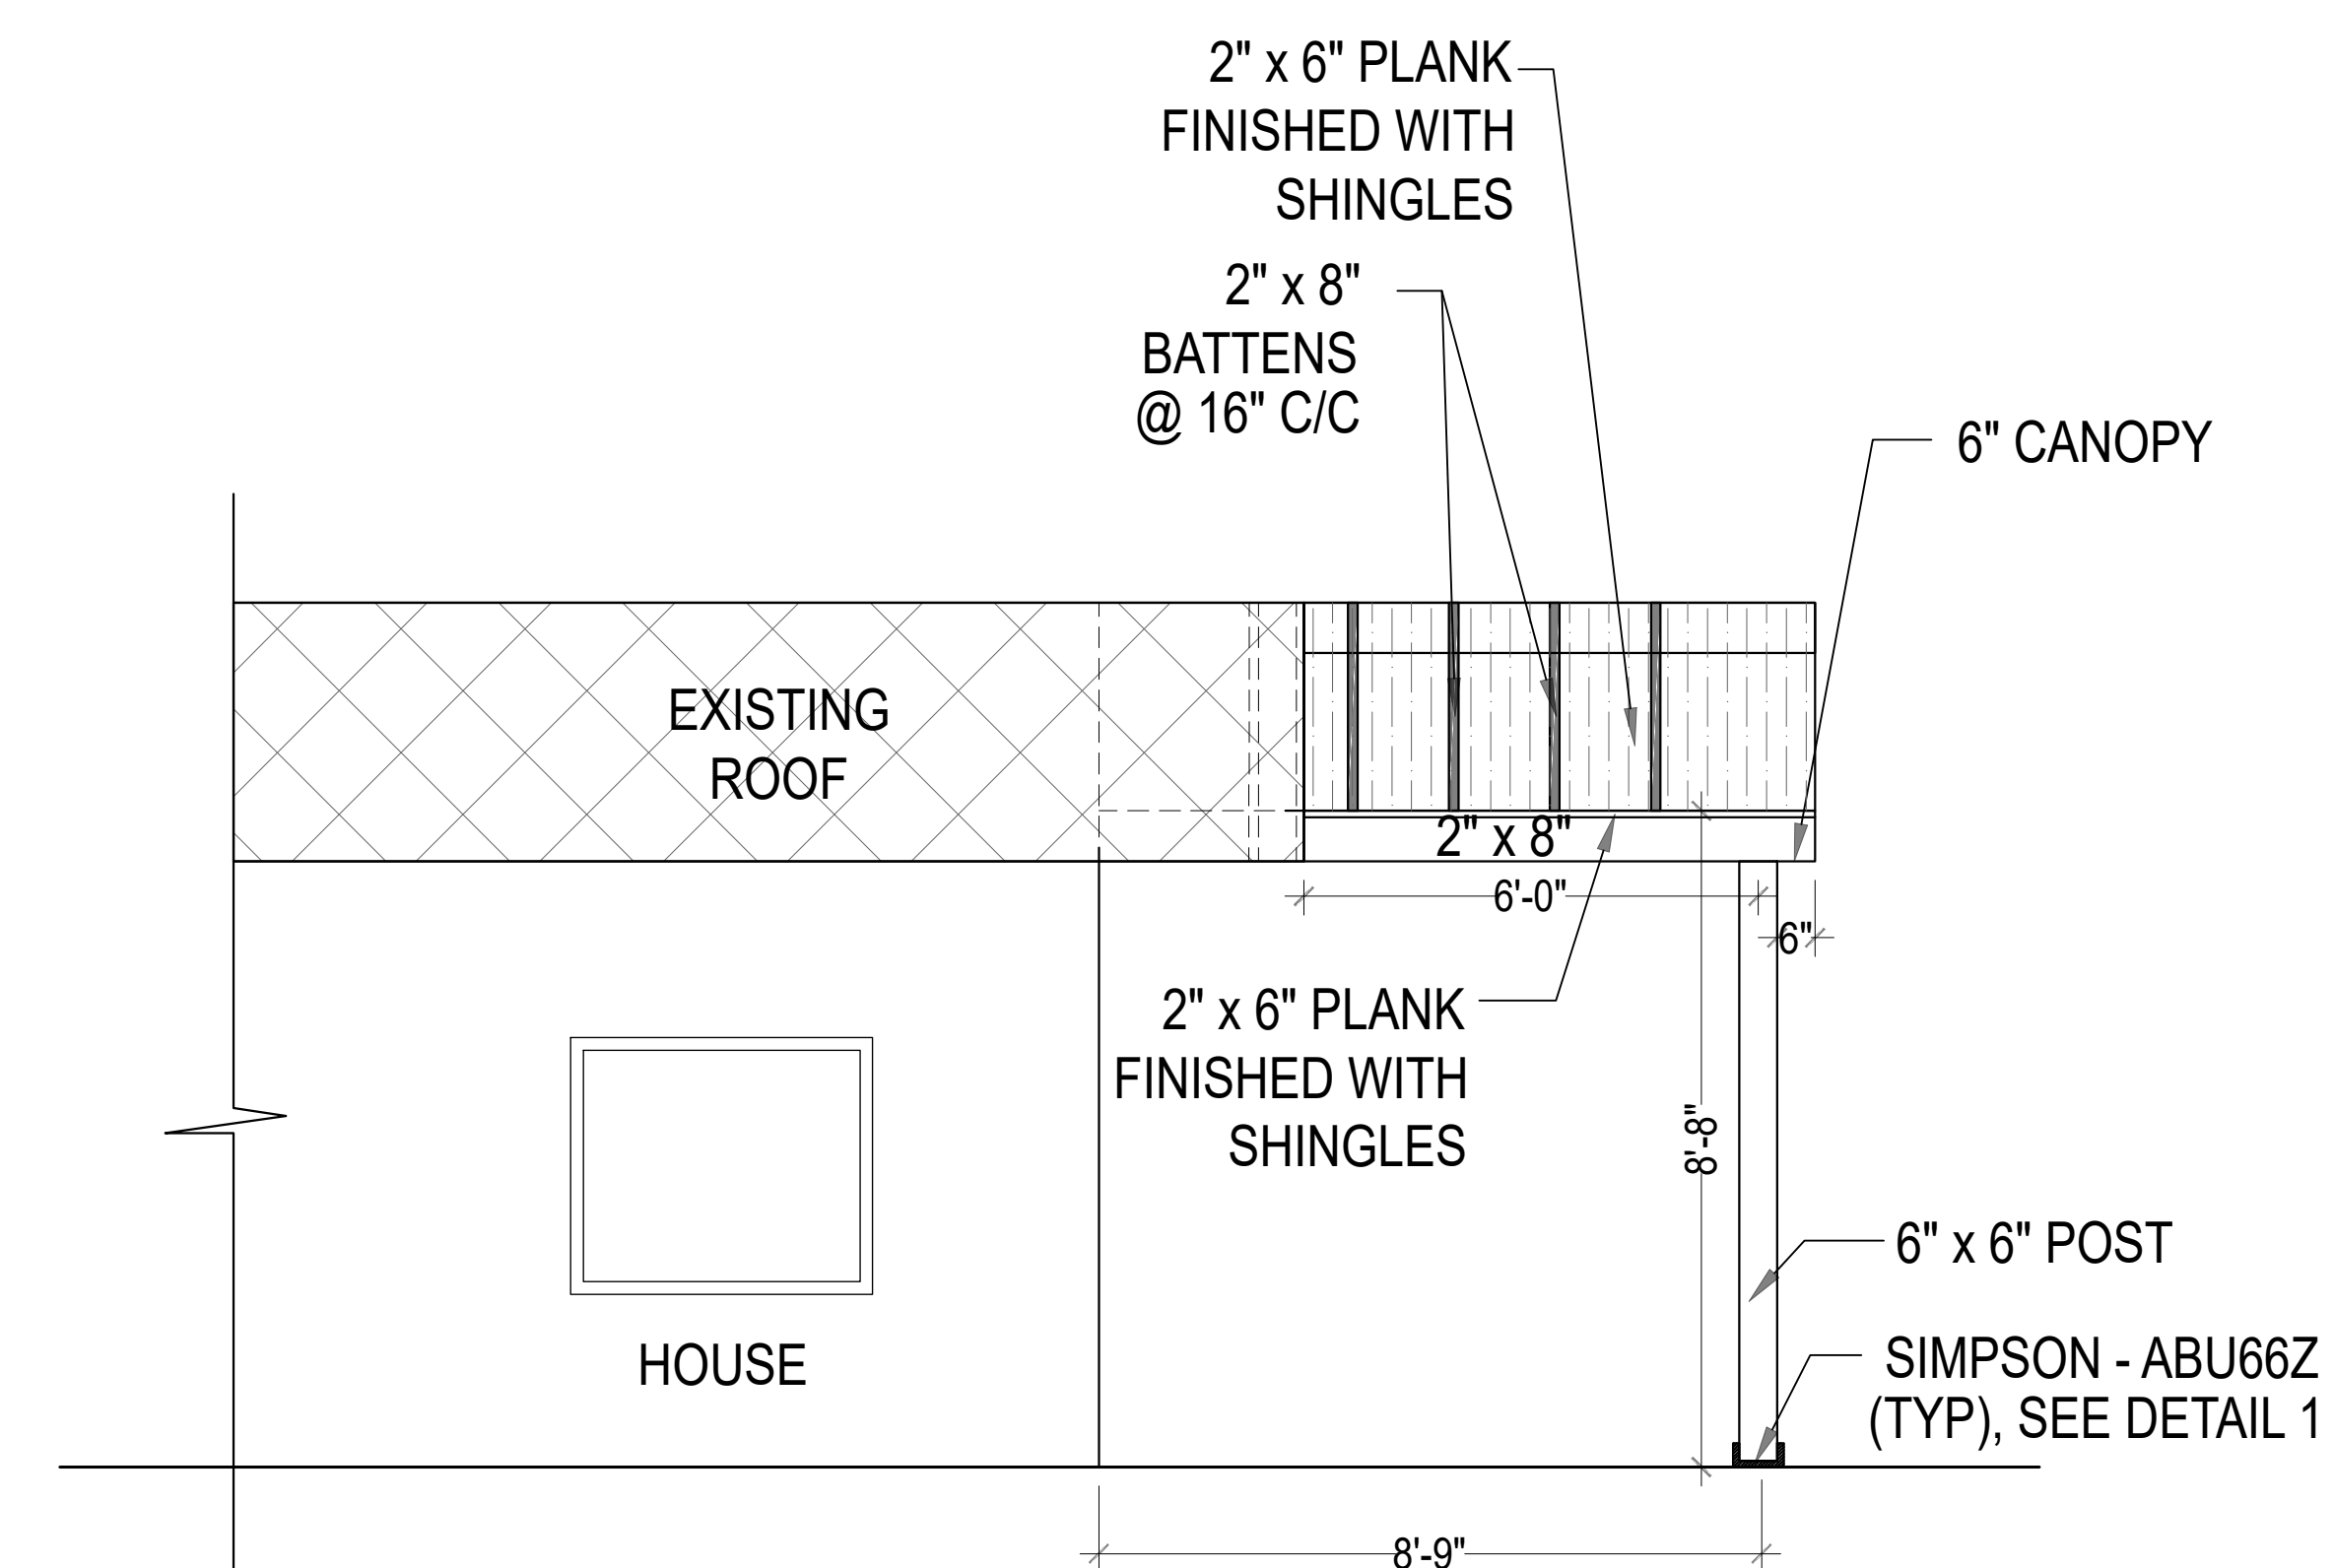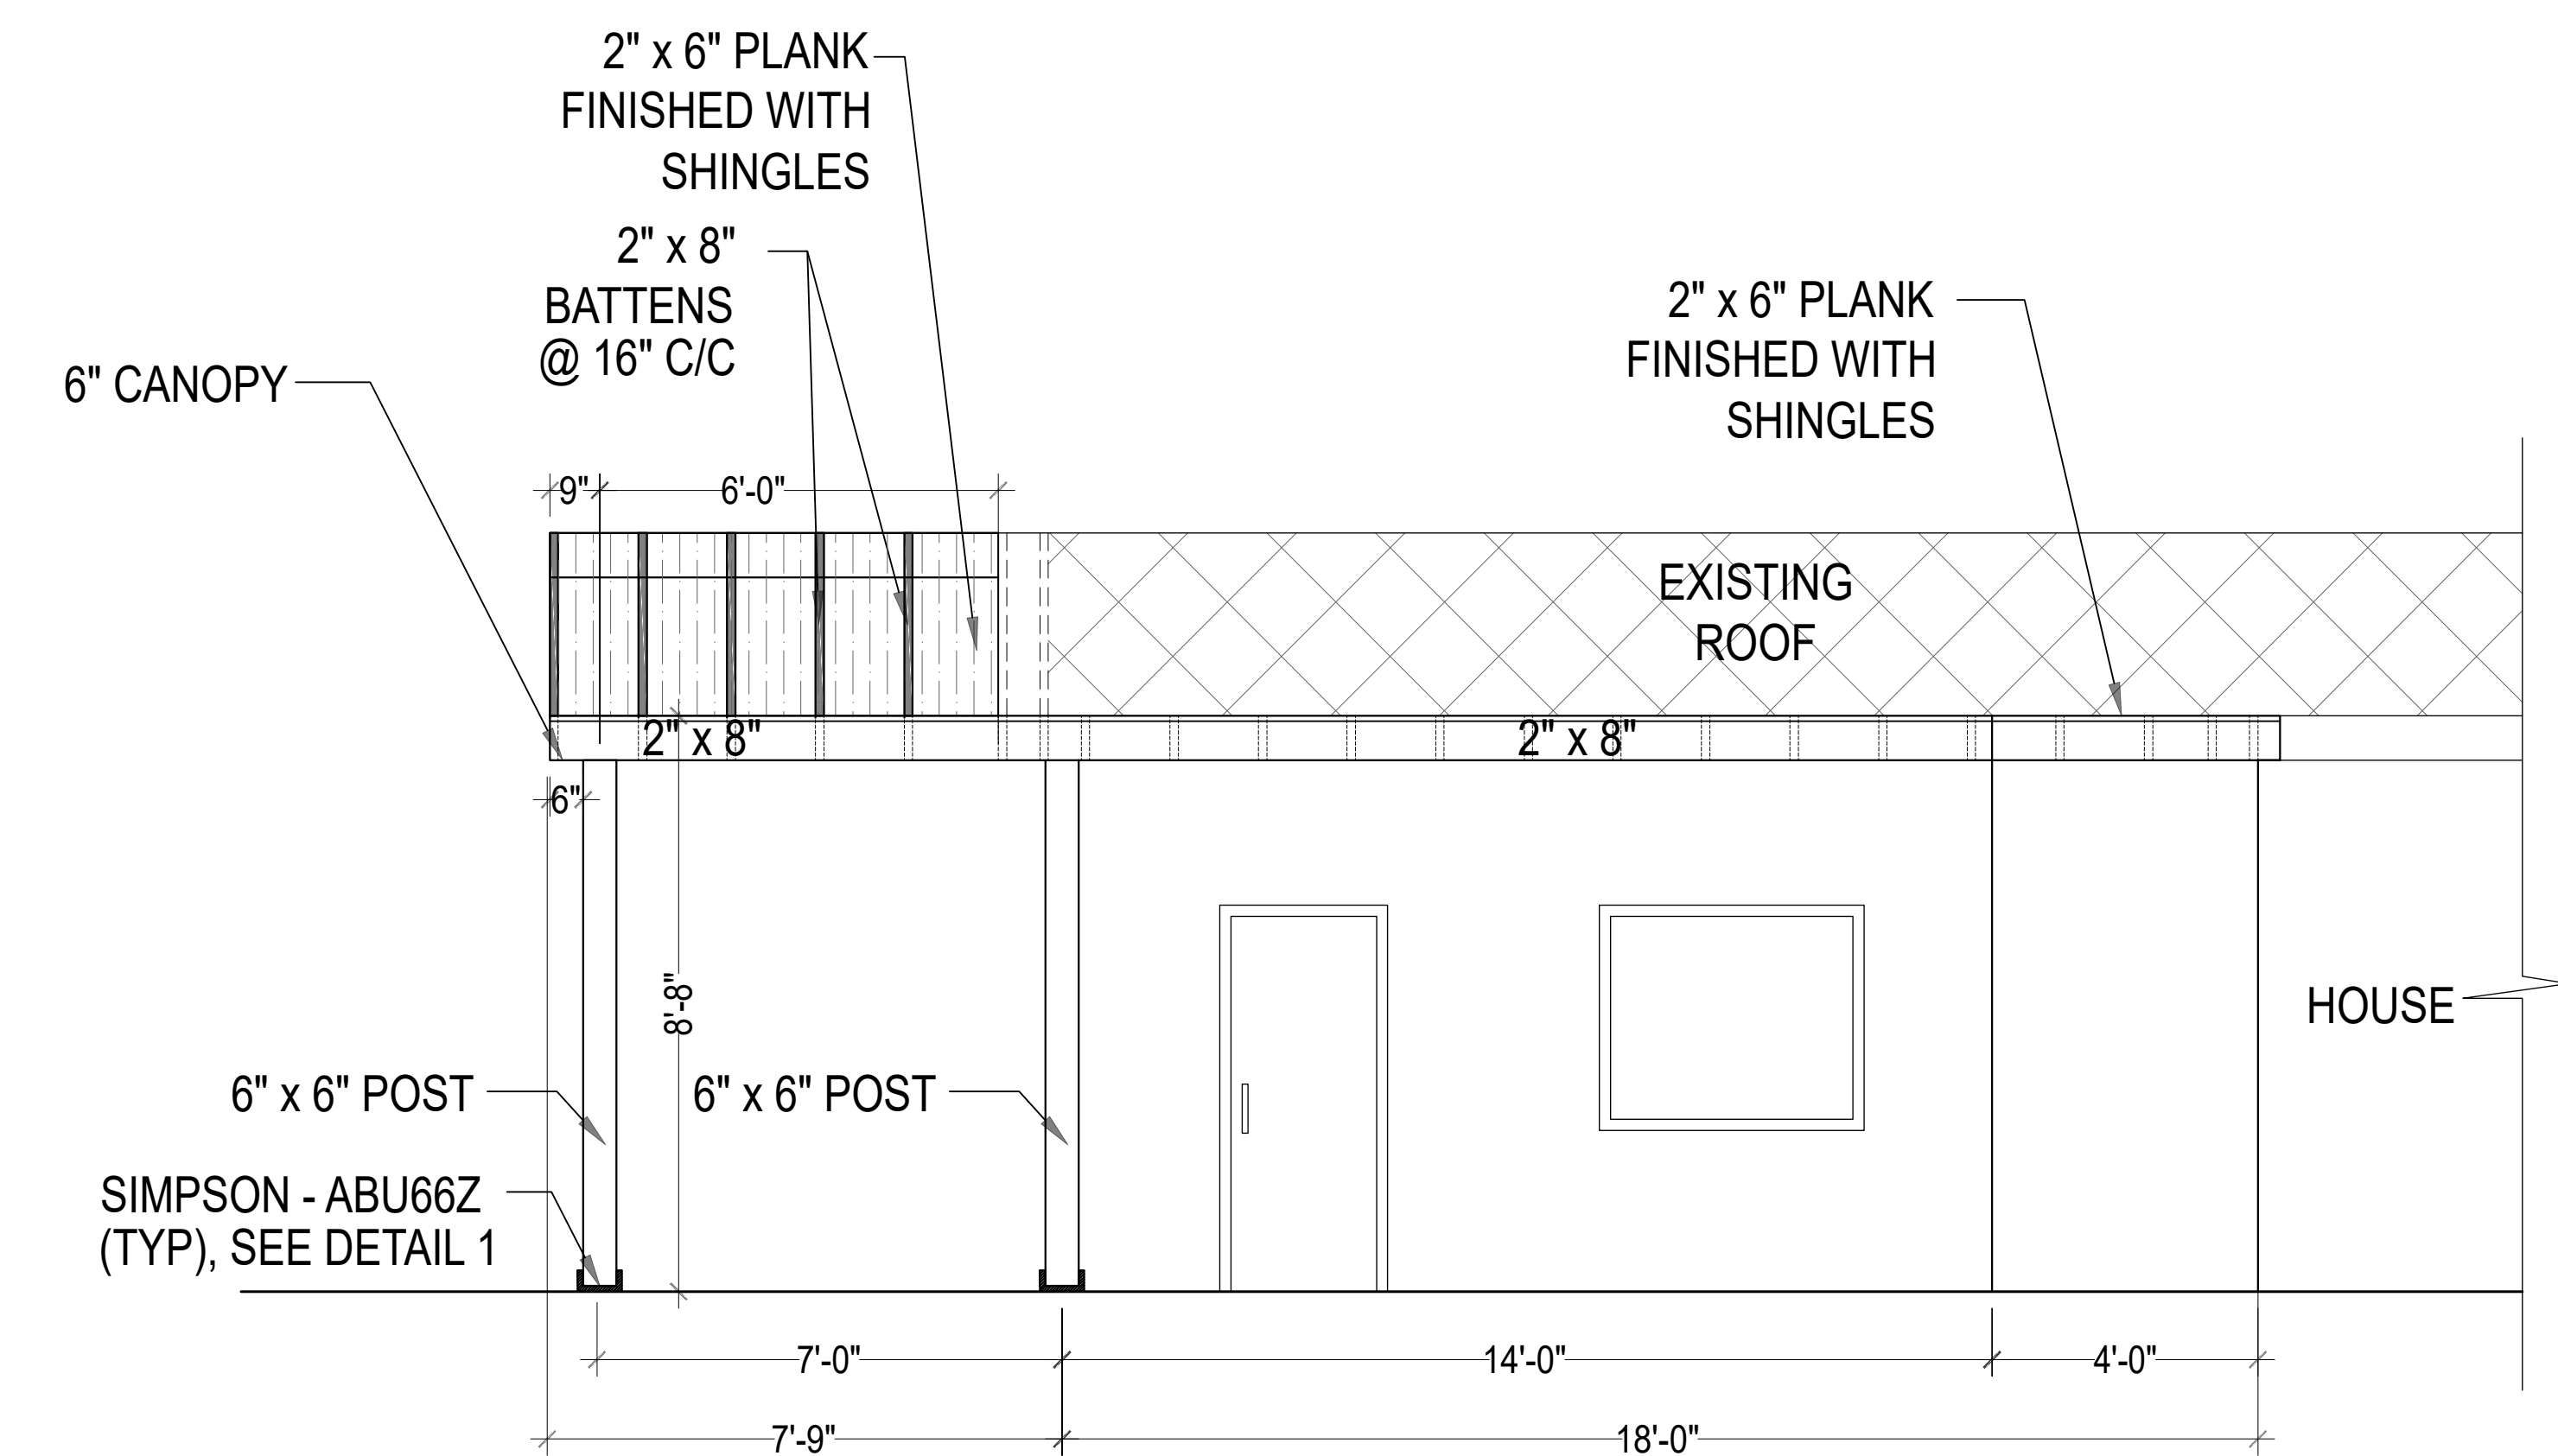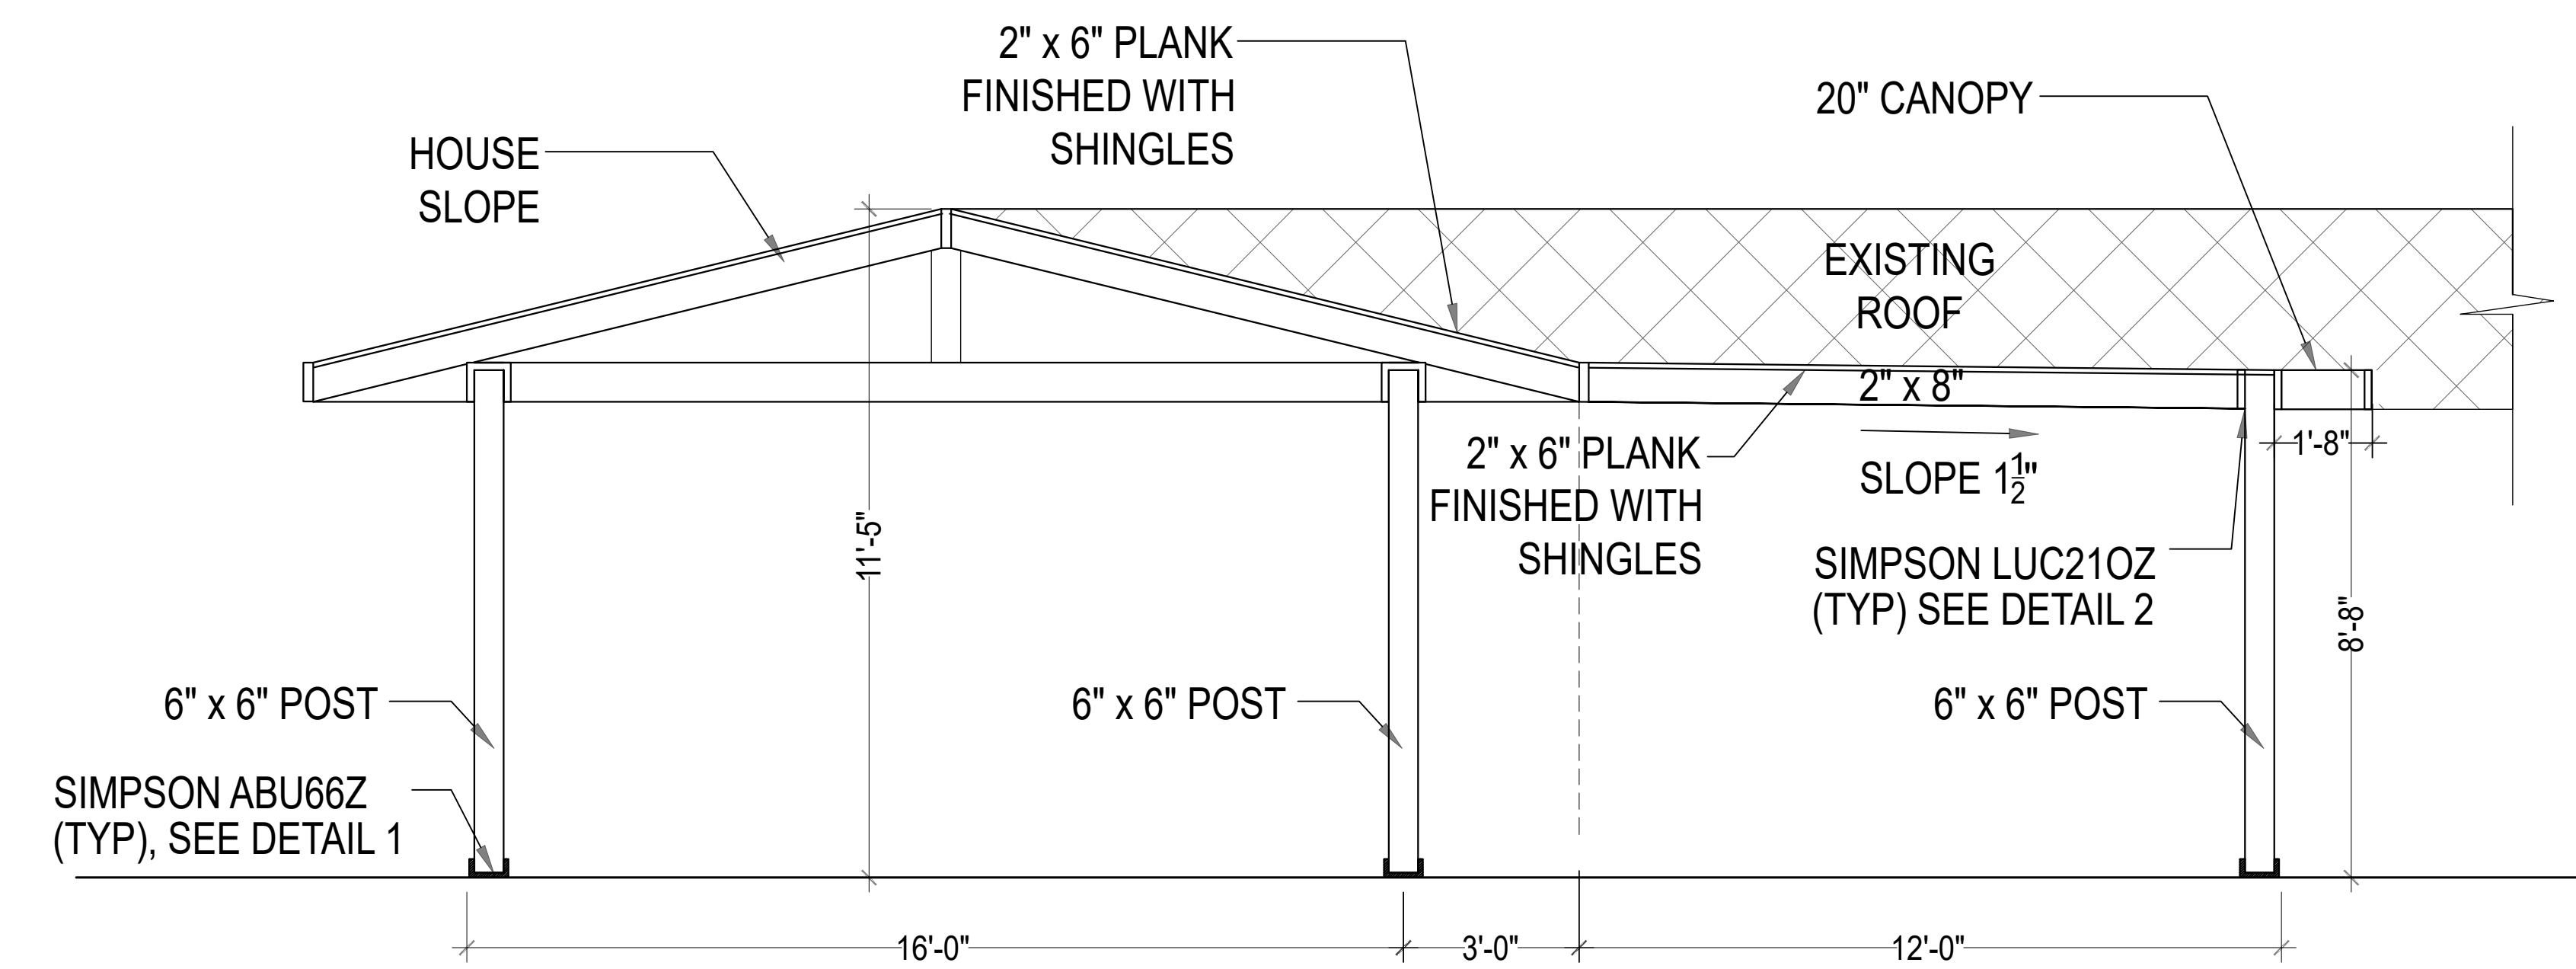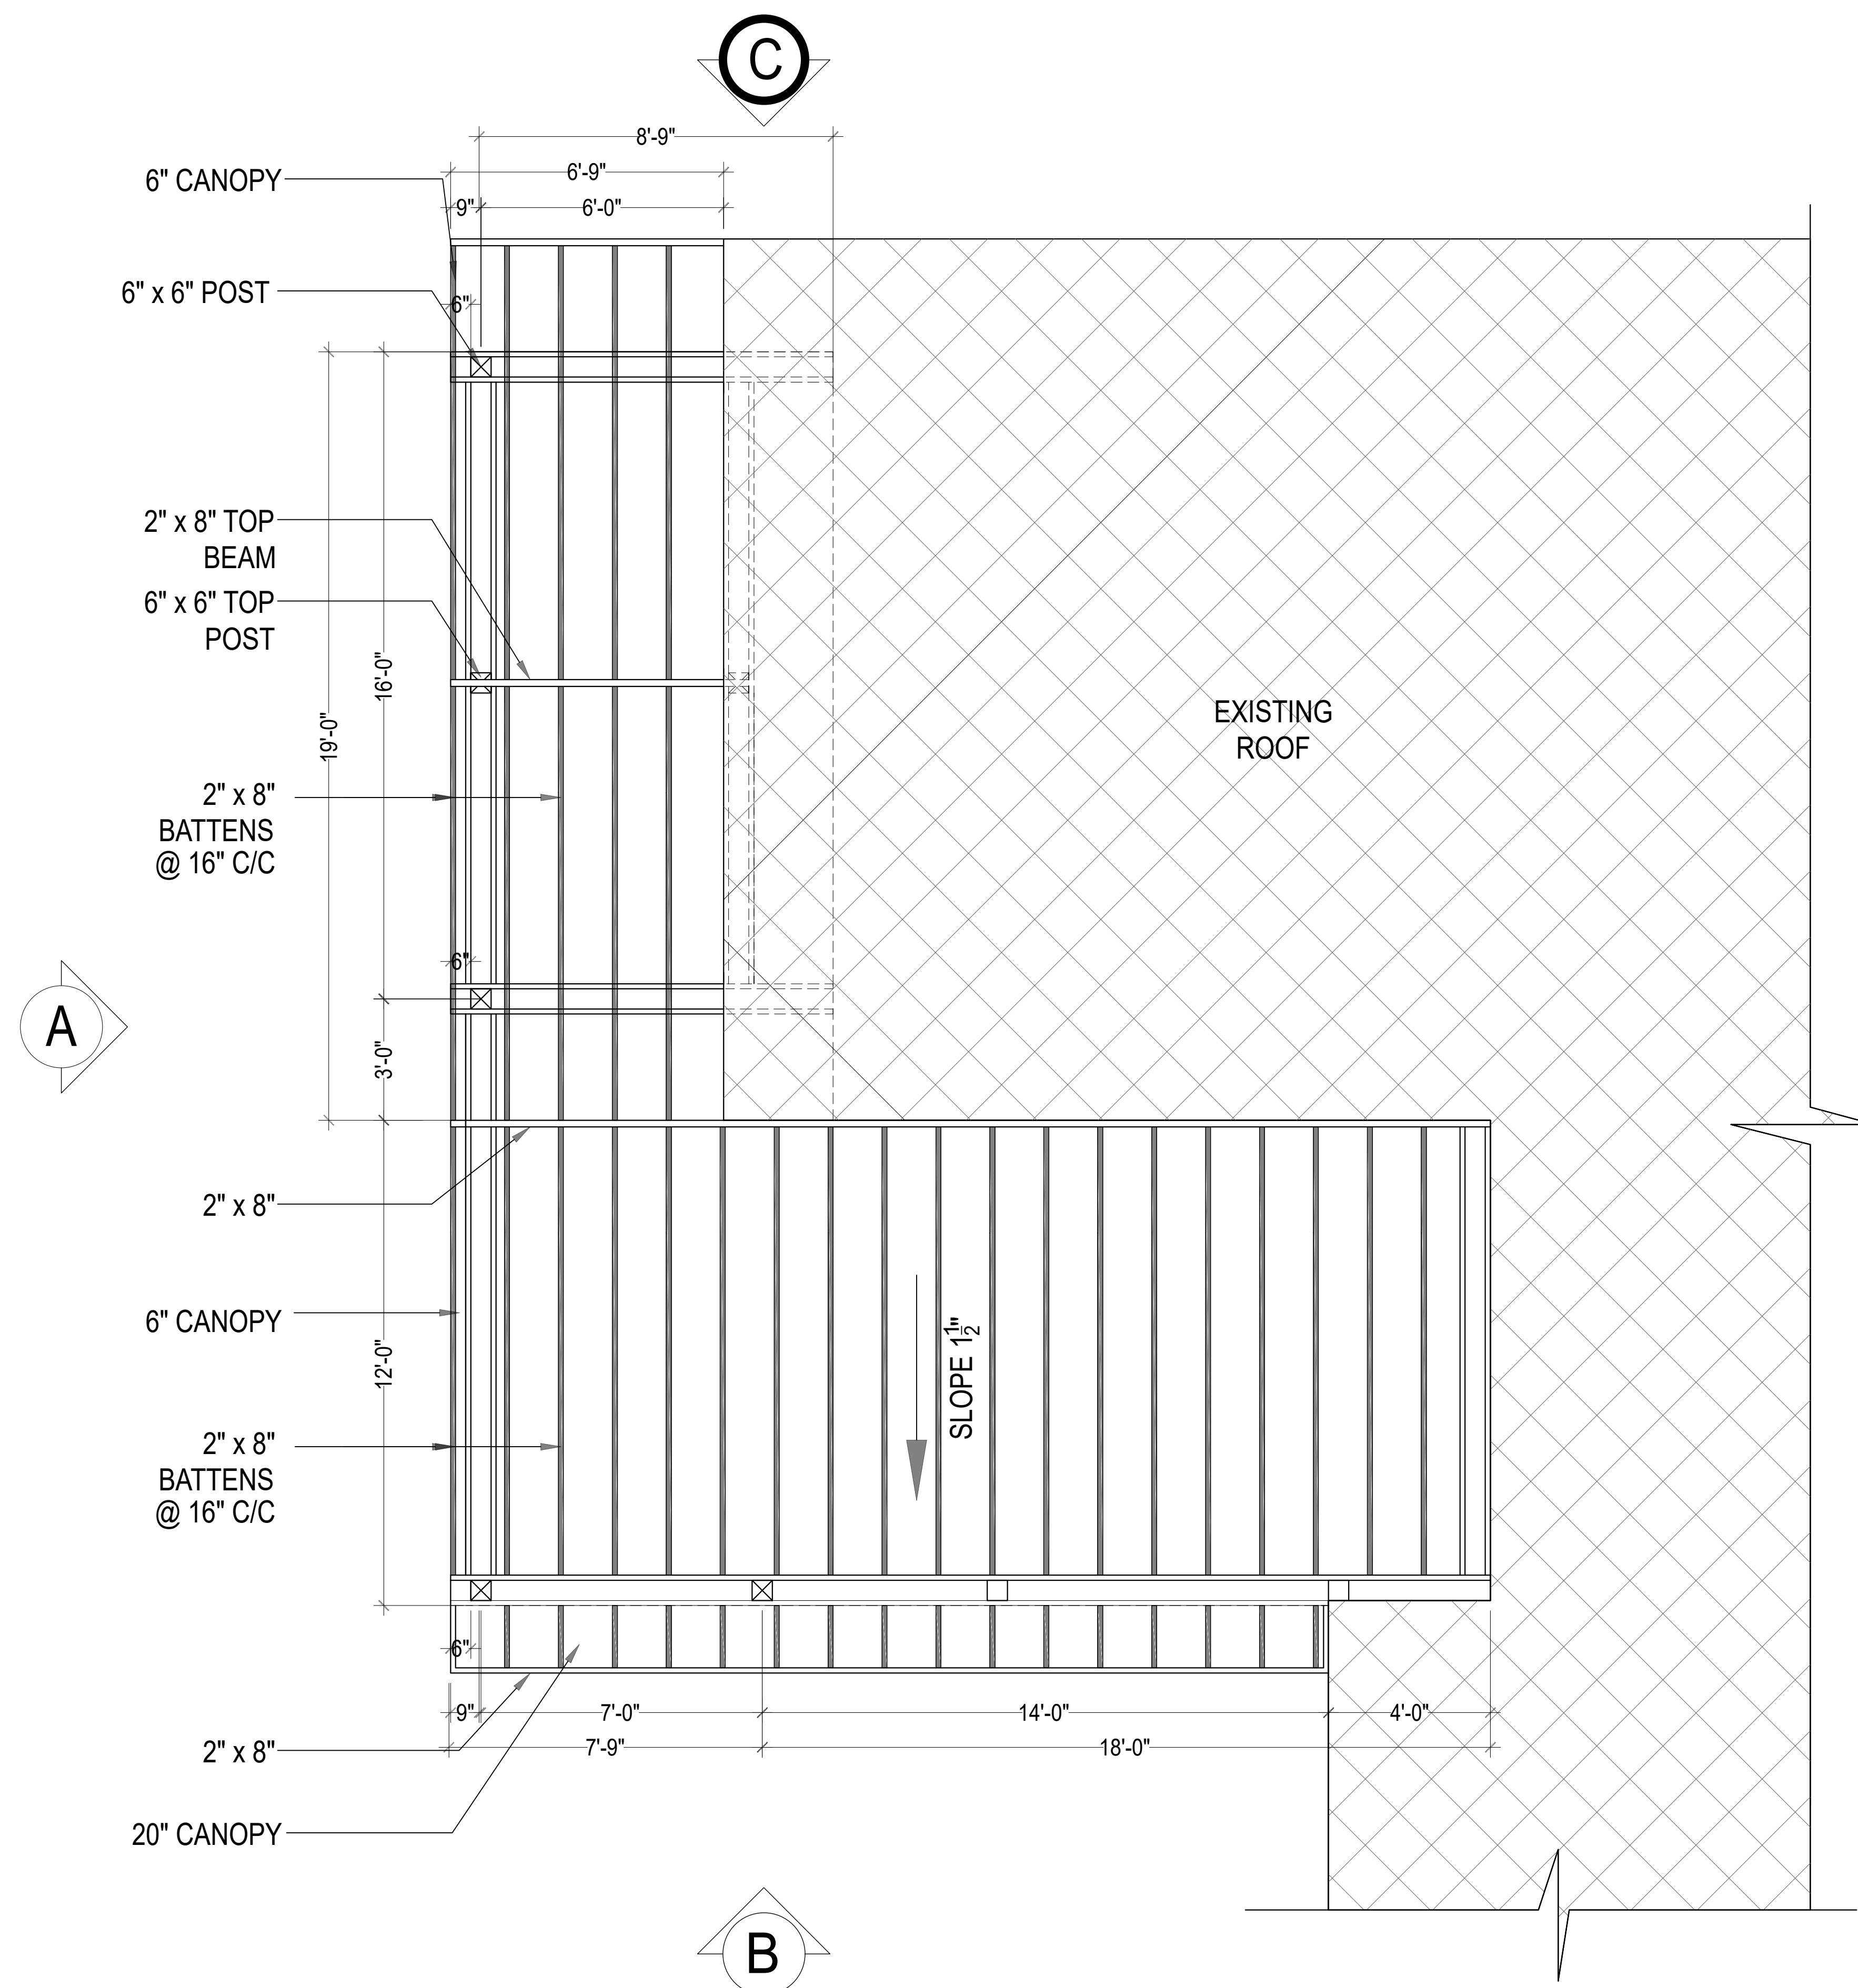[illegible]

Client:
Drawn by:
Designed by:
Checked by:
SHEET
SCALE
AS NOTED